2021

Police Interceptor Utility

Police Interceptor Utility Hybrid

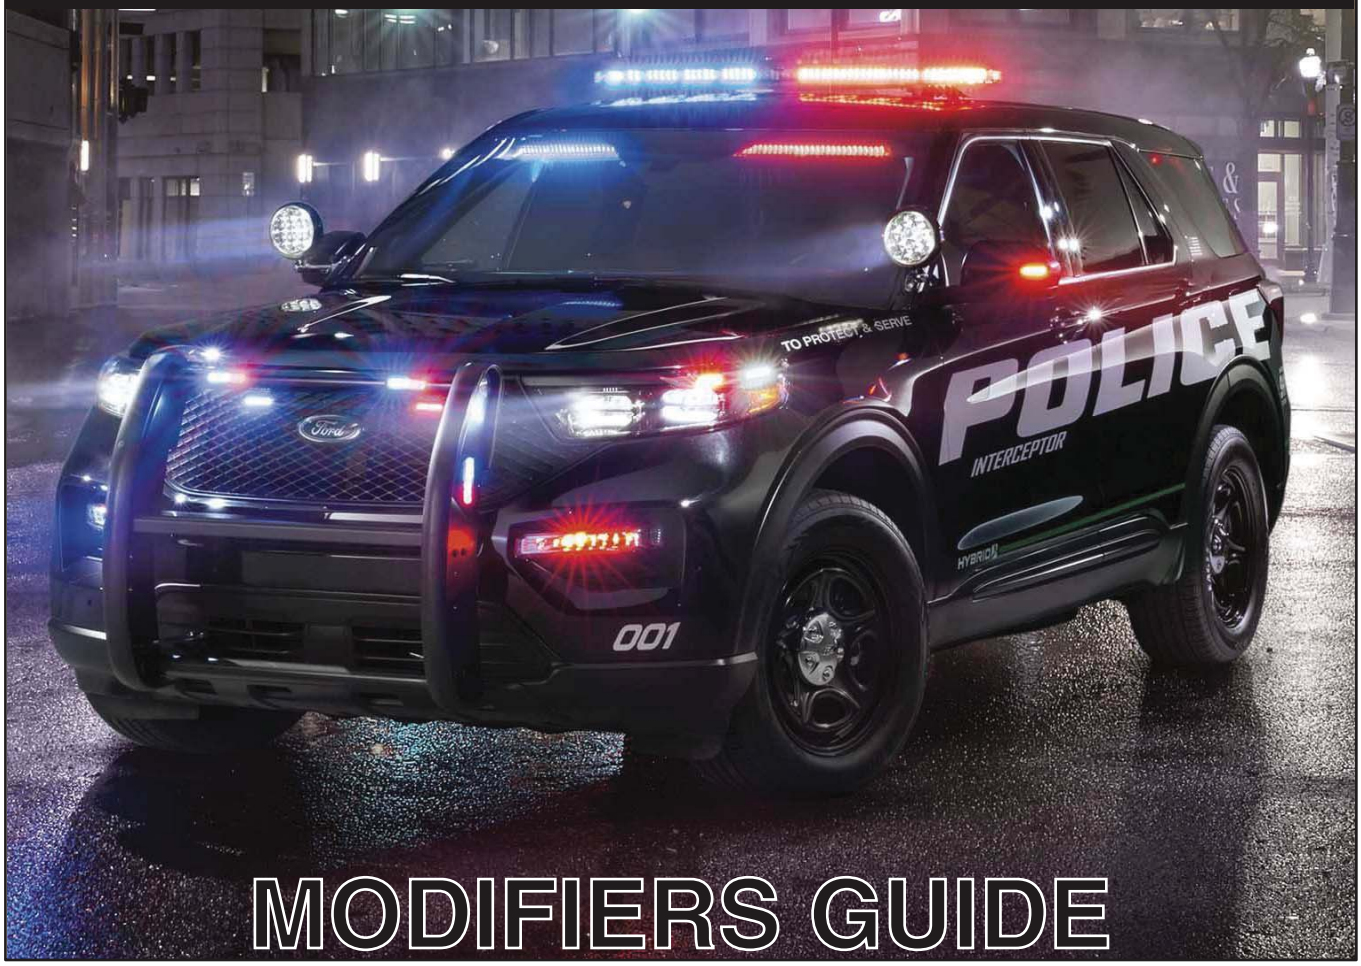

MODIFIERS GUIDE

© Copyright Ford 2023 FoMoCo

Table of Contents

Contents **PAGE**

Introduction 0-2
Genuine Ford Accessories For Your Vehicle 0-2

 © Copyright Ford 2023 FoMoCo

Introduction

Introduction

Ford Motor Company has assembled this guide to assist vehicle modifiers in producing a safe and quality vehicle. Ford believes safety and quality come first. To achieve customer satisfaction, we want to assist modifiers in achieving the highest standards of safety and quality in their vehicles.

This book is divided into topics pertinent to vehicle modifiers. References are made to the Workshop Manual for appropriate service procedures, torque specifications, component separation clearances and other standard information which is common with an unmodified vehicle. Specifications unique to this guide are designated.

This modifier guide is not a "how-to" book; it should be used as a checklist to help make sure that certain important steps in the modification process are considered. It is ultimately the responsibility of the upfitter with knowledge of the entire upfit to ensure the checklist is complete. While Ford is providing this information to assist modifiers, it does not warrant the vehicles, methods, materials or the workmanship of the modifier. Ford also does not warrant against failures that result from the modification of a vehicle.

Following the guidelines contained in this guide does not assure individual modifiers that the products they modify comply with US Federal or Canadian Motor Vehicle Safety Standards in effect at the time of the modification. The guidelines set forth are based on engineering analysis of typical vehicles. If the guidelines are followed, the modifier's efforts in certifying vehicles to applicable standards should be aided. Compliance testing that may be required for certification of specific vehicle configurations or construction is the sole responsibility of the individual modifier.

The only model suitable for use in police service is the pursuit-rated Police Interceptor.

DuPont™ and KEVLAR® are trademarks or registered trademarks of DuPont™ or its affiliates.

Genuine Ford Accessories For Your Vehicle

A wide selection of genuine Ford accessories are available for your vehicle through your local authorized Ford or Ford of Canada dealer. These quality accessories have been specifically engineered to fulfill your automotive needs; they are custom designed to complement the style and aerodynamic appearance of your vehicle. In addition, each accessory is made from high-quality materials that meet or exceed Ford's rigorous engineering and safety specifications. Ford Motor Company will repair or replace any properly installed genuine Ford accessory found to be defective in factory-supplied materials or workmanship during the warranty period, as well as any component damaged by the defective accessory. The accessory will be warranted for whichever provides you the greatest benefit:

- 12 months or 20,000 km (12,000 mi), whichever occurs first; or
- the remainder of your new vehicle limited warranty.

This means that genuine Ford accessories purchased along with your new vehicle and installed by the dealer are covered for the full length of your new vehicle's limited warranty — 3 years or 60,000 km (36,000 mi), whichever occurs first. Contact your dealer for details and a copy of the warranty.

Considerations When Using or Installing Accessories

For maximum vehicle performance, keep the following information in mind when adding accessories or equipment to your vehicle:

- When adding accessories, equipment, passengers and/or luggage to your vehicle, do not exceed the gross vehicle weight rating (GVWR) or gross axle weight rating (GAWR) as indicated on the Safety Compliance Certification Label. Consult your dealer for specific weight information.
- The Federal Communications Commission (FCC) and Canadian Radio Telecommunications Commission (CRTC) regulates the use of mobile communication systems, such as 2-way radios, telephones and theft alarms that are equipped with radio transmitters. Any such equipment installed in your vehicle should comply with FCC or CRTC regulations and should only be installed by a qualified service technician.
- Mobile communication systems may harm the operation of your vehicle, particularly if they are not properly designed for automotive use.
- To avoid interference with other vehicle functions, such as the anti-lock brake system (ABS), amateur radio users who install radios and antennas onto their vehicle should not locate the antenna in the area of the driver's side hood.
- Electrical or electronic accessories or components that are added to the vehicle by the dealer or the owner may adversely affect battery performance and durability.

 © Copyright Ford 2023 FoMoCo

Table of Contents

Contents **PAGE**

Section 1: General Information 1-2
Important Safety Notice 1-2
Police Vehicle Definition 1-3
Good Practices 1-3
New Vehicle Storage 1-3
Police Vehicle Definition 1-4
Tires and Loading 1-4
Ambient Temperature Change and Tire Pressure 1-6
Ride Height Measurement — Front 1-7
Ride Height Measurement — Rear 1-9
Ride Height Specifications 1-10

 © Copyright Ford 2023 FoMoCo

Section 1: General Information

Section 1: General Information

Important Safety Notice

NOTE:
The descriptions and specifications contained in this guide were in effect at the time this guide was approved for printing. Ford Motor Company reserves the right to discontinue models at any time, or change specifications or design without notice and without incurring obligation.

Appropriate repair methods and procedures are essential for the safe, reliable operation of all motor vehicles as well as the personal safety of the individual doing the work. This guide provides general direction and guidelines for performing modifications to the vehicle, which will help assure reliability.

There are numerous variations in procedures, techniques, tools and parts for modifying vehicles, as well as in the skill level of the individual doing the work. This guide cannot possibly anticipate all such variations and provide advice or cautions as to each. Accordingly, anyone who departs from the instructions provided in this guide must first establish that they compromise neither their personal safety nor the vehicle integrity by the choice of methods, tools or parts.

Warnings, Notices and Notes

As you read through this guide, you will come across WARNINGS, NOTICES and NOTES. Each one is there for a specific purpose. WARNINGS remind you to be especially careful in those areas where carelessness can cause you personal injury. NOTICES are given to prevent you from making an error that could damage the vehicle or the vehicle's components. NOTES give you added information that will help you to complete a particular procedure. The following list contains some generalized warnings that you should follow when working on a vehicle.

⚠ WARNING:

- **The nominal High Voltage Traction Battery (HVTB) voltage is approximately 300 volts DC. The HVTB and charging system contain high voltage components and wiring. High voltage cables and wiring are orange in color. Before carrying out any vehicle modifications, the HVTB must be depowered. Any modification, service, or repairs to the high voltage system or its components, must be done by a trained service technician. Failure to follow these instructions may result in severe personal injury or death.**
- **For eye protection, always wear safety glasses.**
- **Use safety stands whenever a procedure requires you to be under the vehicle.**
- **Make sure the ignition switch is always in the OFF position, unless otherwise required by the procedure.**
- **Set the parking brake when working on the vehicle. The gear selector should be set in PARK unless instructed otherwise for a specific operation. Place wood blocks (4 inch x 4 inch or larger) against the front and rear surfaces of the tires to help prevent the vehicle from moving.**
- **Do not smoke while working on a vehicle.**
- **To reduce the risk of injury, always remove rings, watches, loose hanging jewelry and loose clothing before working on a vehicle.**
- **When it is necessary to work under the hood, keep hands and other objects clear of the cooling fan blades.**
- **Failure to follow these instructions may result in personal injury or death.**

NOTICE:

- **Do not modify the cooling system. High voltage vehicle components may be damaged if any cooling system modifications are attempted.**
- **Before placing the vehicle in a paint booth, make sure that the HVTB is not installed in the vehicle. In addition, the Charge Port Light Ring (CPLR) must be covered / protected from heat. High paint booth temperatures may damage the HVTB and the CPLR.**
- **Remove the service disconnects while carrying out any vehicle modifications.**

Making Safety Devices and Elements Inoperative

The vehicle contains many safety features required by US Federal or Canadian Motor Vehicle Safety Standards. These features, which include the key-on-ignition chime and brake lights, should never be disabled or modified.

CFR 49 Section 30122 states that "A manufacturer, distributor, dealer or motor vehicle repair business may not knowingly make inoperative any part of a device or element of design installed on or in a motor vehicle or motor vehicle's equipment in compliance with an applicable motor vehicle safety standard prescribed under this chapter unless the manufacturer, distributor, dealer or repair business reasonably believes the vehicle or equipment will not be used (except for testing or a similar purpose during maintenance or repair) when the device or element is inoperative."

 © Copyright Ford 2023 FoMoCo

Section 1: General Information

Police Vehicle Definition

The Police Interceptor vehicle is put through twice as many cycles of Ford's standard vehicle durability tests to make sure it meets the rigors of police usage. This vehicle testing is in addition to substantial component durability testing. This extra testing for the Police Interceptor certifies to Ford the entire vehicle is "heavy-duty" and suitable for police usage.

Good Practices

Process and Quality Assurance Systems

A formalized Process and Quality Assurance Systems check may be helpful in consistently producing high-quality products. An overview of some of the key items for such a system are outlined in this section.

Quality Assurance

Completed unit sign-off: All control items should be inspected with a written sign-off. All labels should be inspected and signed off, including verification that the information on the labels is correct. All appropriate systems should be checked for leaks. A road test should be performed to verify that all systems are operating correctly. All systems and functions that were provided by Ford should be checked to make sure that they function correctly after the build process.

The modifier's Process and Quality Assurance Systems should also make sure that appropriate training is provided to the employees.

Minimum and Maximum Screw Sizes

When installing aftermarket equipment, avoid using fasteners that are too long for the application or are in an area which might damage vehicle components, including the low voltage wiring, the high voltage system including the HVTB and the (orange) high voltage wiring/cables, brake lines, fuel tank and lines, powertrain components, exhaust system or suspension.

New Vehicle Storage

New Vehicle Storage — General

- Vehicle should be stored in a dry, ventilated place, and protected from sunlight, if possible.
- If vehicle is stored outside, maintenance against rust and damage, as described below, is recommended.

NOTICE:
Keep all rubber parts free from oil and solvents.

New Vehicle Storage — Body

- Wash vehicle thoroughly to remove dirt, grease, oil, tar or mud from exterior surfaces and underside of front fender.
- Periodically wash if vehicle is stored in exposed locations.
- Touch up exposed raw or primed metal to provide rust protection.
- Cover chrome and stainless steel parts with a thick coat of auto wax to prevent discoloration. Rewax as necessary when the vehicle is washed.
- Lubricate all hood, door hinges and latches with a light grade oil.
- Cover the interior soft trim to prevent fading.

New Vehicle Storage — Engine

- Start the engine every 15 days. Run it at fast idle until it reaches normal operating temperature.
- With foot on brake pedal (and brake applied), shift the transmission into all gears while the engine is running.

New Vehicle Storage — Fuel System

- Regularly move vehicle short distances to mix fuel anti-oxidation agents.

NOTE:
During extended periods of vehicle storage (60 days or more), gasoline may deteriorate due to oxidation. This can damage rubber and other polymers in the fuel system and may clog small orifices. A commercially available gasoline fuel stabilizer (Sta-Bil or equivalent) should be added to gasoline-powered vehicles whenever actual or expected storage periods exceed 60 days. The manufacturer's instructions packaged with the product should be followed. The vehicle should then be operated at an idle speed to circulate the additive throughout the fuel system.

 © Copyright Ford 2023 FoMoCo

Section 1: General Information

New Vehicle Storage — Tires

Most high performance tires are made with nylon overlay.

As such, the following steps should be taken to avoid flat spotting when the vehicle is not used for a period of time.

- Keep the vehicles tire pressure at the recommended operating pressure.
- If the vehicle is stored for a period longer than 15 days, it should be moved several feet during each 15-day period. The vehicle should be parked after being moved so that a different portion of the tread contacts the ground.

Vehicle Storage — Electrical

NOTICE:
If your vehicle is to be stored for 30 days or longer, the low voltage (underhood) battery negative terminal must be disconnected. Failure to do this could damage the vehicle's battery.

NOTE:
Extended storage time which results in the discharge of the low and/or high voltage batteries, may result in the setting of Diagnostic Trouble Codes (DTCs) and/or a no-start condition.

To maintain the high voltage battery charge, once a month your vehicle's high voltage batteries should be charged. This will maintain the high voltage battery, but may not be enough to maintain the low voltage (underhood) battery and additional low voltage (underhood) battery charging may be required after 60 days.

Police Vehicle Definition

The Police Interceptor vehicle is put through twice as many cycles of Ford's standard vehicle durability tests to make sure it meets the rigors of police usage. This vehicle testing is in addition to substantial component durability testing. This extra testing for the Police Interceptor certifies to Ford the entire vehicle is "heavy-duty" and suitable for police usage.

For standard features and options please refer to www.fleet.ford.com

Tires and Loading

Tire Replacement Requirements

⚠ WARNING:
Only use replacement tires and wheels that are the same size and type (such as P-metric versus LT-metric or all-season versus all-terrain) as those originally provided by Ford. Use of any tire or wheel not recommended by Ford can affect the safety and performance of your vehicle, which could result in an increased risk of the loss of vehicle control, vehicle rollover, personal injury or death. Additionally, the use of non-recommended tires and wheels could cause steering or suspension failure. If you have questions regarding tire replacement, see an authorized Ford or Lincoln dealer.

NOTICE:
Do not install an off road, aggressive tread or incorrectly sized tire. Any of these may cause elevated stress to the steering system. This can cause the power steering system to overheat and shut off the power assist, which can affect the safety and performance of your vehicle.

NOTE:
Vehicles are equipped with a reduced rolling resistance tire design. The use of a different tire can affect the travel distance of the vehicle as well as the vehicle's fuel economy.

Make sure all tires and wheels on the vehicle are of the same size, type, tread design, brand, load-carrying capacity and speed rating because it can affect the safety and performance of your vehicle, which could result in an increased risk of loss of vehicle control.

Tire Pressure Monitoring System (TPMS) Principles of Operation

The TPMS monitors the tire pressure using 4 valve stem mounted TPMS sensors to provide accurate tire pressures. Each individual sensor contains its own battery and transmits tire pressure data to the controlling module every 60 seconds when the vehicle speed exceeds 32 km/h (20 mph). The TPM module is a radio receiver that collects the tire pressure data and relays the information via the MS-CAN to the BCM. All of

 © Copyright Ford 2023 FoMoCo

Section 1: General Information

the TPMS functions are controlled by the BCM. The TPMS sensors are trained to the BCM, which records each TPMS sensors unique identifier. The BCM records where each TPMS sensor is located based on the training order and compares the actual tire pressure with the desired tire pressure as indicated on the Vehicle Certification label. If the tire pressure deviates from the desired tire pressure the BCM, using the HS-CAN, signals the IPC to illuminate the TPMS warning indicator and also displays a message on the message center. The programmed tire pressure cannot be changed.

This vehicle, as delivered by Ford Motor Company, conforms to Standard FMVSS138, Tire Pressure Monitoring Systems.

This system may not function if any of the following components are removed, relocated or modified in any way:

- Original Equipment Manufacturer (OEM) wheels and tires
- Tire pressure sensors or valve stems
- Body Control Module (BCM)
- Body Control Module (BCM) software and calibrations
- Tire Pressure Module (TPM)
- Instrument Cluster (IC) module
- Instrument Cluster (IC) software and calibrations
- Vehicle wheelbase longer than originally released

Certain modification could cause reduced system performance, up to and including the complete loss of TPMS functionality. This may include:

- Non-OEM wheels or tires
- The addition of steel carcass or run-flat tires
- Modification of the vehicle's recommended tire pressure
- Lengthening of the vehicle's wheelbase may affect signal strength of the sensors to a point where the rear sensors can no longer be heard by the TPM module. (Vehicles certified at released wheelbases only)
- The addition of metallic structures, such as prisoner partitions, may affect the signal strength of the sensors and could interfere or prevent the TPM module from hearing the rear sensors.
- The addition of intended or unintended transmitters to the vehicle may affect the signal strength of the sensors or interfere with the TPM module's antenna

The TPMS, as delivered from the Ford Motor Company, complies with part 15 of the FCC rules and with RS-210 of Industry Canada. Operation is subject to the following 2 conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Using Snow Tires and Traction Devices

NOTE:
Snow tires must be the same size and grade as originally equipped on your vehicle.

The tires on your vehicle have all-weather tread to provide traction in the rain and snow; however, in some climates, using snow tires or traction devices may be necessary.

Follow these guidelines when using snow tires and traction devices:

- SAE Class "S" cables should ONLY be used on the vehicle front tires.
- Install cables or chains securely, verifying that the cables or chains do not touch any wiring or brake lines.
- Drive cautiously! If you hear the cables or chains rub or bang against the vehicle, stop and retighten them. If this does not work, remove the cables or chains to prevent vehicle damage.
- Avoid overloading your vehicle.
- Remove the cables or chains when they are no longer needed. Do not use cables or chains on dry roads.
- Do not exceed 48 km/h (30 mph) with tire cables or chains on your vehicle.

Consult your dealer for information on other Ford approved methods of traction control.

 © Copyright Ford 2023 FoMoCo

Section 1: General Information

Vehicle Loading

⚠ WARNING:
The appropriate loading capacity of your vehicle can be limited either by volume capacity (how much space is available) or by payload capacity (how much weight the vehicle should carry). Once you have reached the maximum payload of your vehicle, do not add more cargo, even if there is space available. Overloading or improperly loading your vehicle can contribute to the loss of vehicle control and vehicle rollover.

⚠ WARNING:
Exceeding the Safety Compliance Certification Label axle and/or vehicle weight rating limits could result in substandard vehicle handling or performance, engine, transmission and/or structural damage, serious damage to the vehicle, loss of control and personal injury.

Gross vehicle weight rating (GVWR) is the maximum allowable weight of the fully loaded vehicle (including all options, equipment, passengers and cargo). The GVWR is shown on the Safety Compliance Certification Label located on the B-pillar or the edge of the driver's door.

Gross axle weight rating (GAWR) is the maximum allowable weight that can be carried by a single axle (front or rear). These numbers are shown on the Safety Compliance Certification Label located on the B-pillar or the edge of the driver's door. The total load on each axle must never exceed its GAWR.

⚠ WARNING:
Do not use replacement tires with lower load carrying capacities than the original tires because they may lower the vehicle's gross vehicle weight rating (GVWR) and gross axle weight rating (GAWR) limitations. Replacement tires with a higher limit than the originals do not increase the GVWR and GAWR limitations.

Steps for determining the correct load limit:

- Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lb" on your vehicle's placard.
- Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- Subtract the combined weight of the driver and passengers from XXX kg or XXX lb.
- The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1,400 lb and there will be five 150 lb passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lb (1400 - 750 (5 x 150) = 650 lb). In metric units (635 - 340 (5 x 68) = 295 kg).
- Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in the step above.

Ambient Temperature Change and Tire Pressure

NOTICE:
Do not inflate tire higher than maximum pressure stamped on tire sidewall. Premature tire wear or damage to the tire may result.

Tire pressures fluctuate with temperature changes. For this reason, tire pressure must be set to specification when tires are at outdoor ambient temperatures. If the vehicle is allowed to warm up to shop temperatures, and the outside temperature is less than shop temperature, the tire inflation pressure must be adjusted accordingly.

If the tires are inflated to specification at shop temperatures, and the vehicle is moved outdoors when the outdoor ambient temperature is significantly lower, the tire pressure may drop enough to be detected by the TPMS and activate the TPMS warning lamp.

As the ambient temperature decreases by 6°C (10°F), tire pressure decreases 7 kPa (1 psi). Adjust the tire pressure by 7 kPa (1 psi) for each 6°C (10°F) ambient temperature drop as necessary to keep the tire at the specified vehicle certification label pressure. Refer to the following tables to adjust the tire pressure indoors for colder outside temperatures.

 © Copyright Ford 2023 FoMoCo

Section 1: General Information

Table 1. Use Table to Adjust Tire Pressure Inside Garage for Colder Outside Temperature[1]
** Do Not Inflate Tire Higher than Maximum Pressure Stamped on Tire Sidewall. **

Table is based on a Garage Temperature of 70˚F. Max Pressure Adjustment is 7 psi.																		
	← Tire Placard Pressure (PSI) →																	
Outside Temperature (˚F)	30	32	34	35	38	40	41	42	45	50	55	60	65	70	75	80	85	90
70	30	32	34	35	38	40	41	42	45	50	55	60	65	70	75	80	85	90
60	31	33	35	36	39	41	42	43	46	51	56	61	67	72	77	82	87	92
50	32	34	36	37	40	42	43	44	47	53	58	63	68	73	79	84	89	94
40	33	35	37	38	41	43	44	45	49	54	59	64	70	75	80	86	91	96
30	34	36	38	39	42	44	46	47	50	55	61	66	72	77	82	87	92	97
20	35	37	39	40	43	46	47	48	51	57	62	67	72	77	82	87	92	97
10	36	38	40	41	45	47	48	49	52	57	62	67	72	77	82	87	92	97
0	37	39	41	42	45	47	48	49	52	57	62	67	72	77	82	87	92	97
-10	37	39	41	42	45	47	48	49	52	57	62	67	72	77	82	87	92	97
-20	37	39	41	42	45	47	48	49	52	57	62	67	72	77	82	87	92	97
-30	37	39	41	42	45	47	48	49	52	57	62	67	72	77	82	87	92	97
-40	37	39	41	42	45	47	48	49	52	57	62	67	72	77	82	87	92	97

Table 2. Use Table to Adjust Tire Pressure Inside Garage for Colder Outside Temperature (Metric Units)[1]
** Do Not Inflate Tire Higher than Maximum Pressure Stamped on Tire Sidewall. **

Table is based on a Garage Temperature of 21˚C. Max Pressure Adjustment is 50 kPa.																		
	← Tire Placard Pressure (kPa) →																	
Outside Temperature (˚C)	205	220	235	240	260	275	285	290	310	345	380	415	450	485	515	550	585	620
21	205	220	235	240	260	275	285	290	310	345	380	415	450	485	515	550	585	620
16	215	230	240	250	270	285	290	295	315	350	385	420	460	495	530	565	600	635
10	220	235	250	255	275	290	295	305	325	365	400	435	470	505	545	580	615	650
4	230	240	255	260	285	295	305	310	340	370	405	440	485	515	550	595	625	660
-1	235	250	260	270	290	305	315	325	345	380	420	455	495	530	565	600	635	670
-7	240	255	270	275	295	315	325	330	350	395	425	460	495	530	565	600	635	670
-12	250	260	275	285	310	325	330	340	360	395	425	460	495	530	565	600	635	670
-18	255	270	285	290	310	325	330	340	360	395	425	460	495	530	565	600	635	670
-23	255	270	285	290	310	325	330	340	360	395	425	460	495	530	565	600	635	670
-29	255	270	285	290	310	325	330	340	360	395	425	460	495	530	565	600	635	670
-34	255	270	285	290	310	325	330	340	360	395	425	460	495	530	565	600	635	670
-40	255	270	285	290	310	325	330	340	360	395	425	460	495	530	565	600	635	670

[1]When Outside (Ambient) Temperature is greater than 21˚C (70˚F), Inflate tires to placard pressure.
[1]Use the table to adjust tire pressure for P-metric and LT tires only.

N0072166

Ride Height Measurement — Front

1. **NOTE:**
   Make sure that the vehicle is positioned on a flat, level surface.

   Jounce front and rear suspension vigorously to allow the vehicle to settle.

2. Before measuring ride height check:
   a. Tires are inflated to the correct pressure.
   b. Vehicle should have at least one-half tank of fuel.
   c. All fluids at proper levels.
   d. No cargo inside the cab or bed.
   e. Inspect for aftermarket equipment. Check for aftermarket changes to the steering, suspension, wheel and tire components (such as competition, heavy duty, etc.).

 © Copyright Ford 2023 FoMoCo

Section 1: General Information

3. Ride height = 3–2 (Use the General Equipment: Surface Gauge)

   - Measure the distance between the flat level surface and the center of the rear control arm ball joint cap. (measurement 2)
   - Measure the distance between the flat level surface and the center of the rear control arm inboard bolt. (measurement 3)

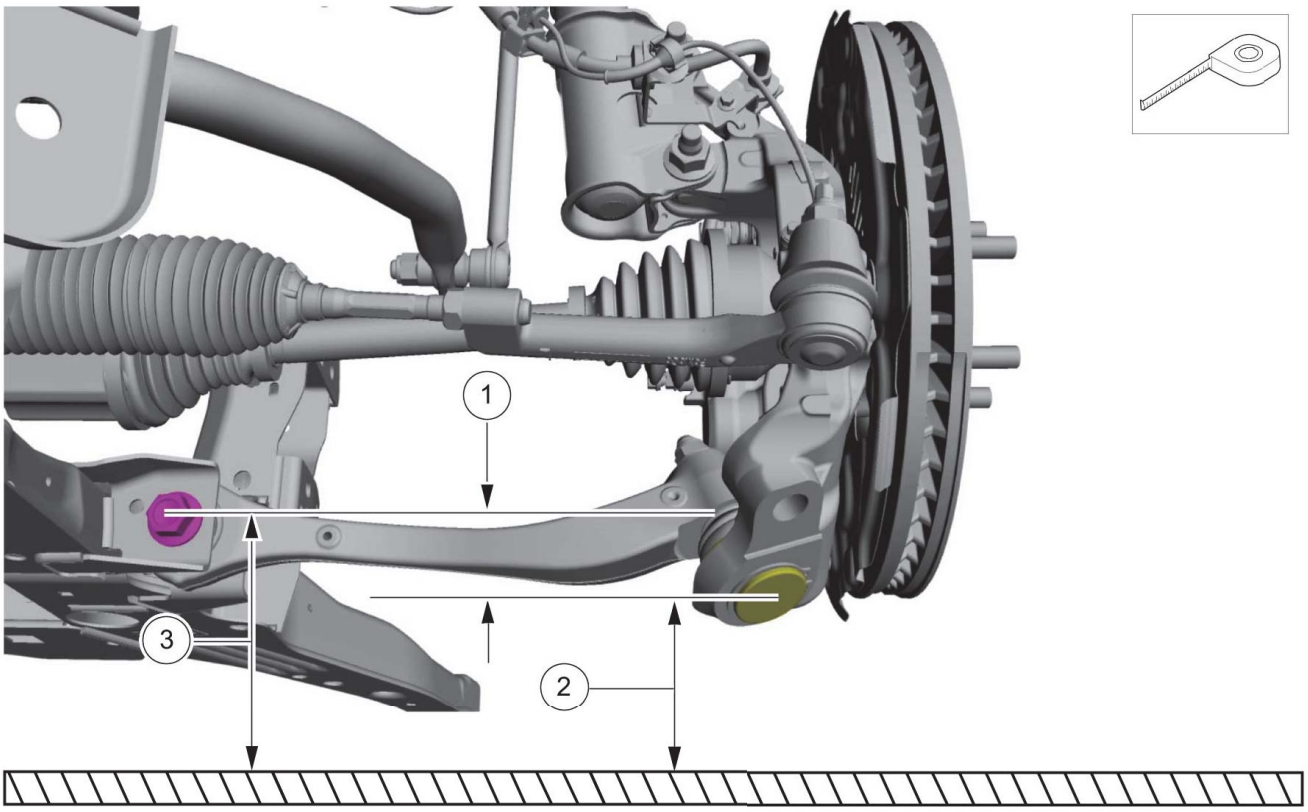

N0179854

4. With the surface gauge positioned on a flat, level surface, record the measurement of the surface gauge position (measurement 2) and (measurement 3).

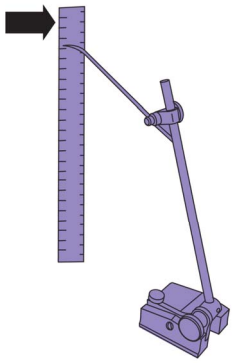

E145760

5. Subtract measurement 2 from measurement 3 to obtain the front ride height.

 © Copyright Ford 2023 FoMoCo

Section 1: General Information

Ride Height Measurement — Rear

1. **NOTE:**
   Make sure that the vehicle is positioned on a flat, level surface, transmission in the PARK position and the parking brake OFF.

   Jounce front and rear suspension vigorously to allow the vehicle to settle.
2. Before measuring ride height check:
   a. Tires are inflated to the correct pressure.
   b. Vehicle should have at least one-half tank of fuel.
   c. All fluids at proper levels.
   d. No cargo inside the cab or bed.
   e. Inspect for aftermarket equipment. Check for aftermarket changes to the steering, suspension, wheel and tire components (such as competition, heavy duty, etc.).
3. Ride height = 2–3 (Use the General Equipment: Surface Gauge)

- Measure the distance between the flat level surface and the center of the toe link inboard cam bolt. (measurement 2)
- Measure the distance between the flat level surface and the center of the toe link outboard bolt. (measurement 3)

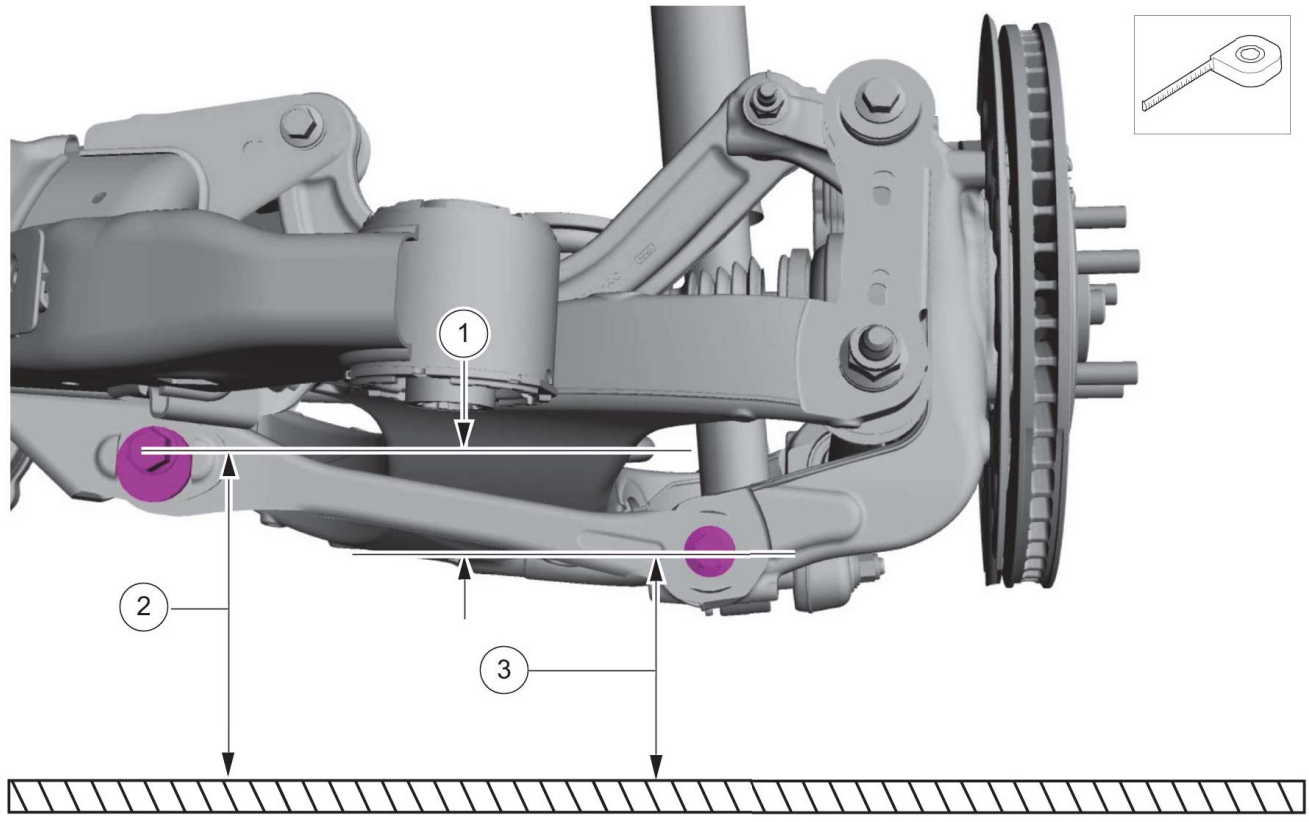

N0179855

 © Copyright Ford 2023 FoMoCo

Section 1: General Information

4. With the surface gauge positioned on a flat, level surface, record the measurement of the surface gauge position (measurement 2) and (measurement 3).

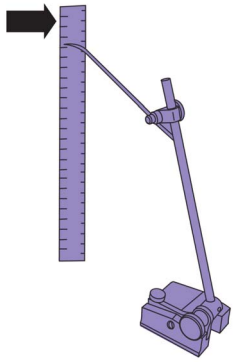

E145760

5. Subtract measurement 3 from measurement 2 to obtain the rear ride height.

Ride Height Specifications

NOTE:
Base Police ride height at full fuel, as-built at CAP, no additional content.

Ride Height

Item	Specification
120-in wheelbase, 3.0L GTDI	
Front	51.9 mm (2.043 in) ± 12 mm (0.472 in)
Rear	51.6 mm (2.031 in) ± 9.4 mm (0.370 in)
120-in wheelbase, 3.3L	
Front	61.1 mm (2.405 in) ± 12 mm (0.472 in)
Rear	62.3 mm (2.295 in) ± 9.4 mm (0.370 in)
120-in wheelbase, 3.3L HEV	
Front	61.1 mm (2.405 in) ± 12 mm (0.472 in)
Rear	62.3 mm (2.295 in) ± 9.4 mm (0.370 in)

 © Copyright Ford 2023 FoMoCo

Table of Contents

Contents **PAGE**

Section 2: High Voltage Battery Depowering 2-2

 © Copyright Ford 2023 FoMoCo

Section 2: High Voltage Battery Depowering

Section 2: High Voltage Battery Depowering

High Voltage Battery Depowering

⚠ WARNING:
THE HIGH-VOLTAGE SYSTEM MAY RETAIN A DANGEROUS LEVEL OF VOLTAGE FOR A SHORT TIME AFTER THE SERVICE DISCONNECT HAS BEEN OPENED. WAIT 5 MINUTES FOR THE VOLTAGE TO DISSIPATE BEFORE BEGINNING SERVICE. FAILURE TO FOLLOW THIS INSTRUCTION MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.

⚠ WARNING:
REMOVING THE BATTERY HIGH VOLTAGE SERVICE DISCONNECT DOES NOT DISSIPATE VOLTAGE INSIDE THE BATTERY PACK. THE BATTERY PACK REMAINS LIVE AND DANGEROUS. CONTACT WITH THE HIGH VOLTAGE BATTERY PACK INTERNALS MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.

⚠ WARNING:
ELECTRIC VEHICLES DAMAGED BY A CRASH MAY HAVE COMPROMISED HIGH VOLTAGE SAFETY SYSTEMS AND PRESENT A POTENTIAL HIGH VOLTAGE ELECTRICAL SHOCK HAZARD. EXERCISE CAUTION AND WEAR APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT (PPE) INCLUDING HIGH VOLTAGE SAFETY GLOVES AND BOOTS. REMOVE ALL METALLIC JEWELRY, INCLUDING WATCHES AND RINGS. ISOLATE THE HIGH VOLTAGE SYSTEM AS DIRECTED BY THE FORD EMERGENCY RESPONSE GUIDE FOR THE VEHICLE. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.

⚠ WARNING:
TO PREVENT THE RISK OF HIGH-VOLTAGE SHOCK, ALWAYS FOLLOW PRECISELY ALL WARNINGS AND SERVICE INSTRUCTIONS INCLUDING INSTRUCTIONS TO DEPOWER THE SYSTEM. THE TOTAL VOLTAGE OF THE VEHICLE HV BATTERY PACK MAY BE UP TO APPROXIMATELY 450 VOLTS DC. THIS VOLTAGE IS PROVIDED THROUGH HIGH-VOLTAGE CABLES TO ITS COMPONENTS AND MODULES. THE HIGH-VOLTAGE CABLES AND WIRING ARE IDENTIFIED BY ORANGE HARNESS TAPE OR ORANGE WIRE COVERING. ALL HIGH-VOLTAGE COMPONENTS ARE MARKED WITH HIGH-VOLTAGE WARNING LABELS WITH A HIGH-VOLTAGE SYMBOL. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.

⚠ WARNING:
SERVICE OF THE HIGH VOLTAGE SYSTEM ON THIS VEHICLE IS RESTRICTED TO QUALIFIED PERSONNEL. THE REQUIRED QUALIFICATIONS VARY BY REGION. ALWAYS OBSERVE LOCAL LAWS AND LEGISLATIVE DIRECTIVES REGARDING ELECTRIC VEHICLE SERVICE. FAILURE TO FOLLOW THIS INSTRUCTION MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.

⚠ WARNING:
NEVER CONNECT THE SERVICE DISCONNECT WHEN A HIGH-VOLTAGE COVER IS REMOVED. ALWAYS INSTALL THE COVER PRIOR TO CONNECTING THE SERVICE DISCONNECT. THE COVER PREVENTS INADVERTENT CONTACT WITH THE HIGH VOLTAGE WHICH IS PRESENT AT SEVERAL POINTS UNDER THE COVER. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.

⚠ WARNING:
DISCONNECT THE 12V BATTERY BEFORE SERVICING THE DIRECT CURRENT TO ALTERNATING CURRENT (DC-AC) INVERTER OR ALTERNATING CURRENT (AC) POWERPOINT TO PREVENT THE RISK OF HIGH VOLTAGE SHOCK. FAILURE TO FOLLOW THIS INSTRUCTION MAY RESULT IN SERIOUS PERSONAL INJURY.

NOTICE:
Do not backprobe, splice or repair the high voltage (orange) wiring. Voltage in the system is approximately 450 volts DC. Damage may occur to equipment added to the system.

NOTICE:
None of the High Voltage Traction Battery (HVTB) wiring should be tapped or spliced to check for battery voltage (power), ground or signals.

 © Copyright Ford 2023 FoMoCo

Section 2: High Voltage Battery Depowering

NOTICE:
Modification of Low-Voltage (LV) power & control wires connecting to the High-Voltage (HV) battery system can damage or disable the HV Battery system. Do not open or modify High Voltage battery pack

High Voltage Battery Depowering using FDRS

⚠ WARNING:
Before beginning any service procedure in this manual, refer to health and safety warnings in Workshop Manual (WSM) Section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.

⚠ WARNING:
To prevent the risk of high-voltage shock, always follow precisely all warnings and service instructions, including instructions to depower the system. The high-voltage system utilizes approximately 450 volts DC, provided through high-voltage cables to its components and modules. The high-voltage cables and wiring are identified by orange harness tape or orange wire covering. All high-voltage components are marked with high-voltage warning labels with a high-voltage symbol. Failure to follow these instructions may result in serious personal injury or death.

1. Using the FDRS CARRY OUT the Zero Voltage Confirmation routine and follow the on-screen instructions.
2. Detach the pin-type retainer and position the electrical connector and wiring harness aside.

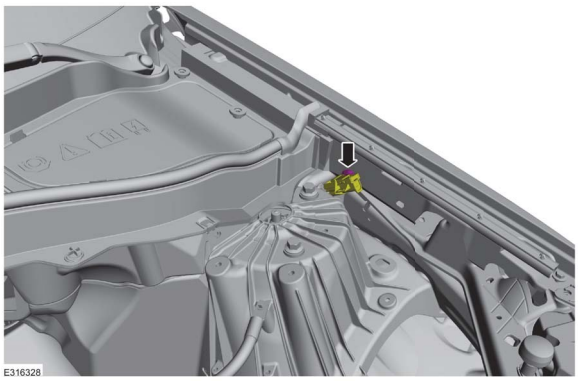
E316328

3. Release the Connector Position Assurance (CPA) clip.

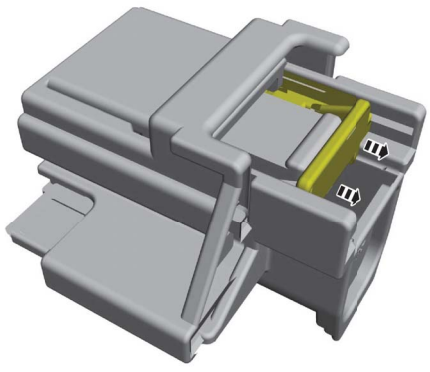
E316329

4. **NOTE:**
   The tab must be depressed prior to pushing the connector back in or damage to the connector may result.

   Depress the tab while pulling the connector until the hole is completely visible on the top of the connector.

 © Copyright Ford 2023 FoMoCo

Section 2: High Voltage Battery Depowering

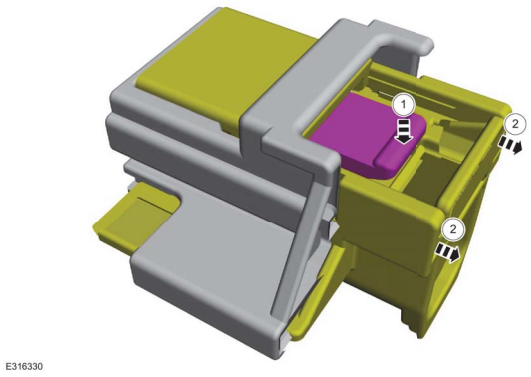

5. Insert a suitable tool inside the connector hole to prevent the connector from closing.

6. Using the FDRS COMPLETE the Zero Voltage Confirmation routine and verify the High Voltage System has been de-energized.

Manual De-Energizing

⚠ WARNING:
To prevent the risk of high-voltage shock, always follow precisely all warnings and service instructions, including instructions to depower the system. The high-voltage system utilizes approximately 450 volts DC, provided through high-voltage cables to its components and modules. The high-voltage cables and wiring are identified by orange harness tape or orange wire covering. All high-voltage components are marked with high-voltage warning labels with a high-voltage symbol. Failure to follow these instructions may result in serious personal injury or death

⚠ WARNING:
Before beginning any service procedure in this manual, refer to health and safety warnings in WSM Section 100–00 General Information. Failure to follow this instruction may result in serious personal injury.

NOTICE:
Manual De-energization should only be performed when a Ford-specific diagnostic tool is not available.

NOTICE:
Excessive use of this method may cause damage to electrical connectors.

 © Copyright Ford 2023 FoMoCo

Section 2: High Voltage Battery Depowering

NOTICE:
To prevent the risk of high voltage shock, the high voltage battery cover must not be removed if any of the following condition exist:

- **BECM DTC P0AA6:00 that has been diagnosed to be an internal fault with the high voltage Battery.**
- **BECM Diagnostic Trouble Codes (DTCs) P0AA1:00 AND P0AA4:00 are present.**
- **BECM Diagnostic Trouble Codes (DTCs) P0D0F:00 AND P0AA4:00 are present (PHEV only).**

1. Disconnect the Electric Vehicle Supply Equipment (EVSE) from the vehicle charge port. (PHEV only).
2. Turn the ignition ON without depressing the brake pedal (Accessory mode).
3. **NOTE:**
   A scan tool that is capable of performing a self-test on the BECM is required.

   Using a scan tool perform BECM self test and record the Diagnostic Trouble Codes (DTCs).
   • If BECM Diagnostic Trouble Codes (DTCs) P0AA1:00 AND P0AA4:00 are present. Refer to WSM procedures in section 414-03 High Voltage Battery, Mounting and Cables, Diagnosis and Testing.
   • If BECM Diagnostic Trouble Codes (DTCs) P0D0F:00 AND P0AA4:00 are present (PHEV only). Refer to WSM Procedures in section 414–03A High Voltage Battery, Mounting and Cables - Plug-In Hybrid Electric Vehicle (PHEV).
4. Turn the ignition OFF.
5. Detach the pin-type retainer and position the electrical connector and wiring harness aside.

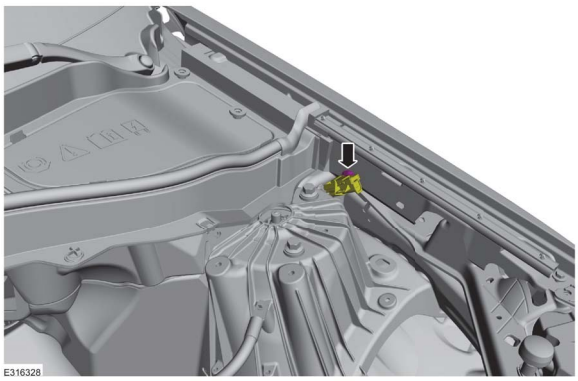
E316328

6. Release the Connector Position Assurance (CPA) clip.

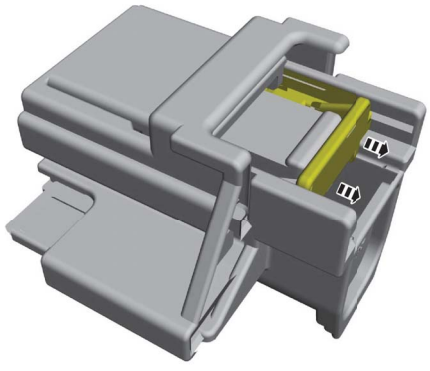
E316329

 © Copyright Ford 2023 FoMoCo

Section 2: High Voltage Battery Depowering

7. **NOTE:**
   The tab must be depressed prior to pushing the connector back in or damage to the connector may result.

   Depress the tab while pulling the connector until the hole is completely visible on the top of the connector.

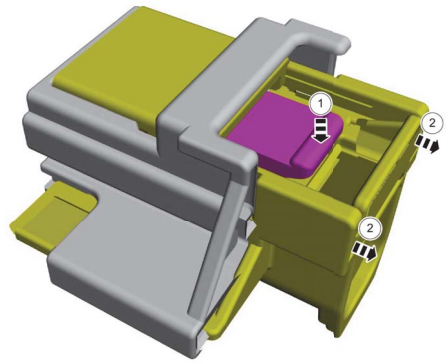

E316330

8. Insert a suitable tool inside the connector hole to prevent the connector from closing.

E316331

9. Disconnect the low voltage electrical connector at the High Voltage Battery.
10. Disconnect the high voltage electrical connector at the High Voltage Battery.
11. Wait a minimum of 5 minutes.

 © Copyright Ford 2023 FoMoCo

Table of Contents

Contents **PAGE**

Section 3: General Electrical Information 3-2
Electrical Basics 3-2
Control Modules — Red Area 3-2
Controller Area Network (CAN) Bus 3-2
General Guidelines For Vehicle Modification 3-2
Auxiliary Power Point — 12V 3-4
DC/DC Converter 3-4
Vehicle Component Electrical Loads 3-4
Police Interceptor Utility Hybrid— Rear Power Access 3-5
Access to Signals and Power 3-7
Wig Wag 3-10

 © Copyright Ford 2023 FoMoCo

Section 3: General Electrical Information

Section 3: General Electrical Information

Electrical Basics

Throughout a vehicle, electricity is supplied through "hot" wires, comparable to the pressurized supply pipes of a plumbing system. At various points along the wires are electrical loads in the form of lights, switches and receptacles. Turning on a light switch is somewhat like opening a faucet to let water run; electricity flows through the hot wire to make the light illuminate. Once the electricity has done its work, its potential drops to zero, just as water loses pressure after flowing through a sink or laundry tub. The electrical system has drains, which are the ground wires that return the electricity to its source, just as a plumbing system has drain pipes through which water runs into the sewer mains or ground.

The lights or equipment, technically called the load, can be compared to a water wheel that remains motionless until a stream of water causes it to turn. A load consists of a resistance, a material that permits the passage of electricity, but only with difficulty and thereby creates heat. Resistance to electricity flowing through a wire can be compared to the resistance given to water flowing through a hose, as if the hose were to be squeezed, it would restrict the flow of water. A load may also be inductive, typically a motor with windings of copper wire, in which the magnetic fields generated by the electrical current creates motion. The tungsten filament of an incandescent bulb or the heating element of an electric heater in a coffee pot would be an example of a resistive load. At any moment, the demand on an electrical system depends on the number of loads in operation and their consumption of energy, just as demands on a water system depend on how many faucets are opened and how wide they are opened.

The mechanics and physical fittings of the system are simple. Electricity moves throughout the vehicle in wires of different sizes, according to the electricity a circuit may have to carry.

Electrical Terms

VOLT is the unit of electrical potential, equal to the difference of electrical potential between 2 points in a circuit. It could be compared to the pressure, or the push, on the water to move it through a pipe.

AMPERE or **AMPS** is the unit used to measure the amount of electrical flow; the number of electrically charged particles called electrons that flow past a given point in a circuit. It is similar to measuring the amount of water flowing through a pipe at any given point. The larger the pipe is, the more water that can flow past one given point per second. Similarly, the bigger the wire is, the more electricity that can flow past a given point.

WATT is the unit of power. It indicates the rate at which a device converts electric current to another form of energy, either heat or motion. Or to put it another way, the rate at which a device converts energy.

The relationship of volts, amperes and watts to one another is expressed in a simple equation that enables you to make any calculations you may need for proper and safe electrical modifications to the vehicle. Volts x Amps = watts. If the current is at 12 volts and a device requires 4 amperes of current, the equation will read 12 volts x 4 amperes = 48 watts.

To figure the current needed for a device rated in watts, turn the equation around: Watts/volts = amperes. For example, if you have a piece of equipment, such as a communications radio, that uses 120 watts: 120 watts/12 volts = 10 amperes.

Control Modules — Red Area

Do not install any components into the control modules or module harness. Connecting into this system may affect control module operation. For example, connecting aftermarket electrical equipment into the brake light circuit or any other circuit which is connected to the PCM, anti-lock brake computer, airbag system or any other vehicle system will cause vehicle malfunction.

Controller Area Network (CAN) Bus

NOTICE:
Wiring faults in the Controller Area Network (CAN) bus may shut down the vehicle and prevent further operation.

Do not splice or connect any equipment to the CAN bus wiring.

General Guidelines For Vehicle Modification

- Provide circuit protection (fuses) for all wiring. The fuse rating should not exceed either the rated wiring current capacity or the total current requirements for all the add-on components on the circuit. Install fuses as close to the point of tapped power as possible.
- Document all revisions to the electrical system and place with the vehicle Owner's Literature. Color code and/or label all revisions or additions to wiring.
- Provide protective covering in all areas that could be damaged during normal equipment installations.
- Disconnect the negative battery cable of vehicles stored on site to reduce the possibility of draining the battery by lights or other equipment.
- Do not allow control panels attached to the instrument panel to protrude into the driver and passenger air bag deployment zones. For additional information, refer to Section 5: Reference Information in this guide.

 © Copyright Ford 2023 FoMoCo

Section 3: General Electrical Information

- Do not install switches and gauges in the driver or passenger knee impact areas.
- Inspect all Ford gauges, lights and switches for correct operation after instrument panel work is performed.
- Properly secure any relocated or removed wiring while working behind the instrument panel to prevent chafing, squeaks and rattles.
- Provide adequate retention for wiring harnesses so that they are clear of bolts, corners or edges which could abrade the wires during normal vehicle operation.
- Anticipate incorrectly routed wiring situations and protect all wiring from penetration by screws and raw edges.
- Weather-seal all electrical connectors exposed to the elements.
- Do not use quick splice connectors or wire nuts.
- Install the fuse panel so fuses are readily accessible.
- Make sure that connections are easily accessible for assembly and service.
- Make sure submersible connectors do not lose their seals under extreme assembly conditions such as bending wires 90 degrees immediately after the connector.
- Whenever using connectors, use a socket (female) connector on the electrical source side and a plug (male) connector on the electrical load side to reduce the possibility of a short circuit when disconnected.
- Air bag restraint systems must remain intact as received from Ford Motor Company. Before any vehicle modifications are performed, the system must be disarmed by following the instructions provided in the current Workshop Manual.
- Adherence to the above guidelines is not to be construed as approval by Ford Motor Company of any specific revisions or additions to the vehicle's original electrical system.
- Do not modify the cooling system. High voltage vehicle components may be damaged if any cooling system modifications are attempted.
- Do not backprobe, splice or repair the high voltage system (orange) wiring/cables.
- Do not mount to or modify the high voltage system (orange) wiring/cables in any way.
- Do not cut, weld or screw into the HVTB case or penetrate the batteries in any way.
- Provide circuit protection (fuses) for all wiring. The fuse rating should not exceed either the rated wiring current capacity or the total current requirements for all the add-on components on the circuit. Install fuses as close to the point of tapped power as possible.
- Provide protective covering in all areas that could be damaged during normal equipment installations.
- Do not allow control panels attached to the instrument panel to protrude into the driver and passenger air bag deployment zones. For additional information, refer to Section 4: Reference in this guide.
- Do not install switches and gauges in the driver or passenger knee impact areas.
- Provide adequate retention for wiring harnesses so they are clear of bolts, corners or edges which could abrade the wires during normal vehicle operation.
- Properly secure all wiring relocated or removed while working behind the instrument panel to prevent chafing, squeaks and rattles.
- Anticipate mis-routed wiring situations and protect all wiring from penetration by screws and raw edges.
- Weather-seal all electrical connectors exposed to the elements.
- Do not use quick splice connectors or wire nuts.
- Install the fuse panel so fuses are readily accessible.
- Make sure that connections are easily accessible for assembly and service.
- Inspect all Ford gauges, lights and switches for correct operation after instrument panel work is performed.
- Make sure submersible connectors do not lose their seals under extreme assembly conditions such as bending wires 90 degrees immediately after the connector.
- Whenever using connectors, use a socket (female) connector on the electrical source side and a plug (male) connector on the electrical load side to reduce the possibility of a short circuit when disconnected.
- Adherence to the above guidelines is not to be construed as approval by Ford Motor Company of any specific revisions or additions to the vehicles original electrical system.
- Document all revisions to the electrical system and place with the vehicle Owner's Literature. Color code and/or label all revisions or additions to wiring.
- Disconnect the negative battery cable of vehicles stored on-site to reduce the possibility of draining the battery by lights or other equipment.

12 Volt Battery

The 12 volt battery is a standard automotive battery. It is a DC source connected in a negative ground system. The battery case is sealed, with 2 vent holes to release gases. The battery has 3 major functions:

- Storage of electricity for later use
- Voltage stabilizer for the electrical system
- Temporary power source when electrical loads exceed the Direct Current/Direct Current (DC/DC) converter output current.
- Only use the 12 volt (Low Voltage) power point provided in the cargo area on the passenger side under the cargo area floor. NEVER use the High Voltage Hybrid battery to supply power for law enforcement equipment.

 © Copyright Ford 2023 FoMoCo

Section 3: General Electrical Information

Auxiliary Power Point — 12V

⚠ WARNING:
The nominal high voltage traction battery (HVTB) voltage is 300 volts DC.

⚠ WARNING:
The high voltage traction battery (HVTB) and charging system contains high voltage components and wiring. High voltage cables and wiring are orange in color.

⚠ WARNING:
Before carrying out any vehicle modifications, the high voltage traction battery (HVTB) must be depowered. Failure to follow these instructions may result in severe personal injury or death.

NOTE:
Do not use the power point for operating the cigarette lighter element (if equipped).

NOTICE:
Power outlets are designed for accessory plugs only. Do not insert any other object into the power outlet as this will damage the outlet and blow the fuse. Do not hang any type of accessory or accessory bracket from the plug. Improper use of the power outlet can cause damage not covered by your warranty.

To prevent the fuse from being blown, do not use the power point(s) over the vehicle capacity of 12-VDC/180W.

To prevent the battery from being discharged, do not use the power point longer than necessary when the engine is not running.

DC/DC Converter

The DC/DC converter is an air-cooled component that converts high voltage DC power to low voltage DC power. It is part of the high voltage battery pack and maintains an electrical isolation between the 2 DC power systems. This system converts the high voltage (approximately 300 volts) to low voltage (12 volts) that provides power to the vehicle low voltage battery systems. The PCM controls the operation of the DC/DC converter through an enabled input from the PCM to the DC/DC converter.

Vehicle Component Electrical Loads

Vehicle component electrical loads are shown in the table below. Not all features are powered all the time, so actual vehicle loads on the power supply system will vary.

NOTE:
The electric A/C compressor loads are included with the blower loads.

Component	Amps
Base	
Miscellaneous base loads	16.5
Cooling	
Cooling fan (high speed variable)	27.0
Climate Control	
A/C fan to face — high speed (recirculating air)	25.0
A/C fan to face — M/H speed (recirculating air)	16.0
Heater fan to foot — M/H speed (fresh air)	16.0
Lighting	
Exterior and instrument panel lamps (non-dimmable)	3.5

 © Copyright Ford 2023 FoMoCo

Section 3: General Electrical Information

(Continued)

Component	Amps
Headlamps — low beam	9.1
Brake lights (with CHMSL)	5.1
Heated Features	
Heated rear window (includes heated mirrors)	18.0
Heated front seat — LH	4.5
Heated front seat — RH	4.5
Other	
Radio	4.0
Typical Vehicle Load = 95-110 Amps	

Typical Police Equipment

Loads for equipment commonly found on police vehicles are shown in the table below. Not all equipment will be operating at the same time, so actual loads on the power supply system will vary.

Component	Amps
Communications radio	5.0-20.0
Light bar	28.0-43.0
LED light bar	6.0
Siren	15.0-30.0
Headlamp flasher	1.0-1.5
LED deck bars/LED visor lights	2.0
Radar	0.8
Receipt printer	3.0
Spotlights (each)	7.8
Alley lights (each)	1.0
Camcorder	2.0

Police Interceptor Utility Hybrid— Rear Power Access

The rear power access point mounted in the cargo area, is a battery access port for police auxiliary equipment. It is capable of supplying 80 amps of battery voltage. Voltage to the positive terminal of the rear power access point is supplied through two 50A, connected to the battery through the power distribution box (PDB) fuses F30 and F31. Battery access is provided by 2 studs contained in an enclosure, behind the passenger second row seat under the cargo area floor. The terminal with the red wire is the battery positive. Remove both fuses in the PDB before removing the cover to the rear power point. Make sure load devices can be turned off and are switched off when reinserting the fuses.

⚠ WARNING:

Under no circumstances should the rear power access point cover be removed without first removing power distribution box (PDB) fuses F30 and F31. Removing the cover without removing the fuses could result in an electrical hazard. Turn off load devices before inserting the fuses. Failure to follow these instructions may result in personal injury.

NOTE:

There is a battery on Hybrid vehicles ONLY in the cargo area on driver side behind the trim panel should NEVER be used as a power source for police equipment and lighting. It is intended for vehicle use ONLY on Hybrid vehicles. This battery does not exist on 3.3L and 3.5L GTDI powertrain vehicles. For upfitting, the power lug on floor in 2nd row below rear portion of seat should be used as the power source for police equipment and lighting.

 © Copyright Ford 2023 FoMoCo

Section 3: General Electrical Information

1. To access the rear power point, fold back the cargo area floor near the second row seat.

N0179976

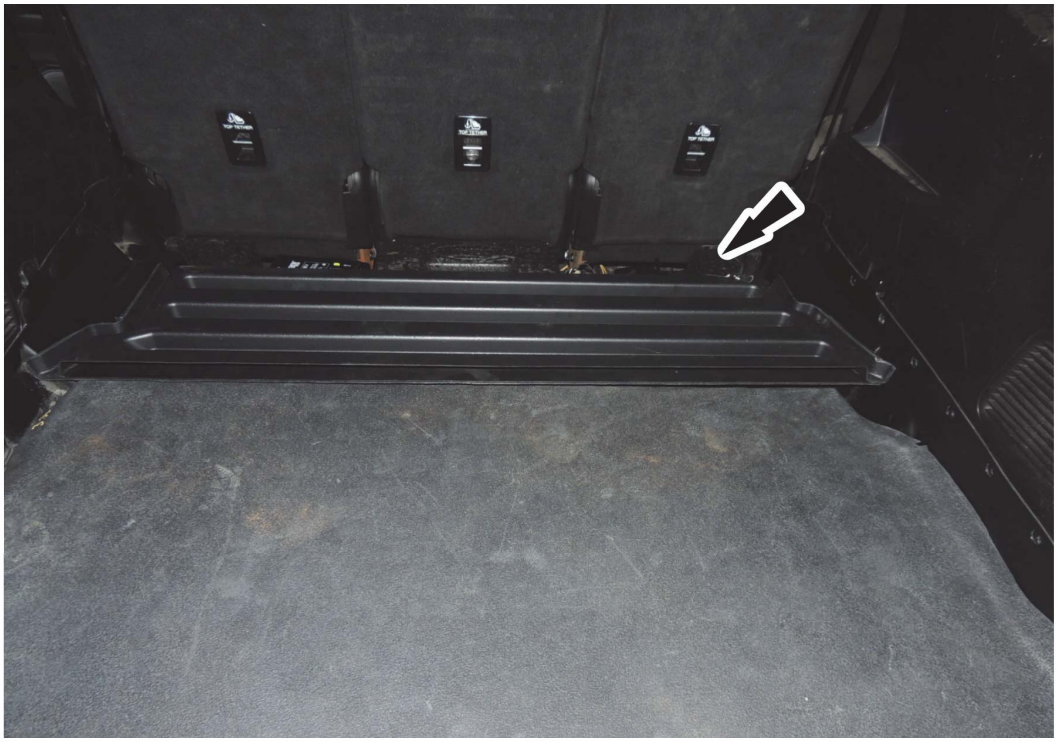

N0179978

 © Copyright Ford 2023 FoMoCo

Section 3: General Electrical Information

2. Open the cover.

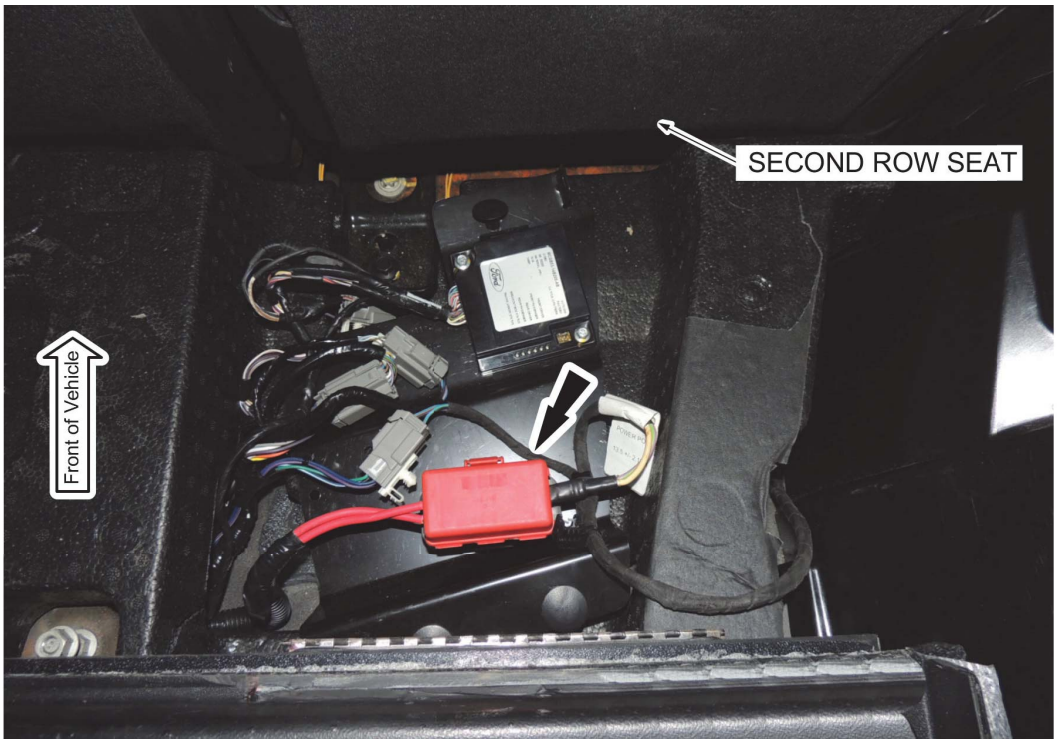

N0180456

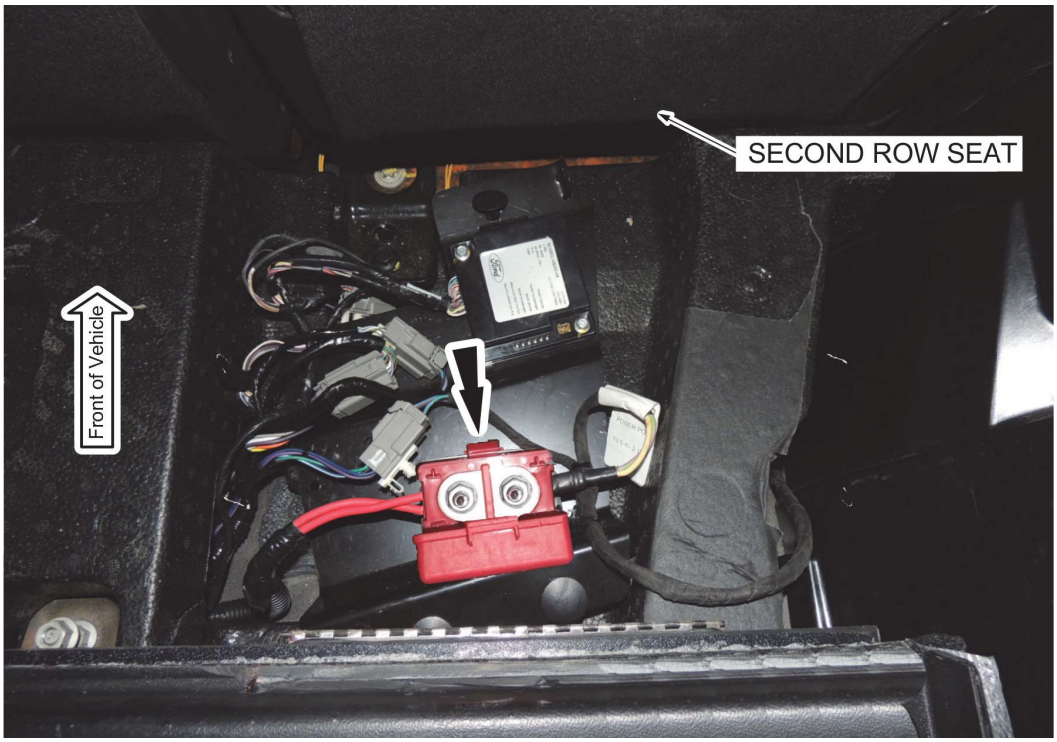

N0180457

 © Copyright Ford 2023 FoMoCo

Section 3: General Electrical Information

Access to Signals and Power

1. Remove 4 bolts and the rear plate located in between the mounting plate and second row seat.
   a. Torque: 40 lb.in (4.5 Nm)

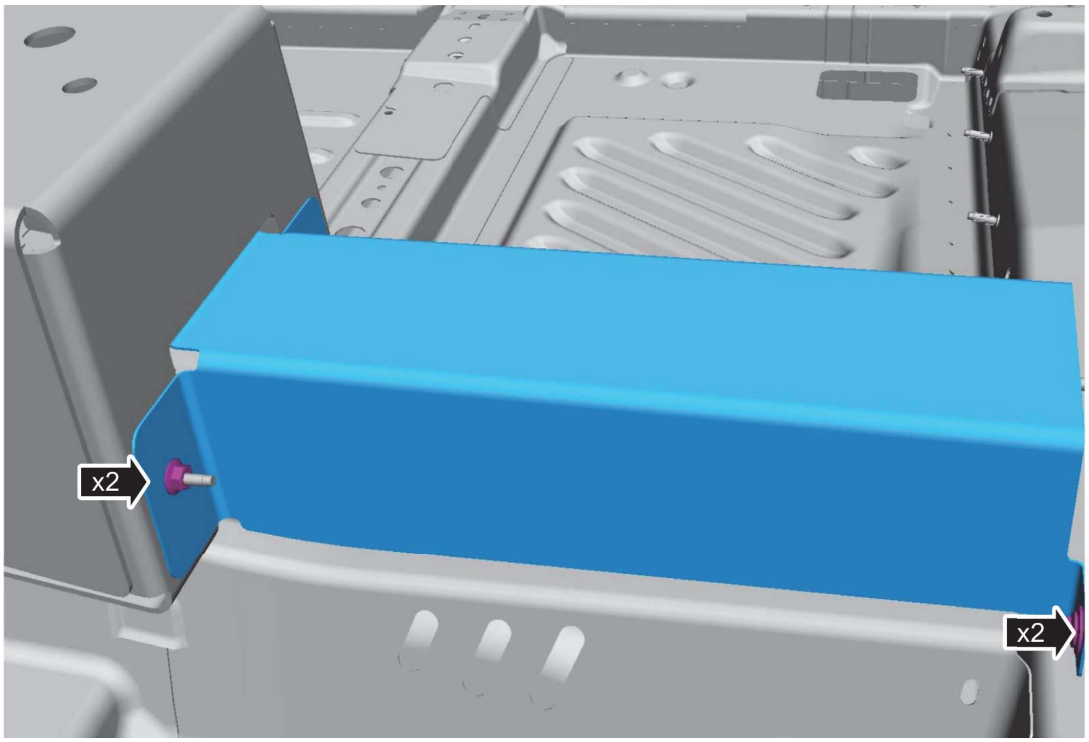

N0179997

2. Remove the 4 nuts and the center mounting plate.
   a. Torque: 93 lb.in (10.5 Nm)

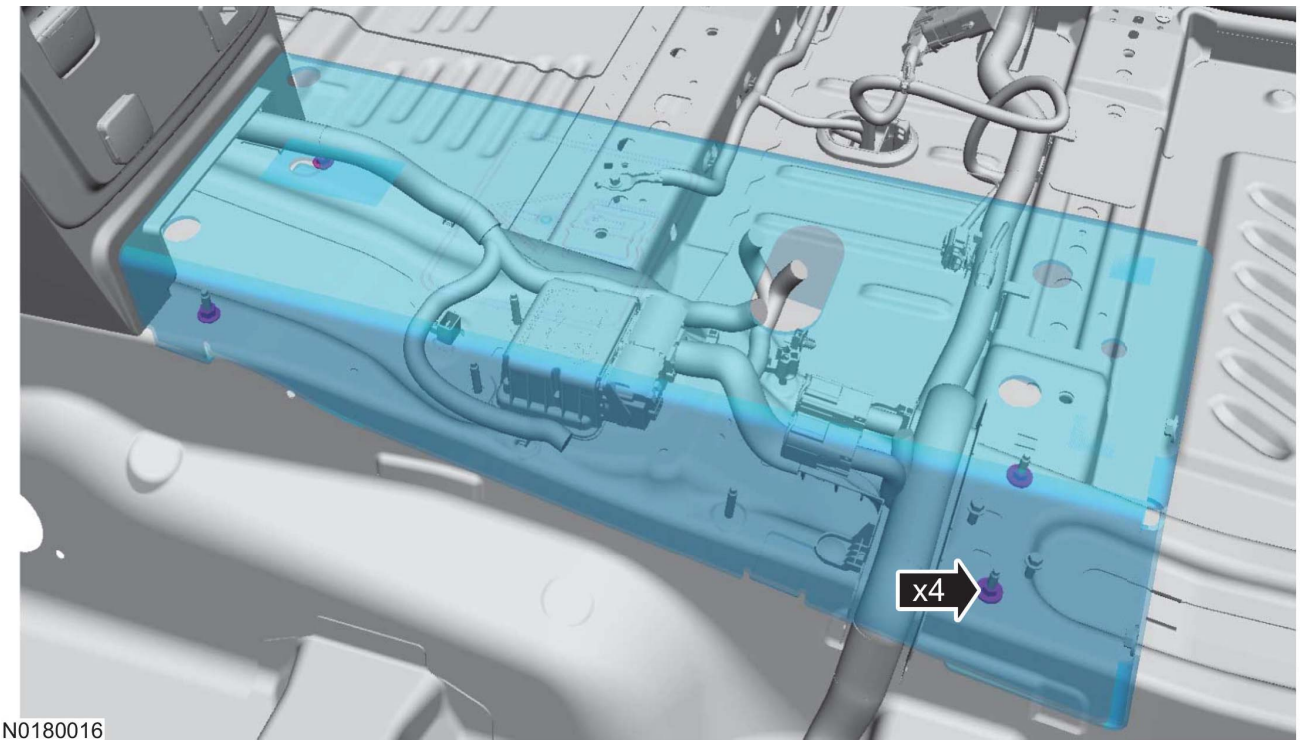

N0180016

 © Copyright Ford 2023 FoMoCo

Section 3: General Electrical Information

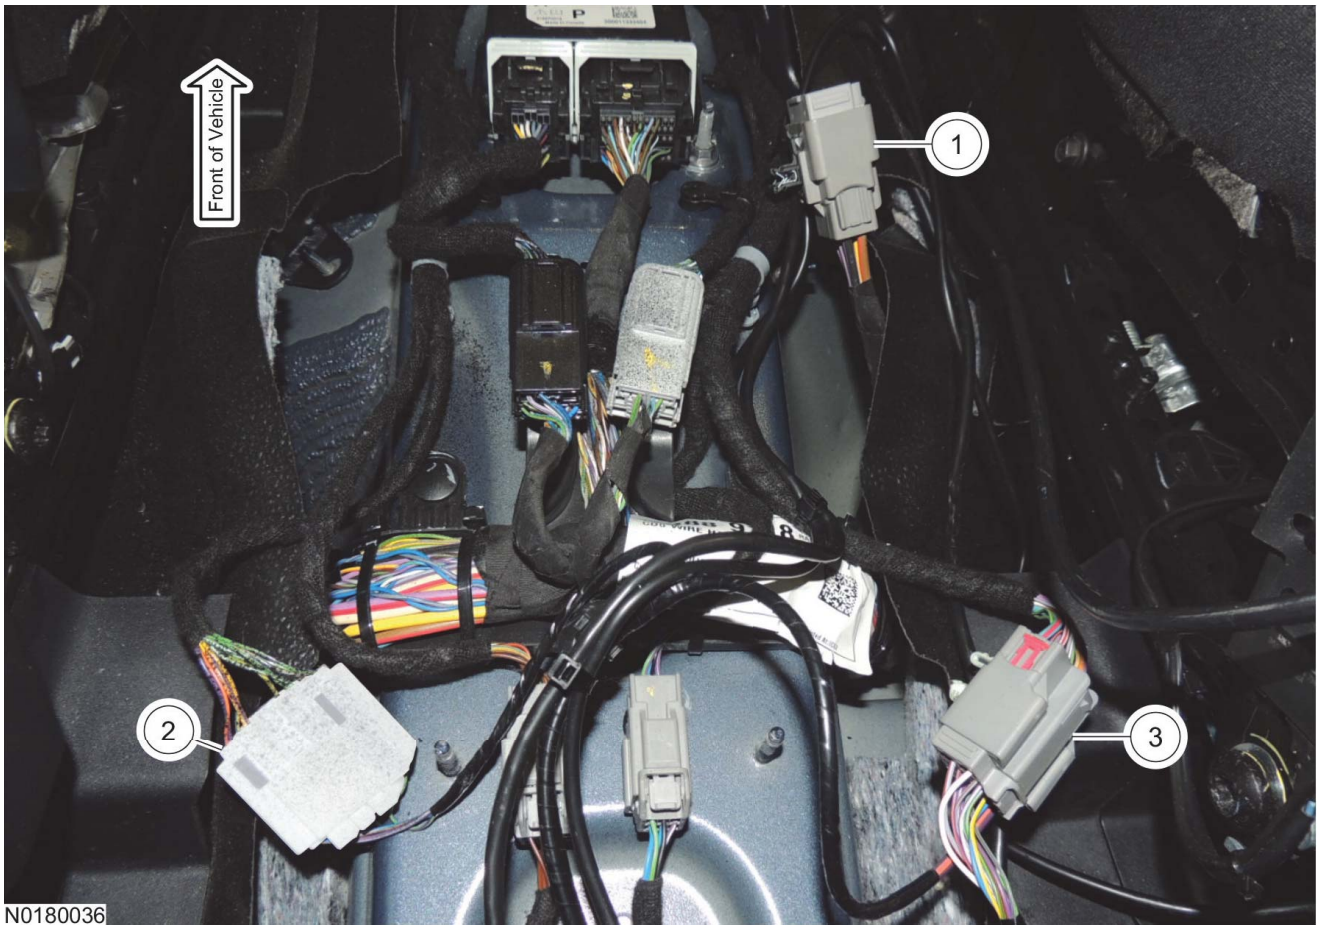

1. Grey 6 pin connector.
2. White 14 pin connector.
3. Grey 14 pin connector.

Connector View For Grey 6 pin Connector

Pin Number	Description	Wire Color
1	B+ (40A)	BU-WH
2	B+ (40A)	YE
3	B+ (40A)	BN-RD
4	Ground	BK-WH
5	Ground	BK-WH
6	Ground	BK-WH

 © Copyright Ford 2023 FoMoCo

Section 3: General Electrical Information

Connector View For White 14 pin Connector

Pin Number	Description	Wire Color
1	Wig Wag Control	OG (Do **NOT** apply 12V to Pin 1 for Wig Wag control— See “Wig Wag Headlamps Control” wire diagram in section 5-30)
2		
3	B+ feed fused at 15 A max	YE-VT
4		
5		
6	Side LED Synch	GY-OG
7	Dimmer	VT-GY
8	Brake Output	YE-BU
9	Speaker + TDM Grill	BN
10		
11	Battery Saver	YE-GN
12	Horn - Module Side	GN-WH
13	Horn - Switch Side	GN-WH
14	Front LED Pattern	GN-VT

Connector View For Gray 14 pin Connector

Pin Number	Description	Wire Color
1	B+ Feed #1	WH-RD
2	Control Button 1	GY-BN
3	Control Button 2	WH-VT
4	Control Button 3	GN-BN
5	Control Button 4	YE-GY
6	Police Start	BU-BN (For voltage output see “Police Start” wire diagram in section 5-25)
7	RN/ST #1	VY-OG
8	B+ Feed #2	BU-RD
9	Vehicle Speed	VT-BN
10	Delay Accessory	VT-GY
11	B+ Feed #3	VT-RD
12	Park Detect	GN (See “Park Detect” wire diagram in seciton 5-25)
13	Diver Door Ajar	GN-VT
14	R/S #2	GY-BU

 © Copyright Ford 2023 FoMoCo

Section 3: General Electrical Information

Wig Wag

1. 3 flash options are changeable by using FDRS.

Headlight Led Color Change

1. Vehicles equipped with the Headlight LED Option, the LED color is changeable by swapping the pin out in connector.

Connector locations shown below.

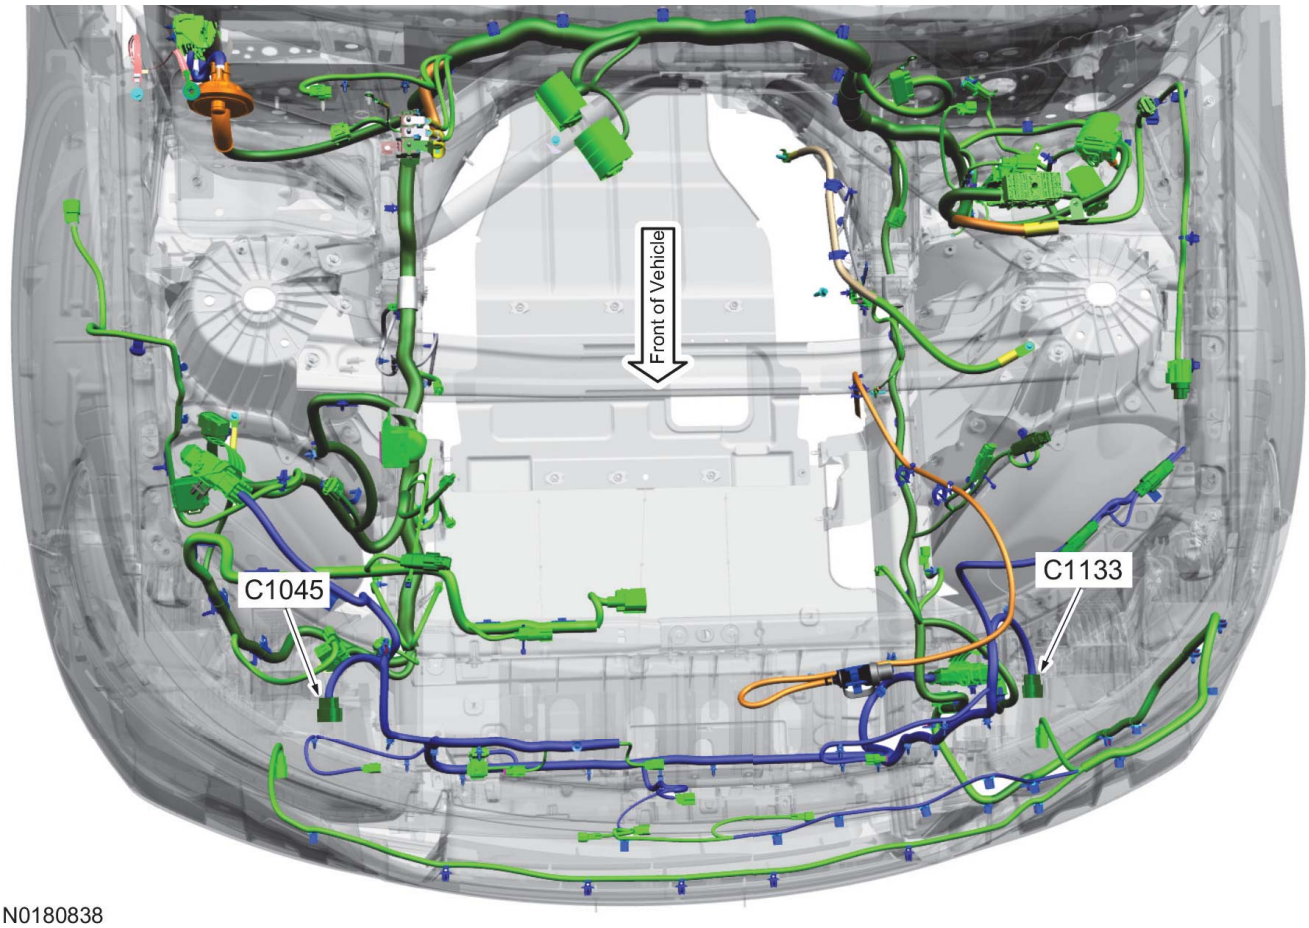

N0180838

 © Copyright Ford 2023 FoMoCo

Section 3: General Electrical Information

RH diagram shown, LH identicle.

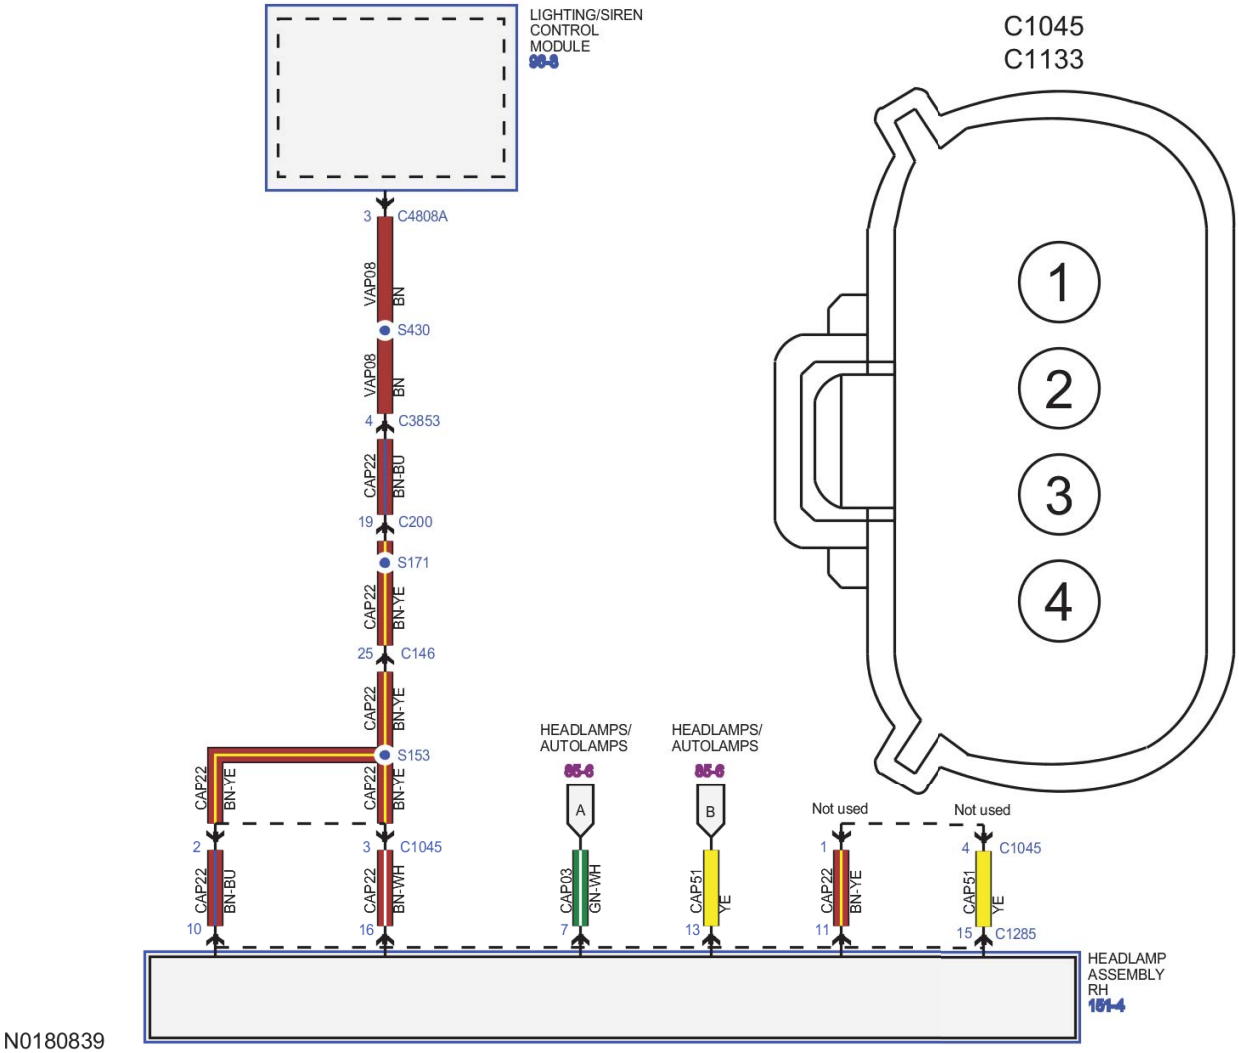

Pin Number	Description	Wire Color
1	H/L, Run/Start, Headlamp LED 4” Flash Red/ Blue	BN/YE
2	Headlamp LED 4” Flash White	BN/GN
3	Headlamp LED 3” Flash Blue	BN/WH
4	Headlamp LED 3” Flash Red	BN/RD

2. The standard set up for the 4” headlamp LED is set to flash White. To change the 4” headlamp LED to flash Red/Blue, remove Pin 2 on the headlamp side of the circuit. Then move Pin 1 to Pin 2.
3. The Standard set up for the 3” headlamp LED is set to flash Red. To change the 3” headlamp LED to flash Blue, remove Pin 4 on the headlamp side of the circuit. Then move Pin 3 to Pin 4.

 © Copyright Ford 2023 FoMoCo

Table of Contents

Contents	PAGE
Section 4: Vehicle Sealing and Vehicle Decommissioning	4-2
Upfitter Sealing Pass-Through Points/Openings	4-2
Sealing Pass-Through Points/Openings	4-2
Liftgate	4-4
Sealing Pass-Through Points/Openings	4-5
Sealing Option For Body Openings/Pass-Through Points	4-5
Decommissioning	4-6
Disable Police Functions	4-7

 © Copyright Ford 2023 FoMoCo

Section 4: Vehicle Sealing and Vehicle Decommissioning

Section 4: Vehicle Sealing and Vehicle Decommissioning

Upfitter Sealing Pass-Through Points/Openings

Aftermarket upfit modification of hybrid interceptor utility vehicles can result in openings that allow external air and its contents to enter the vehicle that have not been sealed to original design intent.

Examples of openings in some areas that were not properly sealed and allowed external air and its contents to enter the cargo area. Proper care and due to diligence must be used on all openings at any location on the vehicle from the dash panel to the rear of the vehicle.

Any and all holes created or existing grommets affected during upfit which are exposed directly or indirectly to outside air MUST be completely sealed using Motorcraft® Seam Sealer (TA-2-B).

Sealing Pass-Through Points/Openings

Some examples from a utility police interceptor that are not properly sealed are shown in the following:

- Any holes in the rear of the vehicle must be sealed.
- Wiring passing through sheet metal and/or existing grommets behind the passenger and driver side tail lamps must be fully sealed using Motorcraft® Seam Sealer (TA-2-B).

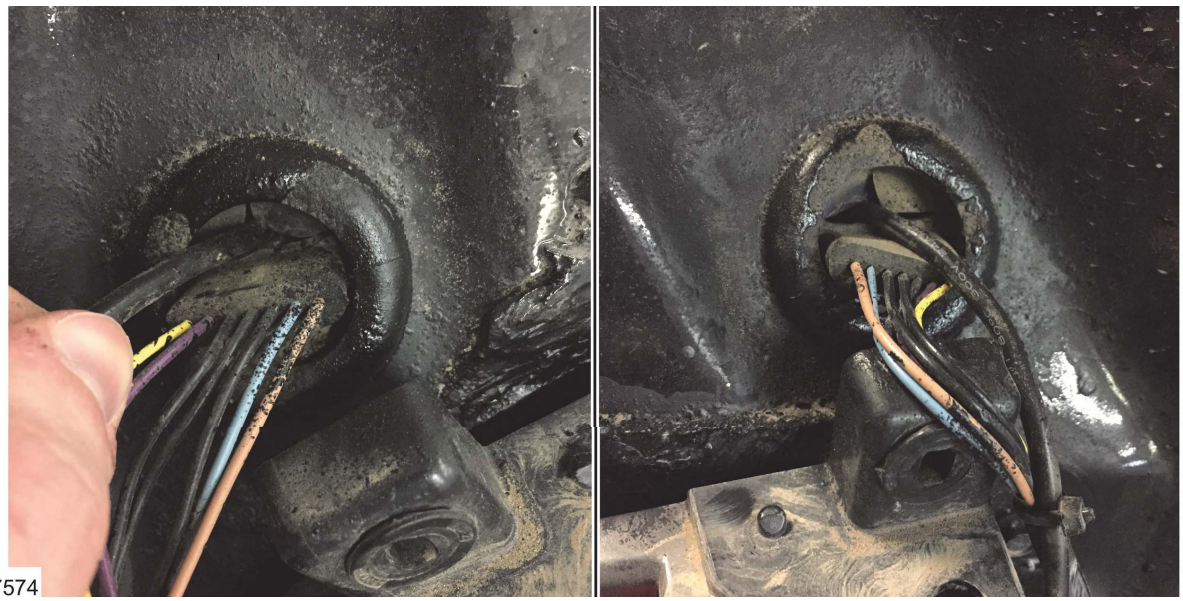

N0177574

Rear Spoiler Removal and Installation

NOTE:
Any time the rear spoiler is removed you MUST replace all retainers and gaskets.

1. Removal of the rear spoiler requires all the gaskets and retainers to be replaced to ensure a proper seal. Kit number LB5B–78442A86–AA will include the following.

   Item 1 — Nine w-clips with foam gaskets installed.
   Item 2 — Three studs with foam gaskets installed.
   Item 3 — Three indicator tab foam gaskets.
   Item 4 — Two piece foam tower gaskets.

 © Copyright Ford 2023 FoMoCo

Section 4: Vehicle Sealing and Vehicle Decommissioning

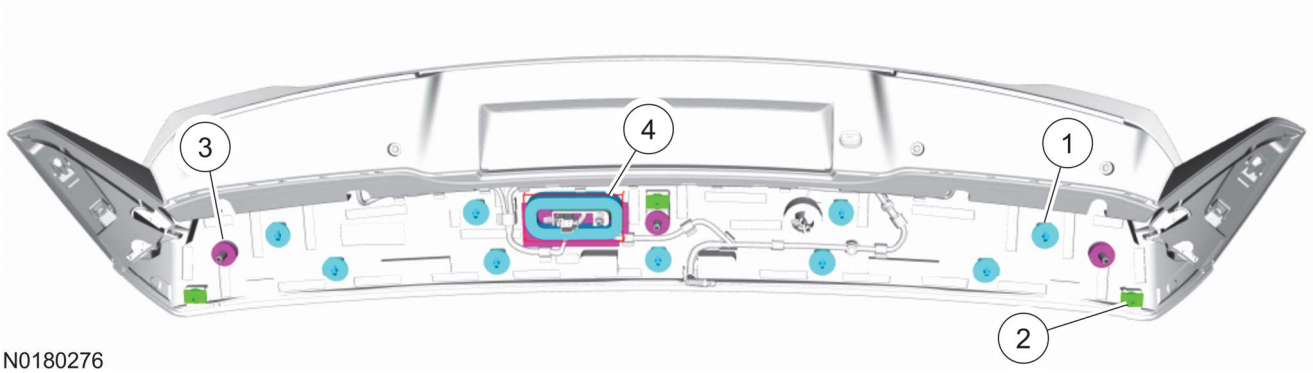

N0180276

2. Foam tower seal is made of two foam seals located near the center of the spoiler.

   Item 1 — Flat gasket that is square in shape and is positioned under the washer lines.
   Item 2 — Oval gasket that is positioned on top of the washer lines to complete the seal.

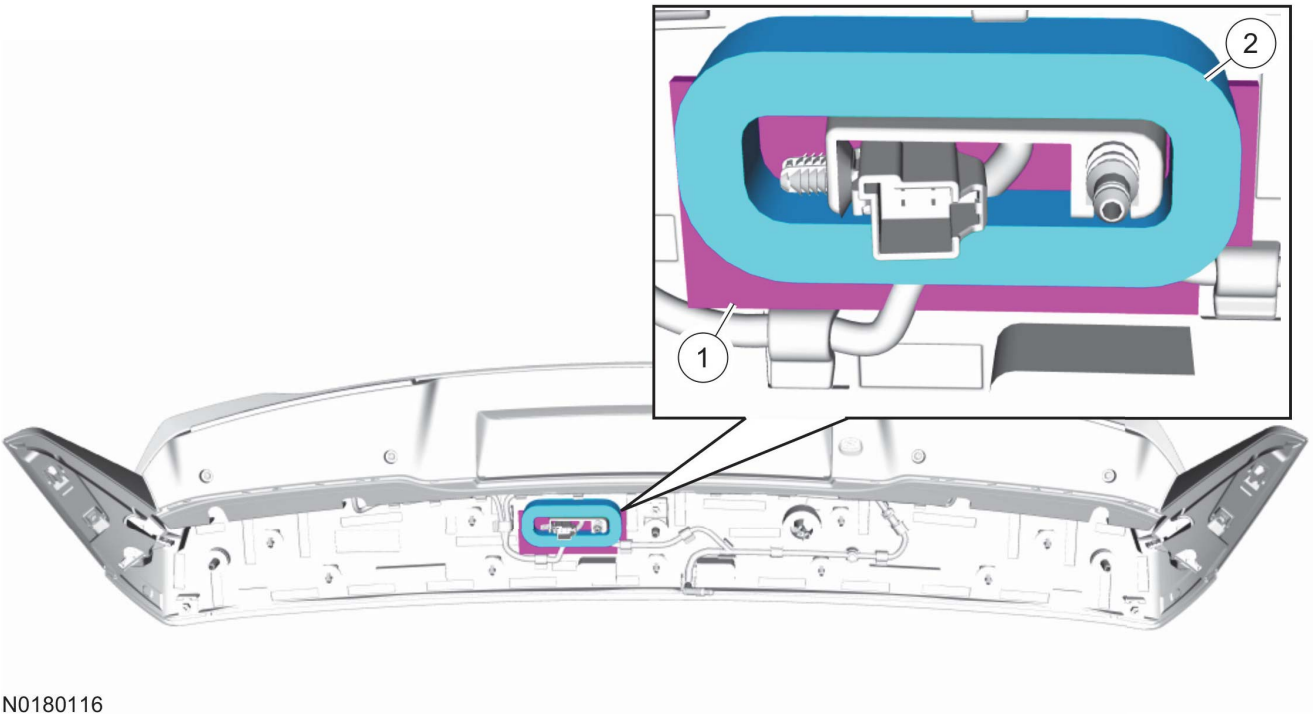

N0180116

3. W-clip retainer locations.

 © Copyright Ford 2023 FoMoCo

Section 4: Vehicle Sealing and Vehicle Decommissioning

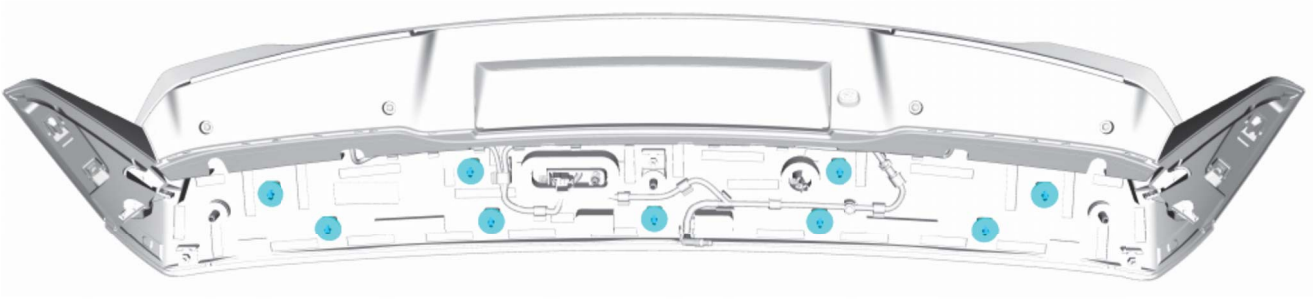

N0180117

4. Indicator tab foam gasket locations.

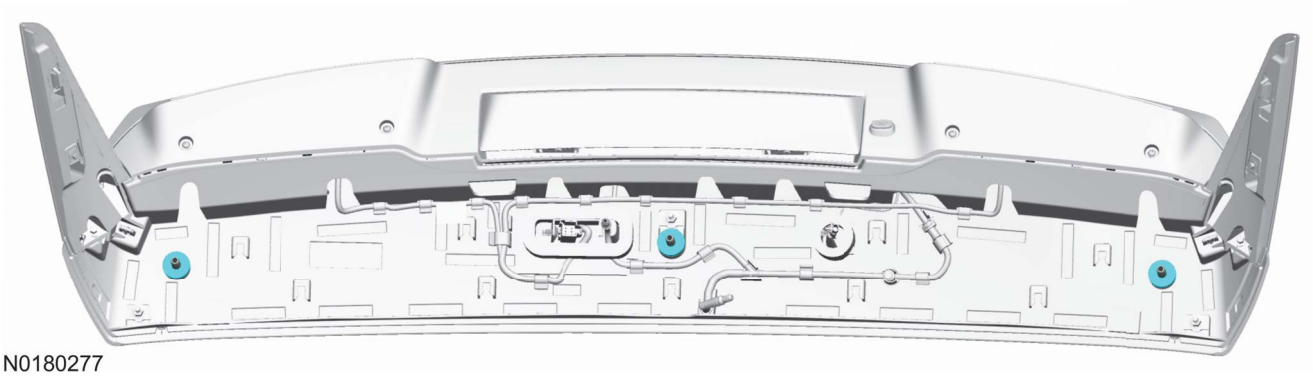

N0180277

5. Retainer stud with foam gasket locations.

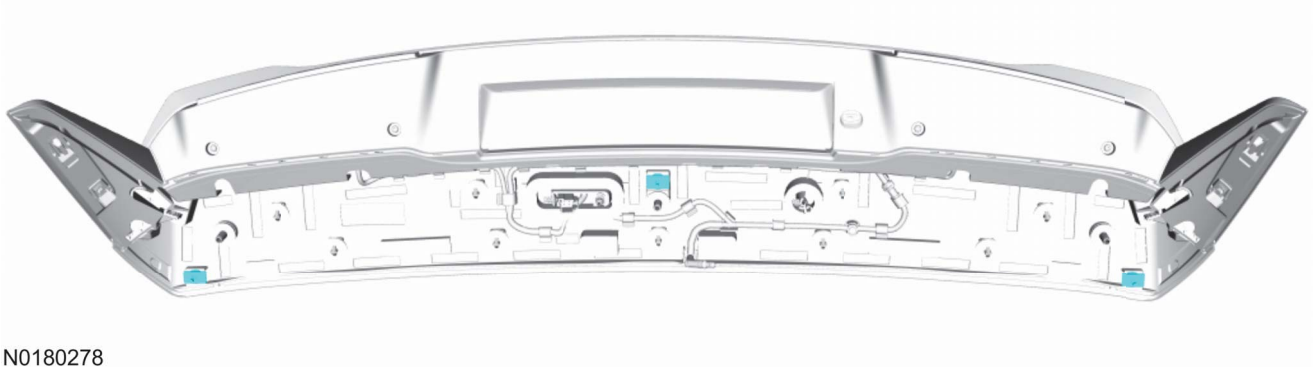

N0180278

Liftgate

Seal any holes in the cargo area of the hybrid interceptor utility with Motorcraft® Seam Sealer (TA-2-B).

If the decklid seal is damaged it should be replaced.

 © Copyright Ford 2023 FoMoCo

Section 4: Vehicle Sealing and Vehicle Decommissioning

N0179157

Sealing Pass-Through Points/Openings

Liftgate Bulb Seal

- If the light bulb seal is damaged, or removed for any reason, it should be replaced and properly seated and sealed.
- If the liftgate is damaged, or removed for any reason, it should be replaced and properly seated and sealed.

Underbody

- Seal any holes found in the body with Motorcraft® Seam Sealer (TA-2-B).
- Replace any damaged parts. The following are some examples:
- — Spare tire tub.
- — Auxiliary A/C pass-through.
- — Air extractors (replace if damaged).
- — Wiring grommets.
- — Body plugs.
- — Floor pan.

Dash Panel

Any seals and/or holes in the dash panel must be replaced and/or properly sealed using Motorcraft® Seam Sealer (TA-2-b).

Sealing Option For Body Openings/Pass-Through Points

- Pass-through or other openings of similar size should be sealed using the recommended foil-backed mastic patch.
- Foil-backed mastic patch should be used to cover and seal body openings.
- Part number for foil-backed mastic patch:
- Following are service part numbers for two different size foil-backed mastic patches: 4L3Z18203A16AA; size of patch - 1.5 x 147 x 330 mm / DA5Z65203A16A; size of patch - 1.5 x 100 x 300 mm

 © Copyright Ford 2023 FoMoCo

Section 4: Vehicle Sealing and Vehicle Decommissioning

Decommissioning

Vehicle Sealing of Aftermarket Equipment

At the end of its useful life as a police vehicle, many vehicles are decommissioned by having the lights, wiring and other equipment removed. The vehicles are sold for other uses such as retail applications. The openings remaining in the body/components are potential leak paths for exhaust gas into the cabin under certain conditions. These openings must be sealed prior to the vehicle going to auction or any other application.

When customized equipment has been removed from the vehicle, body panels and seals may be compromised. Thoroughly inspect the vehicle for any signs where the equipment has been removed, such as holes and damage to body seals.

Any openings should be sealed with a plug and a sealant. The opening can be modified to enable a plug to seat properly promoting a better sealing surface. The sheet metal surface with the opening should be treated to prevent corrosion prior to inserting the plug and sealant.

Any items that remain on the vehicle must be inspected and any sign of damage repaired immediately. Failure to follow this instruction may result in water and exhaust fumes entering the passenger compartment.

See your authorized Ford dealer for more information and direction regarding proper sealing procedures.

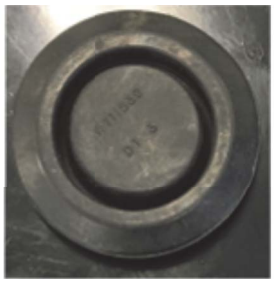

N0178256

Common Ford Plug Part Number	Hole Diameter
W716284–S	0.859 inches / 21.83 mm
W714104–S	1.07 inches / 27.25 mm
W711539–S	1.378 / 35.0 mm
W651021–S	1.683 inches / 42.75 mm

Tools For Creating A Circular Opening

Tools that can be used for creating and/or modifying an existing opening for a plug are a Knockout Punch or Step Bit.

 © Copyright Ford 2023 FoMoCo

Section 4: Vehicle Sealing and Vehicle Decommissioning

N0178257

Disable Police Functions

- Procedures are under way to decommission the following Police Features:
- Police Idle
- Rear View Camera on Demand
- Perimeter Alert/Boundry Alert
- Procedures will be published in Police Bulletin P-030 when complete

Dark Car

Authorized personnel must use a diagnostic scan tool to decommission the Dark Car feature.

OBD-II Split Connector

Remove the OBD-II split connector cable prior to initial sale to the public sector.

Police Engine Idle

Authorized personnel must use a diagnostic scan tool to decommission the Police Engine Idle feature.

Police Perimeter Alert

Authorized personnel must use a diagnostic scan tool to decommission the Police Perimeter Alert feature.

Pre-Collision Assist Disable

Authorized personnel must use a diagnostic scan tool to decommission the Pre-Collision Assist Disable feature.

Rear Camera on Demand

Authorized personnel must use a diagnostic scan tool to decommission the Rear Camera on Demand feature.

Autonomous Emergency Brake (AEB)

Authorized personnel must use a diagnostic scan tool to decommission the Autonomous Emergency Brake feature.

 © Copyright Ford 2023 FoMoCo

Table of Contents

Contents **PAGE**

Section 5: Electrical 5-2
- Control Modules — Red Area 5-2
- Controller Area Network (CAN) Bus 5-2
- General Guidelines 5-2
- Equipment Grounding Guidelines 5-2
- Wire Insulation 5-2
- Terminals and Connectors 5-3
- Circuit Protection and Electrical Load 5-3
- Wire Protection Requirements 5-4
- Electrical Protection 5-4
- Mechanical/Environmental Protection 5-4
- Grommets and Sealing Requirements 5-4
- Wire Routing 5-5
- Wire Retention and Routing 5-6
- Splices and Repairs 5-7
- Replacing the Ford OEM antenna to an aftermarket antenna 5-12
- Replacing non-SYNC (CHR) radio antenna with an aftermarket antenna 5-12
- Police Interceptor Utility — Wiring Diagram Package Options 5-13
- Auxiliary Lamp LEDs (Stand-Alone Option) 5-13
- Front Lighting Package (Stand Alone Option) 5-14
- Tail Lamp LEDs (Stand-Alone Option) 5-15
- Liftgate Lighting Package (Stand-Alone Option) 5-16
- Gateway Connector (Option 61B) 5-17
- Side View Mirror LEDs (Stand-Alone Option) 5-19
- Rear Quarter Window LEDs 5-20
- Ultimate Wire Harness (Wiring and connectors ONLY) 5-21
- Ready-for-the-Road (Includes Lights and Driver Side Siren only) 5-22
- Lift Gate Applique LEDs (Stand-Alone Option) 5-23
- Spot Lamps (Stand-Alone Option) 5-24
- Park Detect & Police Start 5-25
- Driver Door Ajar 5-26
- Steering Wheel Switches Output 5-27
- Brake Output 5-28
- Base Vehicle — No Wiring Options 5-29
- Wig-Wag Headlamps Control 5-30
- Horn Ring Circuit 5-31
- Location of siren connector 1 5-32
- Location of siren connector 2 5-33
- Wire Diagram 5-33

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Section 5: Electrical

Control Modules — Red Area

Do not install any components into the control modules or module harness. Connecting into this system may affect control module operation. For example, connecting aftermarket electrical equipment into the brake light circuit or any other circuit which is connected to the PCM, anti-lock brake computer, air bag system or any other vehicle system will cause vehicle malfunction.

Controller Area Network (CAN) Bus

NOTICE:
Wiring faults in the CAN bus may shut down the vehicle and prevent further operation.

Do not splice or connect any equipment to the CAN bus wiring.

General Guidelines

- Do not modify the cooling system. High voltage vehicle components may be damaged if any cooling system modifications are attempted.
- Do not backprobe, splice or repair the high voltage system (orange) wiring/cables.
- Do not mount to or modify the high voltage system (orange) wiring/cables in any way.
- Do not cut, weld or screw into the HVTB case or penetrate the batteries in any way.
- Air bag restraint systems must remain intact as received from Ford Motor Company. Before modifications are done to the vehicle, the system must be depowered by following the instructions provided in the current Workshop Manual.
- Provide circuit protection (fuses) for all wiring. The fuse rating should not exceed either the rated wiring current capacity or the total current requirements for all the add-on components on the circuit. Install fuses as close to the point of tapped power as possible.
- Provide protective covering in all areas that could be damaged during normal equipment installations.
- Do not allow control panels attached to the instrument panel to protrude into the driver and passenger air bag deployment zones. For additional information, refer to Section 4: Reference in this guide.
- Do not install switches and gauges in the driver or passenger knee impact areas.
- Provide adequate retention for wiring harnesses so they are clear of bolts, corners or edges which could abrade the wires during normal vehicle operation.
- Properly secure all wiring relocated or removed while working behind the instrument panel to prevent chafing, squeaks and rattles.
- Anticipate misrouted wiring situations and protect all wiring from penetration by screws and raw edges.
- Weather-seal all electrical connectors exposed to the elements.
- Do not use quick splice connectors or wire nuts.
- Install the fuse panel so fuses are readily accessible.
- Make sure that connections are easily accessible for assembly and service.
- Inspect all Ford gauges, lights and switches for correct operation after instrument panel work is performed.
- Make sure submersible connectors do not lose their seals under extreme assembly conditions such as bending wires 90 degrees immediately after the connector.
- Whenever using connectors, use a socket (female) connector on the electrical source side and a plug (male) connector on the electrical load side to reduce the possibility of a short circuit when disconnected.
- Adherence to the above guidelines is not to be construed as approval by Ford Motor Company of any specific revisions or additions to the vehicles original electrical system.
- Document all revisions to the electrical system and place with the vehicle Owner's Literature. Color code and/or label all revisions or additions to wiring.
- Disconnect the negative battery cable of vehicles stored on-site to reduce the possibility of draining the battery by lights or other equipment.

Equipment Grounding Guidelines

- Do not ground the body to the transmission or transmission crossmember. Ground accessories to the chassis or the vehicle battery.
- Splicing into circuitry relating to the electronic engine and/or transmission control systems is not acceptable because of the adverse effect on the electronic system operation.
- Adequately protect electrical connections exposed to the elements.

Wire Insulation

- Polyvinyl chloride (PVC) rated at 90°C (194°F) is the standard wire insulation acceptable for inside body use but is not acceptable for underhood/underbody wiring.

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

- Hypalon insulation should be used on links only (Ford specification ESB-M1L54-A).
- Cross-linked polyethylene (XPLPE or SXL) rated at 125°C (257°F) is the required insulation for underhood/underbody applications (Ford specification ESB-M1L123-A).
- GXL can be used as an alternate wire (Ford specification ESB-M7L85B) as long as the concentricity specifications are met. To provide a water-resistant seal in conjunction with crimp connectors, a Duraseal® crimp connector is recommended since it is designed to account for outside wire diameter that is smaller than the present SXL wire.

Terminals and Connectors

Connector Types:

- Submersible (sealed) — A connector that is capable of being immersed in water.
- Weather-resistant — A connector that will retain its sealing and connection qualities while being exposed to adverse weather conditions.
- Duraseal® crimp — A supplier trade name for a sealed wiring repair or splice.

When a connection is not defined (typical situation — harness-to-harness connectors), the following suggestions should be implemented:

- Determine the connector type. If the vehicle will be located in an area exposed to water, salt accumulation and/or high temperatures (such as underhood, exterior panels and footwells), use a sealed connector. Use in-line connectors with secondary locks to prevent the terminal from being pushed out.

— Do not use single wires smaller than 14 gauge in a 2-way or larger weather-resistant connector (the very large style), since the wire may break during disengagement.

— Use Hypalon, XLPE or Elexar insulation in submersible connectors to maintain sealing integrity. PVC is not acceptable because its properties allow it to set in a deformed pattern, therefore compromising the integrity of the seal.

- Determine the terminal type. Base your decision on wire gauge, current carrying capacity, connector type and insulation type.

— Use non-detent low insertion force terminals whenever possible.

— Do not use low insertion force female terminals in weather-resistant connectors.

— Analyze circuit requirements (signal levels, current, voltage) to determine the proper plating material (such as gold). Use of non-plated terminals is not recommended.

— Do not use plugs to seal holes in micropin connector grommets. It is very easy to forget to insert them during manufacturing and ruin the seal. Use a grommet with only the necessary number of holes or use dummy wires at least 600 mm (24 in) long.

— Fully align connectors prior to terminal connection — terminal cavities should have minimum tolerance to prevent terminals from floating, bending or pin push-out during mating/engagement.

— Make sure connectors of similar type and color are identifiable to the operator to eliminate crossed connections and minimize assembly time. Avoid using similar types and colors of connectors close together.

— Be sure that connectors have positive locking devices that allow easy installation with a low insertion force and easy removal. The connector snap should be easily felt and heard.

— Eliminate the use of edgeboard, tang-type and molded-over connectors. The use of blade-type weather-resistant connectors is restricted to high-current applications which cannot be handled by submersible connectors.

Circuit Protection and Electrical Load

- Modification to the vehicle's existing low voltage (12 volts) wiring should be done only with caution and careful consideration of effects on the completed vehicle's electrical system. Anticipated circuitry should be studied to determine the required circuit protection and to avoid feedback loops.
- Added circuitry must be protected either by a base vehicle fuse or circuit breaker, or by a similar device supplied by the modifier.
- When adding loads to a base vehicle-protected circuit, make sure the total electrical load through the base vehicle fuse or circuit breaker is less than the devices load rating.
- Use 80% of the fuse rating to determine maximum steady state load to reduce nuisance fuse failures.
- Use 135% of the fuse rating when sizing wiring to protect the circuit in the event of an overload. Fuses will last for one hour at 135% of their rating.

— Total current draw is the sum of the base vehicles circuit current requirement (measured with an ammeter) and the anticipated add-on component current requirements.

— Never increase the rating of a factory installed fuse or circuit breaker.

— If the total electrical load including additional electrical components, on any circuit, is less than the fuse protection rating or the capacity of some limiting component (switch, relay), the items to be added can be connected directly to that circuit. The headlamp switch circuits should never have additional lighting or electrical components directly connected.

— Added devices that exceed the current capabilities of the factory-installed system are best controlled through the use of a relay or separate switch. The coil of the relay can be fed from the circuit in the factory harness (now acting as a signal circuit) with added wiring providing feeds to the added electrical device. The relay selection is important and depends on current requirements, number of cycles expected in the relay lifetime, whether the relay is to be operated intermittently or for long periods of time and whether the relay is exposed

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

to weather conditions or is installed in a protected area. When the current requirements of a circuit exceed the capacity of an available relay, the load should be reduced or divided through the use of additional relays.

Wire Protection Requirements

General Notes

- Anticipate problems and design accordingly. Try to anticipate what could go wrong and modify your designs to address any adverse impact.
- Review all connector applications and electrical systems to determine the need for solder, grease, weather-resistant or sealed connectors. Make sure components and wire insulation are compatible with greased connectors (important for long-term durability).
- Make sure that drip loops or other means are provided to prevent water leakage into the vehicle through wiring assemblies that pass through the dash panel.
- Use greased or sealed connectors in floor pan troughs which are subject to moisture coming through the carpeting.
- Use XLPE insulation for uncovered runs that exceed 305 mm (12 in).

Electrical Protection

- Properly route wires away from noise-generating wires or components. However, if routing near noisy wires or plugging into noisy components is unavoidable, design additional protection into the harness.
- Electromagnetic interference (EMI) shielding — Consider shielding if you must route close to high-current or noisy circuits. Use shielded wire and ground one side. Seal all splices in wire assemblies that use bare coaxial shielding (braid or tape) for EMI suppression, and insulate or tape over all shielding ends that terminate near any open connectors. This prevents splice and terminal shorts to the shielding. Minimize the length of conductors which extend beyond the shield. Failure to do this reduces the effectiveness of the shield.
- Spike suppression, in general, is accomplished by connecting a diode or resistor-diode combination across the terminals of the noisy component. The diode should be sufficiently close to the component (both electrically and physically) so that inductive spikes are clamped off. Make sure the diode is connected with the proper polarity.

Proper routing and retention reduces the likelihood of chafing or pinching. When this ideal routing is unattainable, the following additional protection is needed:

Mechanical/Environmental Protection

NOTE:
This is not meant to be an all-inclusive list of methods for physically protecting the wires. There are other means of protection available that are not listed.

- Tape — Tape is the most basic means of protection. It contains the wires in a loose bundle and provides limited environmental protection. It does not protect against chafing and pinching.
  - Kendall polyken fiberglass base tape (Ford specification ESB-M3G38-A) is used for engine compartment applications. This durable tape provides protection against cut-through and abrasion commonly found in underhood applications.
  - Polyken 267 is a substitute tape that may be used in lower temperature areas of the engine compartment (apron area).
- Convolute — Use convolute for all underhood/underbody applications or when increased temperature, abrasion or pinch resistance is required. Convoluted tubing comes in different diameters and materials to accommodate different temperature ranges and harness sizes.
  - Use polyethylene convolute when abrasion is the only consideration; this convolute is adequate up to 96°C (205°F) maximum. Use nylon convolute when underhood/underbody or abrasion and temperature are considerations; nylon convolute is adequate up to 177°C (350°F) maximum.
  - On all engine-mounted wiring or bend points, use vinyl tape on the outside of the convolute to prevent wiring from looping out. This tape must be able to withstand temperatures 135°C (275°F) or higher.
  - Tape convolute junctions with abrasion-resistant tape (Polyken 267, fiberglass).
- Scroll — Similar to convolute, but without the ridges. Scroll is used where harness rigidity is required, especially for maintaining critical locator dimensions. Use scroll for short lengths only, as it is inflexible.

Grommets and Sealing Requirements

Any additional wiring routed through sheet metal must pass through a grommet that both seals the opening and locates the wire(s). Two-piece grommets (rubber with plastic inserts) are recommended to facilitate installation and retention.

- Locate grommets so they are accessible for proper seating (achieved by pulling) in sheet metal holes.
- Ramp grommets at the insertion end to facilitate installation and sealing.
- Be sure the direction of the hole punch is in the direction of grommet seating and the hole is burr-free.
- Make sure the grommet molding compound adheres to the harness to prevent slippage.

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

- Make sure the grommet will withstand the environment (temperature, wet conditions).
- Be sure the holes are large enough to allow the installation of the harness without causing circuit damage.
- Use adhesive tape on main trunks or branches with at least a 50% overlap to prevent wicking through grommets. Be certain to diaper-wrap the takeouts.

Wire Routing

⚠ WARNING:
Do not place electrical component attachments or ground screws adjacent to vehicle fuel tanks, fuel filler pipes, fuel lines, fuel vapor lines or carbon canisters. Failure to follow these instructions may result in severe personal injury in the event of a collision.

Wire harness routing should conform to the following:

- Protect wires routed through holes in sheet metal or castings with a grommet whether or not conduit is used (see figure below).

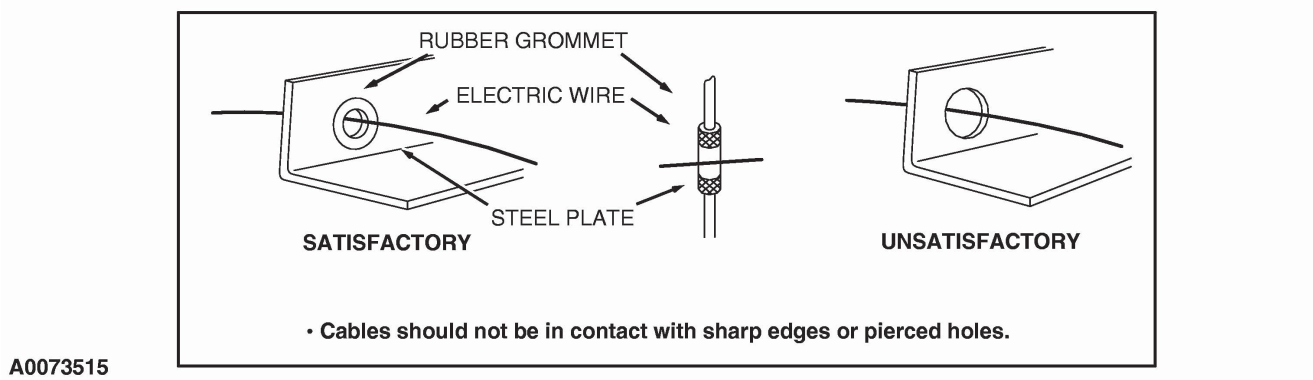

A0073515

- Route wires to avoid metal edges, screws, trim fasteners and abrasive surfaces. When such routing is not possible, use protective devices (shields, caps) to protect the wires. Cover metal edges with a protective shield and fasten the wiring within 76 mm (3 in) on each side of the edge (see figure below).

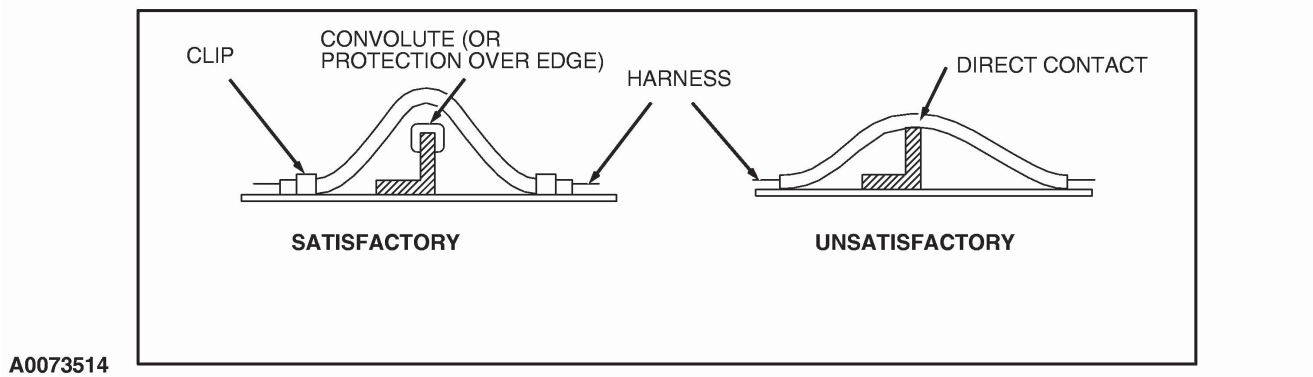

A0073514

- Route wires to provide at least 76 mm (3 in) of clearance to moving parts in their extreme movement location, unless positively fastened and protected by conduit.
- Avoid wire routing without conduit in areas where temperatures exceed 82°C (180°F). Heat insulation and heat shields must be used on the wires routed in high-temperature areas.
- Make certain that all underhood or underbody wiring is cross-linked polyethylene high-temperature insulation wire 135°C (275°F) (minimum rating) consistent with SAE specification J1128 Type SXL wire. Normal PVC wire must not be used in underhood or underbody applications.
- Make sure all ground locations are readily accessible for installation, service and verification.
- Do not place ground attachments in high splash areas.
- Underhood/underbody wiring must be routed in conduit for protection. Minimum conduit rating is 177°C (350°F).

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Wire Retention and Routing

Use the following criteria to determine the location of retainers:

- Size and weight of wire bundle.
- Holes with poor accessibility that prevent installation of locators.
- Movement of wires that can result in abrasion, squeaks and rattles.
- When wiring is routed between 2 members where relative motion can occur, the wiring should be secured to each member with enough wire slack to allow flexing without damaging the wire.
- Wiring exposed to weather must provide a drip loop to prevent moisture from being conducted into the device through the wire connection (see figure below).

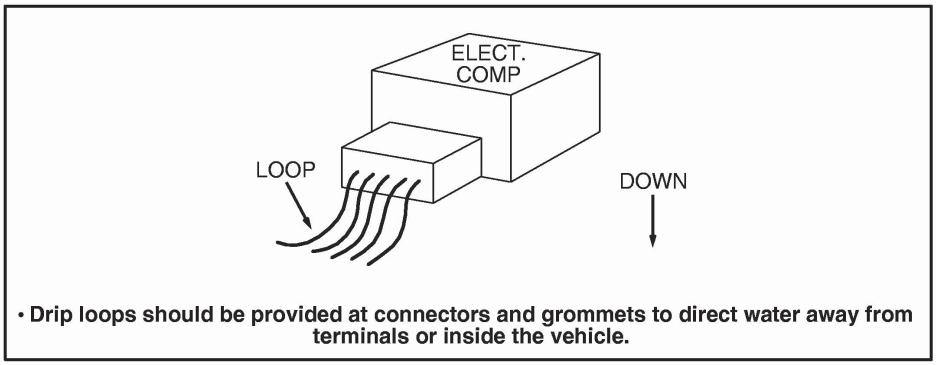

• **Drip loops should be provided at connectors and grommets to direct water away from terminals or inside the vehicle.**

A0073517

- Avoid routing wires into areas exposed to wheel splash. When such routing cannot be avoided, adequate clipping and/or protective shields are required to protect the wires from stone and ice damage. Allow adequate slack in wiring between the engine and stationary components to compensate for engine roll.
- Avoid routing wires under the frame side members or at points lower than the bottom frame flange.
- Use plastic zip straps for bundling only (securing to other wires).
- The wire retainers and grommets installed by the assembly plant are usually designed to accommodate only the Ford-installed wires. Additional wiring or tubing should be retained by additional clips. When added wires or tubes are routed through sheet metal panels, use new holes with proper wire protection and sealing.

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

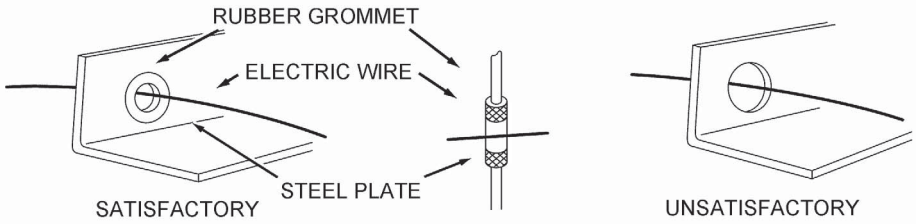

• Cables should not be in contact with sharp edges or pierced holes.

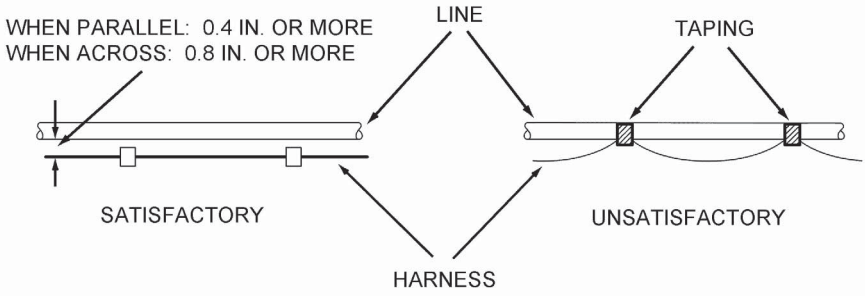

• Harnesses should not be taped to fuel lines or other lines. A sufficient clearance should be maintained between harness and lines.

N0070449

For retainer screws, the following guidelines apply:

- Avoid using fasteners that are too long for the application or are in an area which might damage vehicle components, including wiring, brake lines, fuel tank and lines, powertrain components, exhaust system and suspension.
- Do not use pointed screws for attachments. Make sure that screws used in the vicinity of the wiring are blunt-ended.
- To minimize the potential for wiring shorts, do not use drill point screws. Trim components (including wiring shields) should use pin-type attachments instead of screws.
- Always check areas that screws protrude into for verification that an interference condition to other components does not exist.
- Make sure that retainers used are capable of withstanding the environment over the vehicle's life expectancy.

Splices and Repairs

⚠ WARNING:
Do NOT splice into or repair high voltage (orange) wiring/cables. The high voltage in this system is approximately 300 volts DC. Failure to follow these instructions may result in severe personal injury or death.

- Stagger the splices within a harness to reduce increased harness diameter. Splice only on straight areas as installed, not on bends.
- Strip wire ends, making sure that individual conductor strands are not damaged.

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

- When soldering, make sure an adequate mechanical joint exists before applying solder. Use only resin-core solder. Acid-core solder should not be used since it may result in corrosion.
- For crimp joints, use butt-type metal barrel fasteners and the proper tool at the appropriate setting for the wire size (such as Motorcraft® Crimp Tool S-9796) specifically designed for this type of work.
- Make sure splice joints are adequately sealed and insulated. In an outside environment, use Duraseal® butt connectors or equivalent. A durable substitute splice joint can be achieved by using a bare metal barrel, crimping, flow-soldering and covering with shrink tubing. Quality electrical tape can be used inside the vehicle but is not recommended for an outside environment.
- Make sure the new wire is not a lesser gauge than its original mating wire.

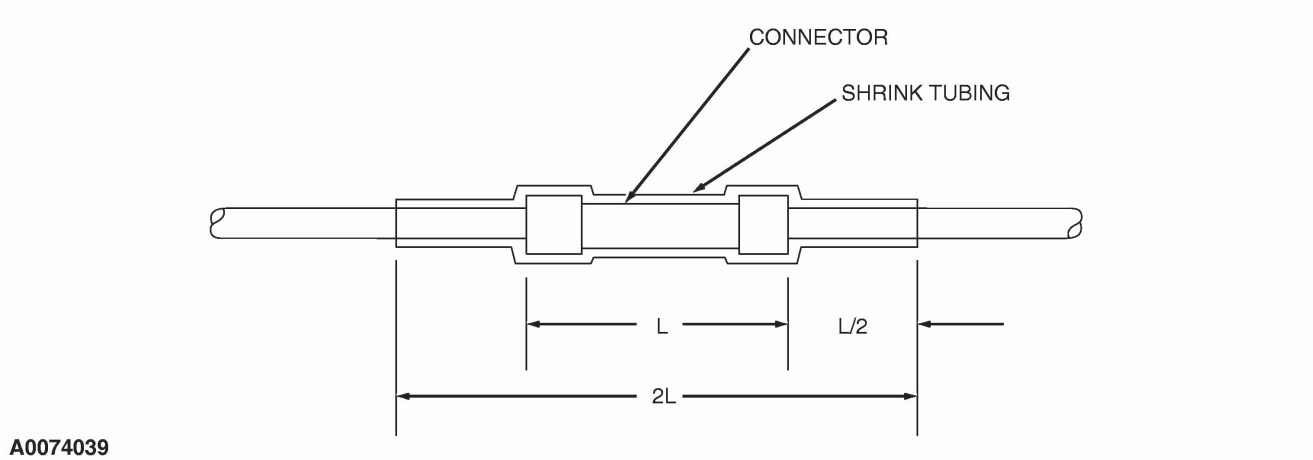

A0074039

Recommended Splicing Method — Solder (For 16 AWG and Smaller Diameter Wire Only)

1. Disconnect the battery ground cable.
2. Strip wires to appropriate length.

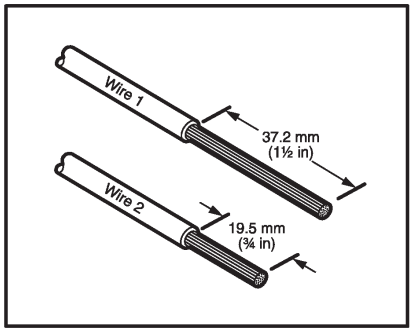

A0075761

3. Install heat shrink tubing.
4. Twist the wires together.
5. **NOTE:**
   Use resin-core mildly-activated (RMA) solder. Do not use acid-core solder.

   Solder wires together.

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

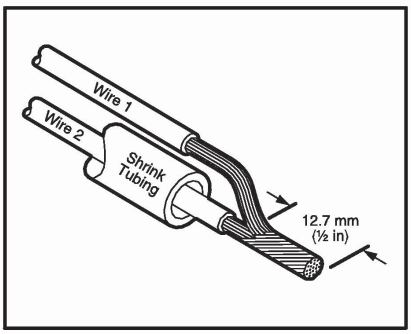

A0075762

6. **NOTE:**
   Wait for solder to cool before moving wires.

   Bend wire No. 1 back in a straight line.

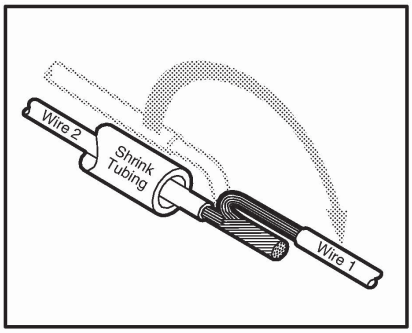

A0075763

7. **NOTE:**
   Overlap tubing on both wires.

   Evenly position heat shrink tubing over wire repair.

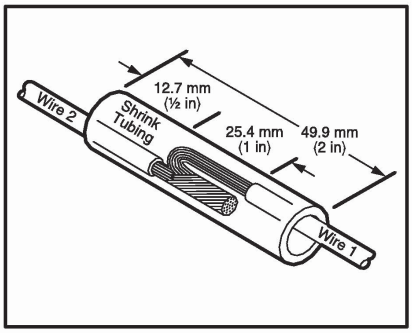

A0075764

8. Use a shielded heat gun to heat the repaired area until adhesive flows out of both ends of heat shrink tubing.

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

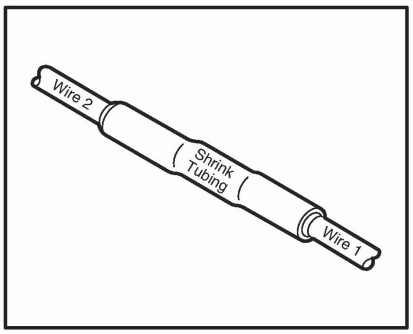

A0075765

9. Reconnect the battery ground cable.

Sealed Connectors

Ford Part Number	Part Name	Class
E6FZ-14488-A	Butt Connector Gauge: 18-22, Color: Red	C
E6FZ-14488-B	Butt Connector Gauge: 14-16, Color: Blue	C
E6FZ-14488-C	Butt Connector Gauge: 10-12, Color: Yellow	C

Heat Shrinkable Tubing (Heat Shrink) (Ford Specification ESB-M99D56-A2)

Heat shrinkable tubing is available in various diameters for different splice sizes and configurations. When shrunk, it forms a small, flexible hermetic seal.

Other methods (tape, PVC mold) do not provide a hermetic seal and are not recommended. Splice balancing is critical with heat shrink insulation. If the splice is extremely unbalanced (more circuits on one side than the other), heat shrink insulation will not provide a proper seal. Evaluate the use of double terminals instead of splices where practical in these situations.

Recommended Splicing Method — Crimp (For 10 - 22 AWG Diameter Wire to Like Wire Diameter)

1. Disconnect the battery ground cable.
2. Strip wires to appropriate length.
3. Install heat shrink tubing.

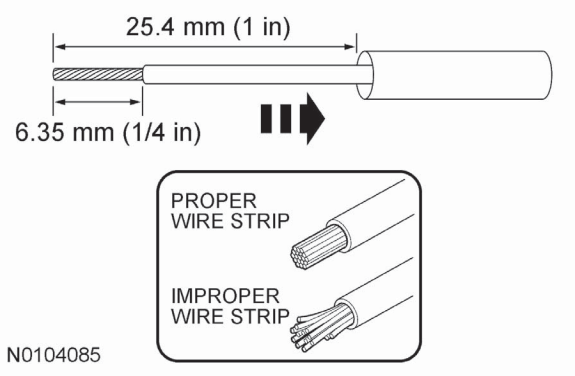

4. Select the appropriate wire splice for the wires to be spliced from Rotunda Wire Splice Kit 164-R5903.
5. **NOTE:**

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Rotunda Pro-Crimper 164-R5901 supplied with the wire splice kit is the only tool that can be used with these splices.

Identify the appropriate chamber on the Rotunda Pro-Crimper by matching the wire size on the dies with the wire size stamped on the butt splice.
(1) Cavity
(2) Indenter

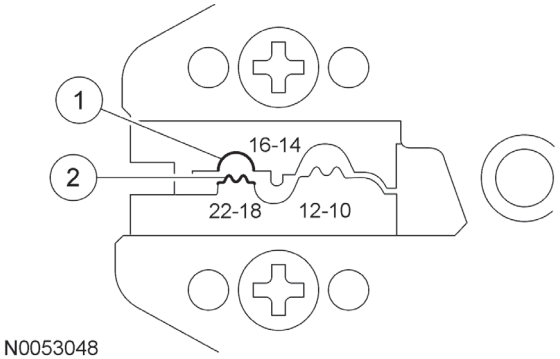

6. Crimp the connector.
   (1) Center one end of the wire splice in the appropriate crimping chamber.
   (2) Insert stripped wire into the barrel.
   (3) Holding the wire in place, squeeze the tool handles until the ratchet releases.

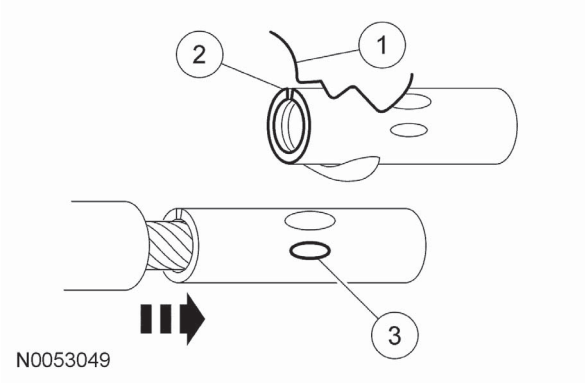

7. Repeating Step 6, crimp the other half of the splice.

8. Check for acceptable crimp.
   (1) Crimp should be centered on each end of the butt splice.
   (2) Wire insulation does not enter butt splice.
   (3) Wire is visible through inspection hole of splices.

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

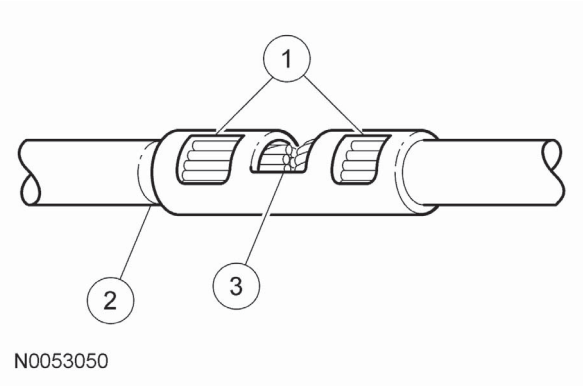

9. Evenly position supplied heat shrink tubing over wire repair.
10. Use a shielded heat gun to heat the repaired area until adhesive flows out of both ends for the heat shrink tubing.

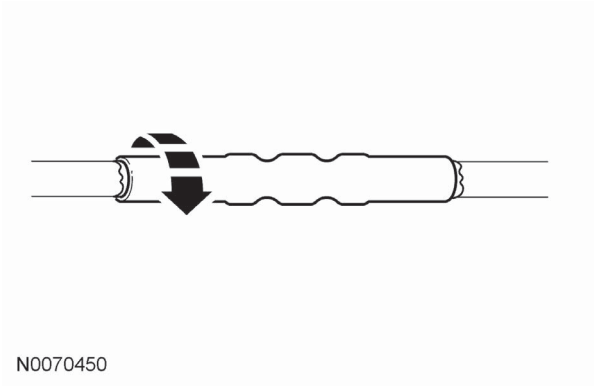

11. Reconnect the battery ground cable.

Replacing the Ford OEM antenna to an aftermarket antenna

NOTE:
With SYNC based radio – it is NOT possible to adjust the date on the SYNC unit with the control panel.

To be able to change the date on the SYNC unit, use following process

- Park the vehicle in an open area to get a GPS signal and provide the correct date
- Leave the key in “ON” position
- Disconnect the OEM antenna
- Replace the antenna with aftermarket antenna

NOTE:
However every time the battery gets disconnected (or drops below 9V) the date will revert back to 01-01-2000 so they would have to reconnect the OEM antenna each time the battery cable is reconnected to allow the Date to update via GPS signal. Not a very robust work-a-round but there is no alternative other than leaving the date incorrect.

Replacing non-SYNC (CHR) radio antenna with an aftermarket antenna

Procedure for updating the displayed date

- RADIO can be ON or OFF
- Settings
- Clock settings

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

- Date

Police Interceptor Utility — Wiring Diagram Package Options

Front Interior Visor Light Bar (LED) Option 96W and Rear Spoiler Traffic Warning Lights (LED) Option 96T

Setup and Configuration Information in Police Bulletin P-029. https://fordbbas.com/bulletins

Auxiliary Lamp LEDs (Stand-Alone Option)

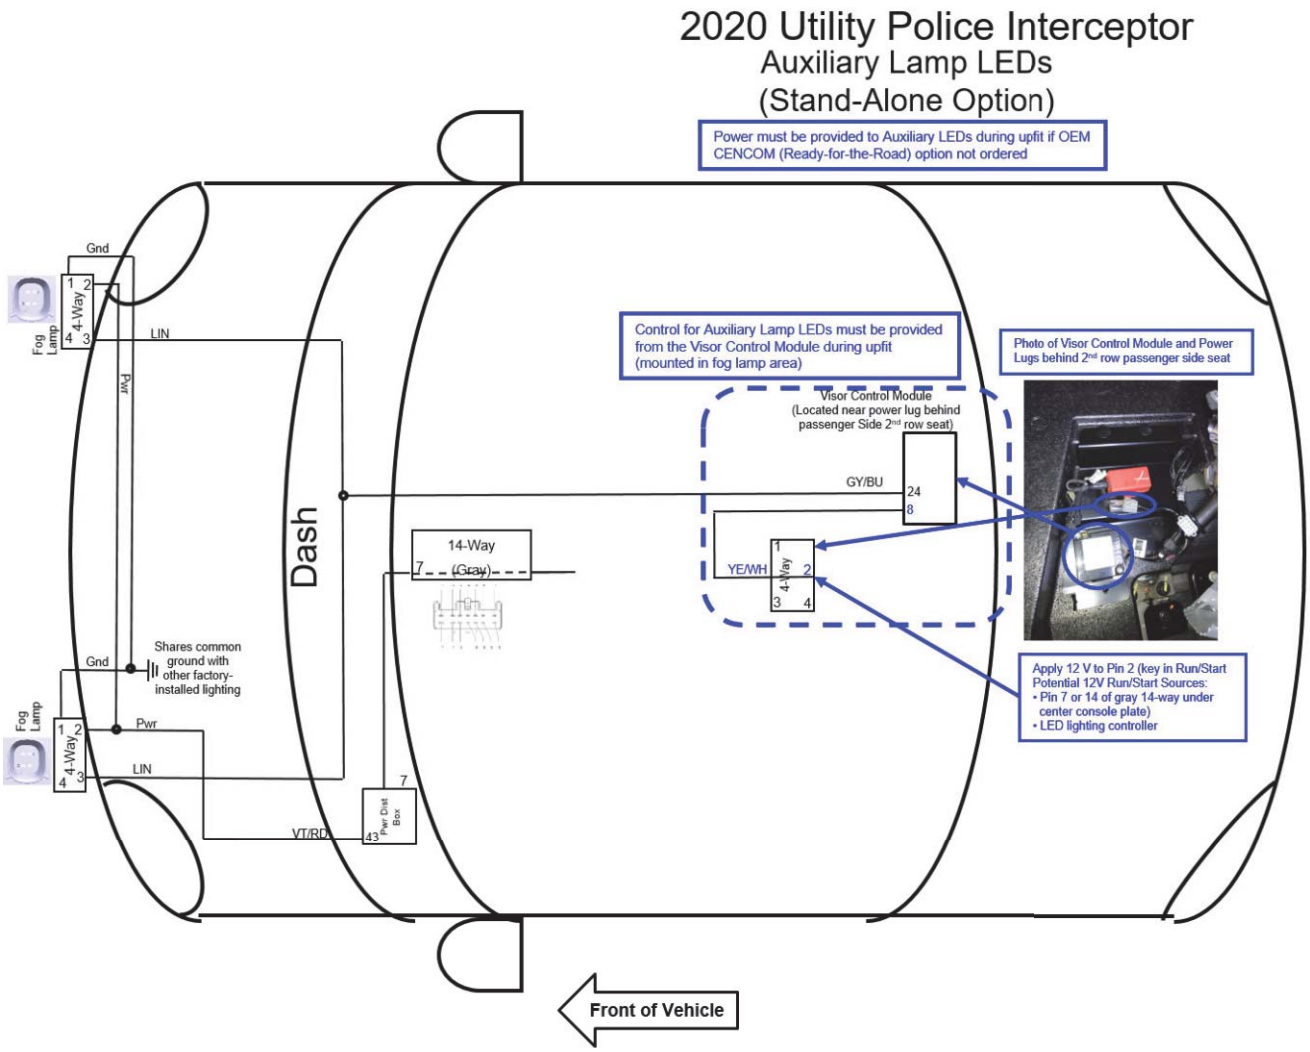
2020 Utility Police Interceptor
Auxiliary Lamp LEDs
(Stand-Alone Option)
Power must be provided to Auxiliary LEDs during upfit if OEM CENCOM (Ready-for-the-Road) option not ordered
Control for Auxiliary Lamp LEDs must be provided from the Visor Control Module during upfit (mounted in fog lamp area)
Photo of Visor Control Module and Power Lugs behind 2nd row passenger side seat
Visor Control Module (Located near power lug behind passenger Side 2nd row seat)
Gnd
Fog Lamp
4-Way
LIN
Pwr
Dash
14-Way
7
(Gray)
GY/BU
24
8
YE/WH
Shares common ground with other factory-installed lighting
Apply 12 V to Pin 2 (key in Run/Start
Potential 12V Run/Start Sources:
• Pin 7 or 14 of gray 14-way under center console plate)
• LED lighting controller
VT/RD
43
Pwr Dist Box
Front of Vehicle

N0182981

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Front Lighting Package (Stand Alone Option)

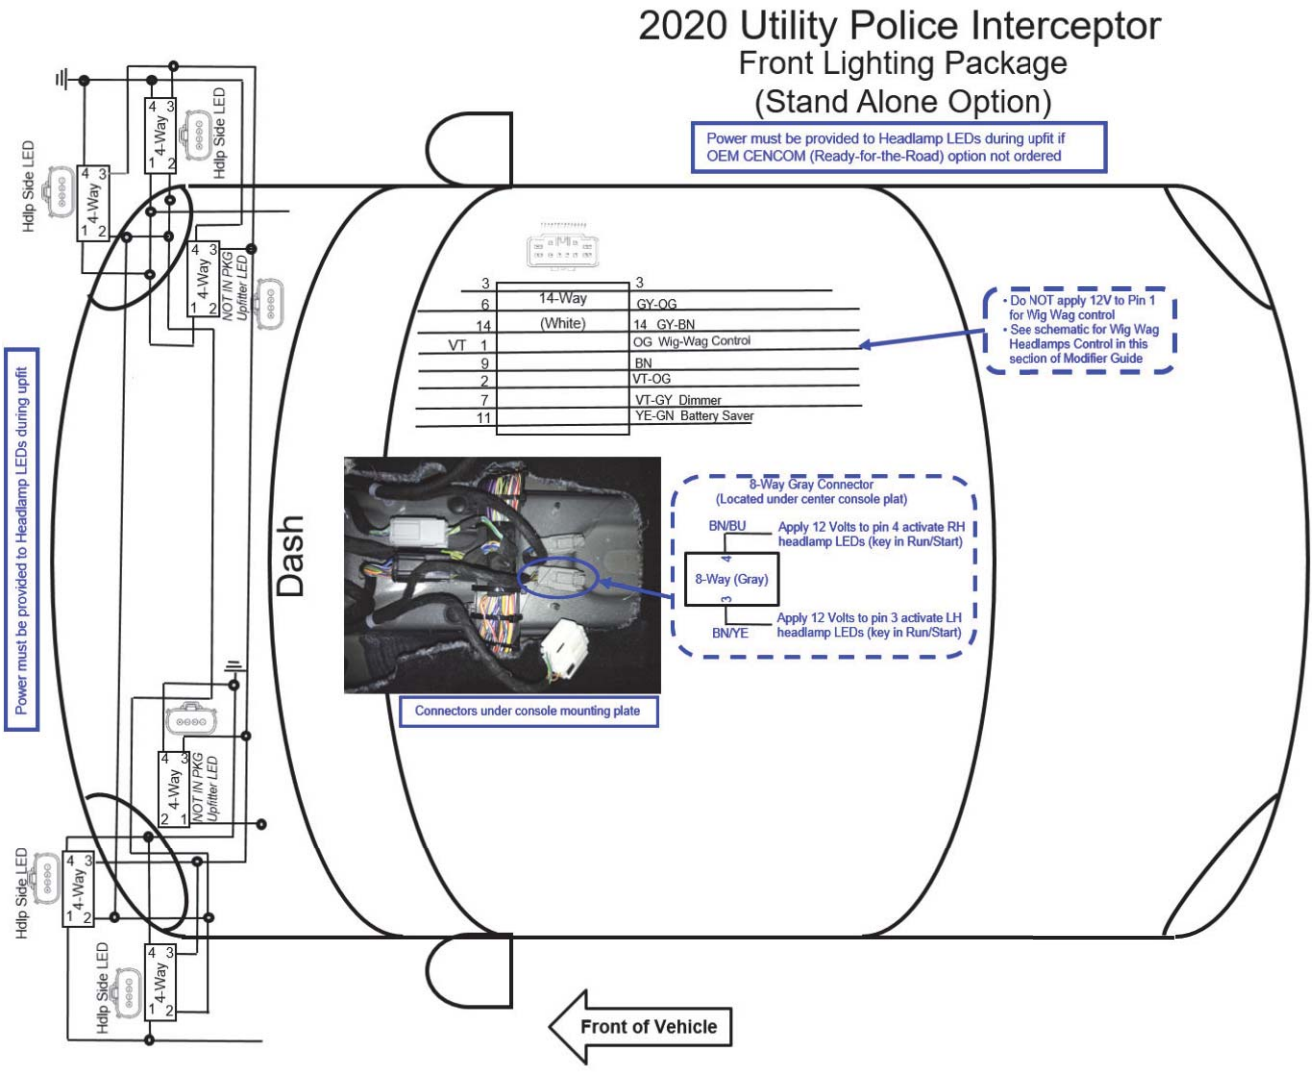
2020 Utility Police Interceptor
Front Lighting Package
(Stand Alone Option)
Power must be provided to Headlamp LEDs during upfit if OEM CENCOM (Ready-for-the-Road) option not ordered
Hdlp Side LED
4-Way
NOT IN PKG Upfitter LED
Power must be provided to Headlamp LEDs during upfit
Dash
14-Way (White)
3 3
6 GY-OG
14 14 GY-BN
VT 1 OG Wig-Wag Control
9 BN
2 VT-OG
7 VT-GY Dimmer
11 YE-GN Battery Saver
• Do NOT apply 12V to Pin 1 for Wig Wag control
• See schematic for Wig Wag Headlamps Control in this section of Modifier Guide
8-Way Gray Connector
(Located under center console plat)
BN/BU
Apply 12 Volts to pin 4 activate RH headlamp LEDs (key in Run/Start)
8-Way (Gray)
BN/YE
Apply 12 Volts to pin 3 activate LH headlamp LEDs (key in Run/Start)
Connectors under console mounting plate
Front of Vehicle

N0182982

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Tail Lamp LEDs (Stand-Alone Option)

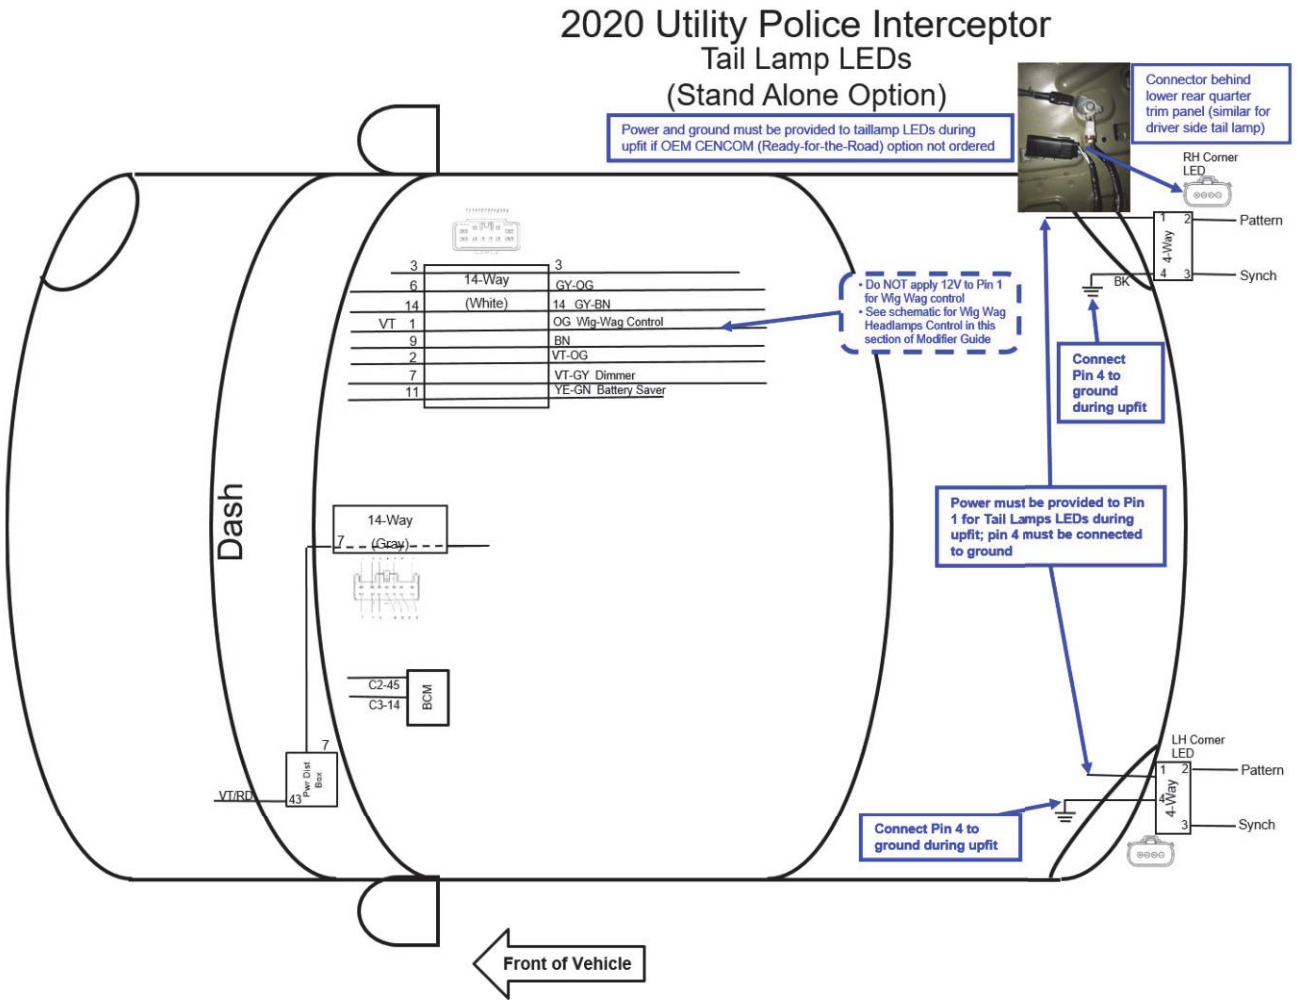
2020 Utility Police Interceptor
Tail Lamp LEDs
(Stand Alone Option)
Power and ground must be provided to taillamp LEDs during upfit if OEM CENCOM (Ready-for-the-Road) option not ordered
Connector behind lower rear quarter trim panel (similar for driver side tail lamp)
RH Corner LED
Pattern
Synch
4-Way
BK
14-Way
(White)
3 GY-OG
14 GY-BN
VT 1 OG Wig-Wag Control
9 BN
2 VT-OG
7 VT-GY Dimmer
11 YE-GN Battery Saver
• Do NOT apply 12V to Pin 1 for Wig Wag control
• See schematic for Wig Wag Headlamps Control in this section of Modifier Guide
Connect Pin 4 to ground during upfit
Power must be provided to Pin 1 for Tail Lamps LEDs during upfit; pin 4 must be connected to ground
Dash
14-Way
7 (Gray)
C2-45
C3-14
BCM
Pwr Dist Box
VT/RD
43
LH Corner LED
Connect Pin 4 to ground during upfit
Front of Vehicle

N0183006

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Liftgate Lighting Package (Stand-Alone Option)

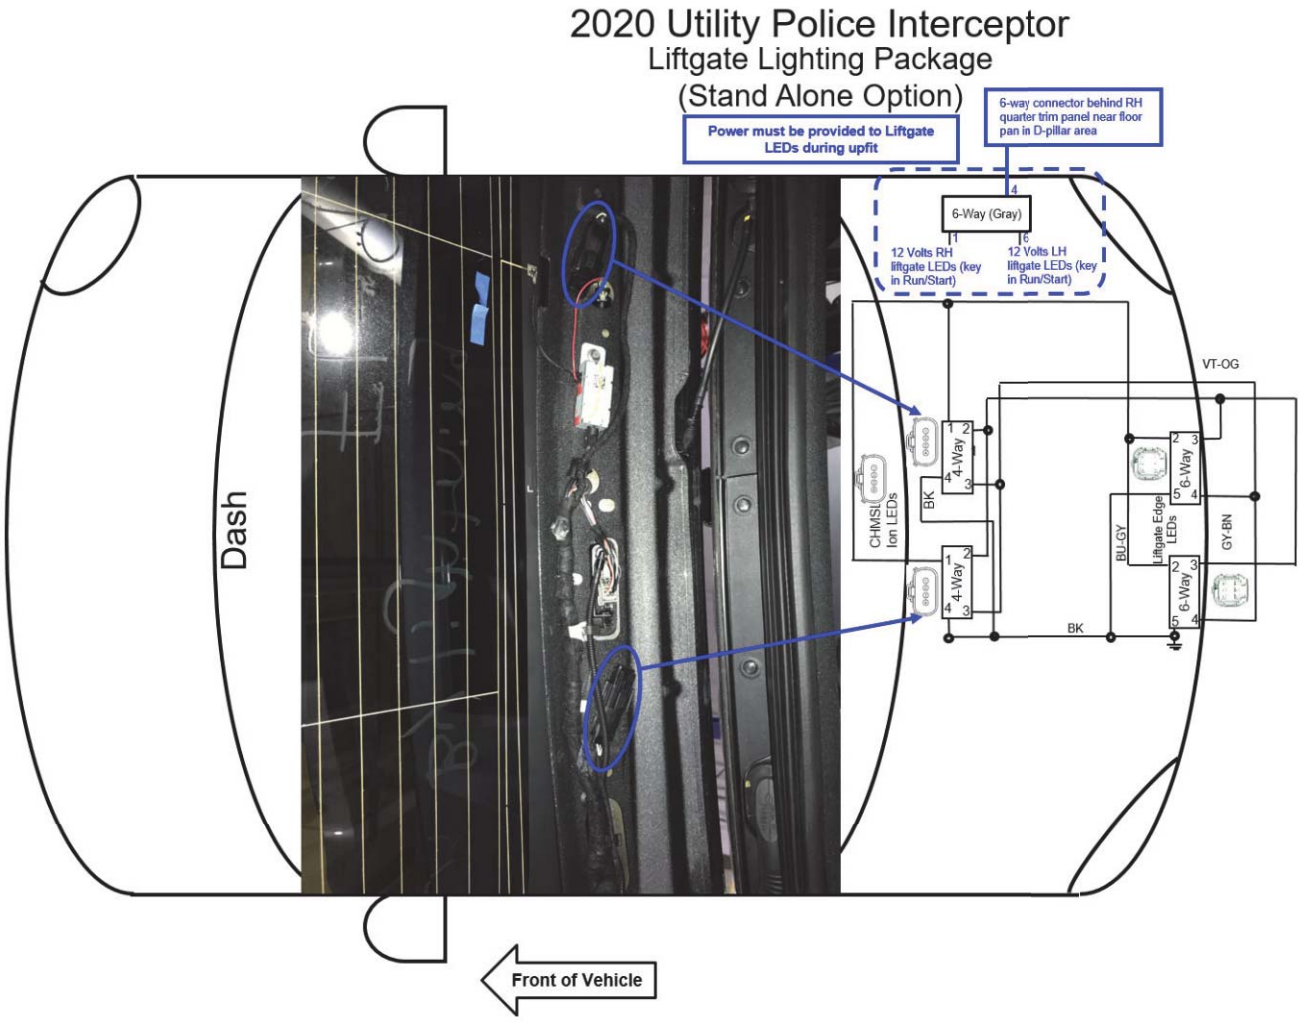

N0182984

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Gateway Connector (Option 61B)

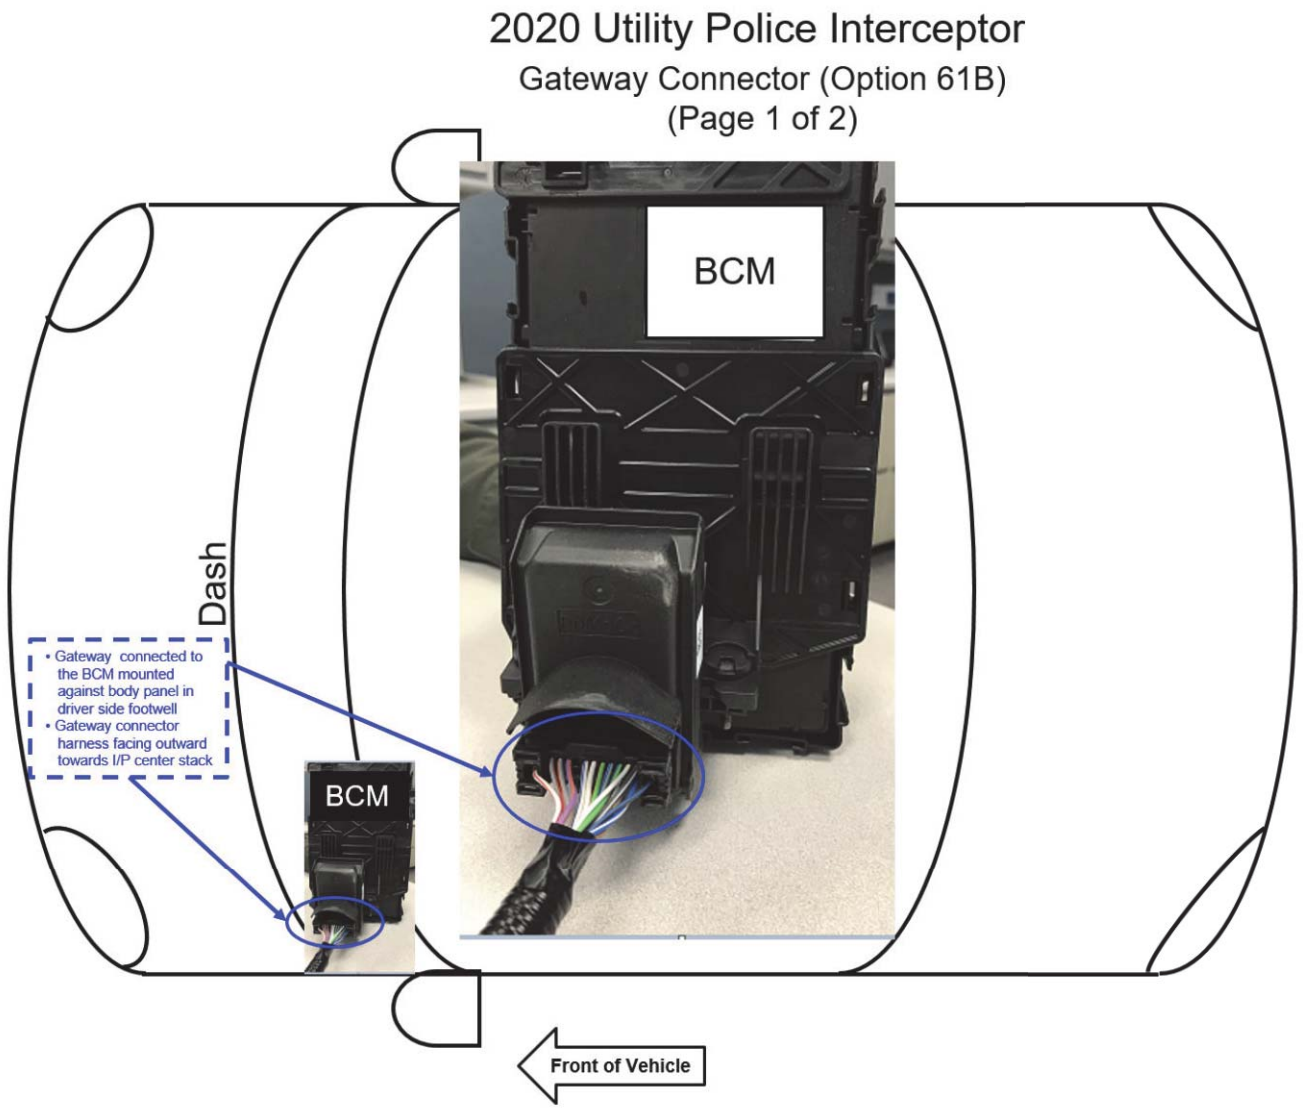
2020 Utility Police Interceptor
Gateway Connector (Option 61B)
(Page 1 of 2)
BCM
Dash
• Gateway connected to the BCM mounted against body panel in driver side footwell
• Gateway connector harness facing outward towards I/P center stack
BCM
Front of Vehicle
N0182985

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

2020 Utility Police Interceptor
Gateway Connector (Option 61B)
(Page 2 of 2)

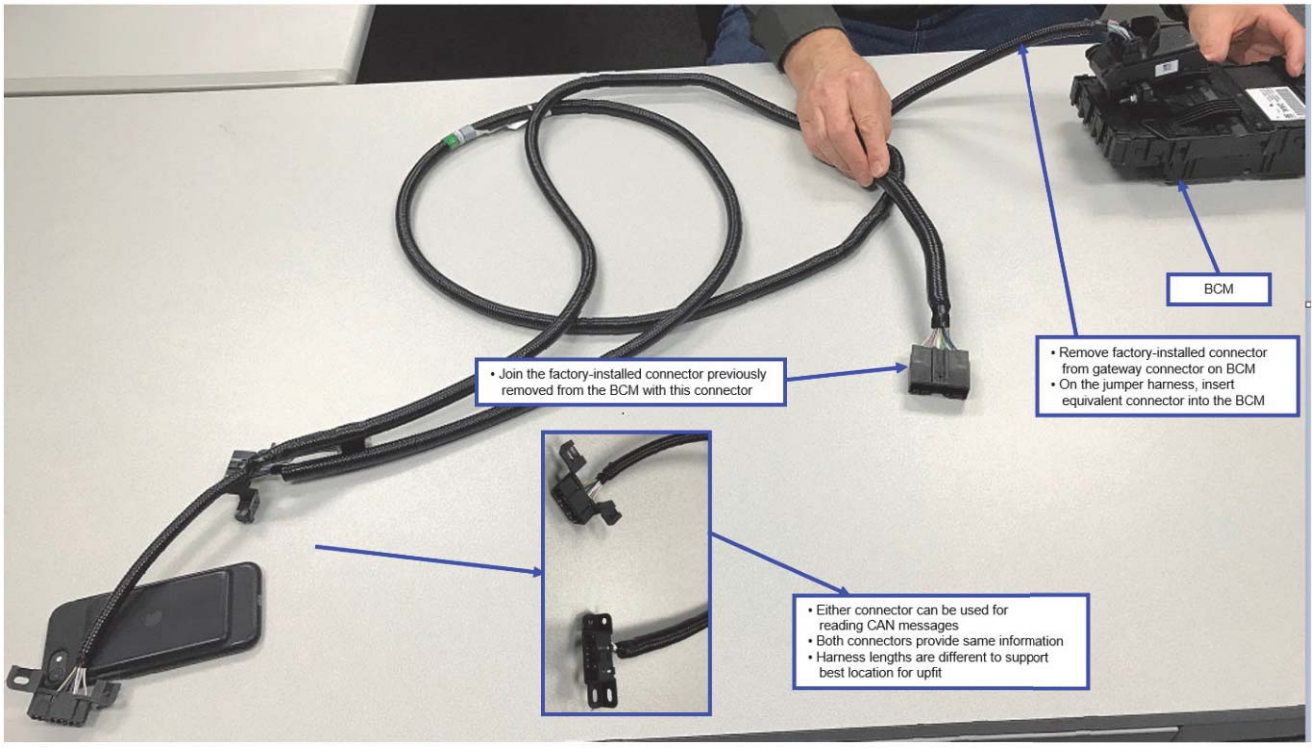
BCM
• Remove factory-installed connector from gateway connector on BCM
• On the jumper harness, insert equivalent connector into the BCM
• Join the factory-installed connector previously removed from the BCM with this connector
• Either connector can be used for reading CAN messages
• Both connectors provide same information
• Harness lengths are different to support best location for upfit

N0182626

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Side View Mirror LEDs (Stand-Alone Option)

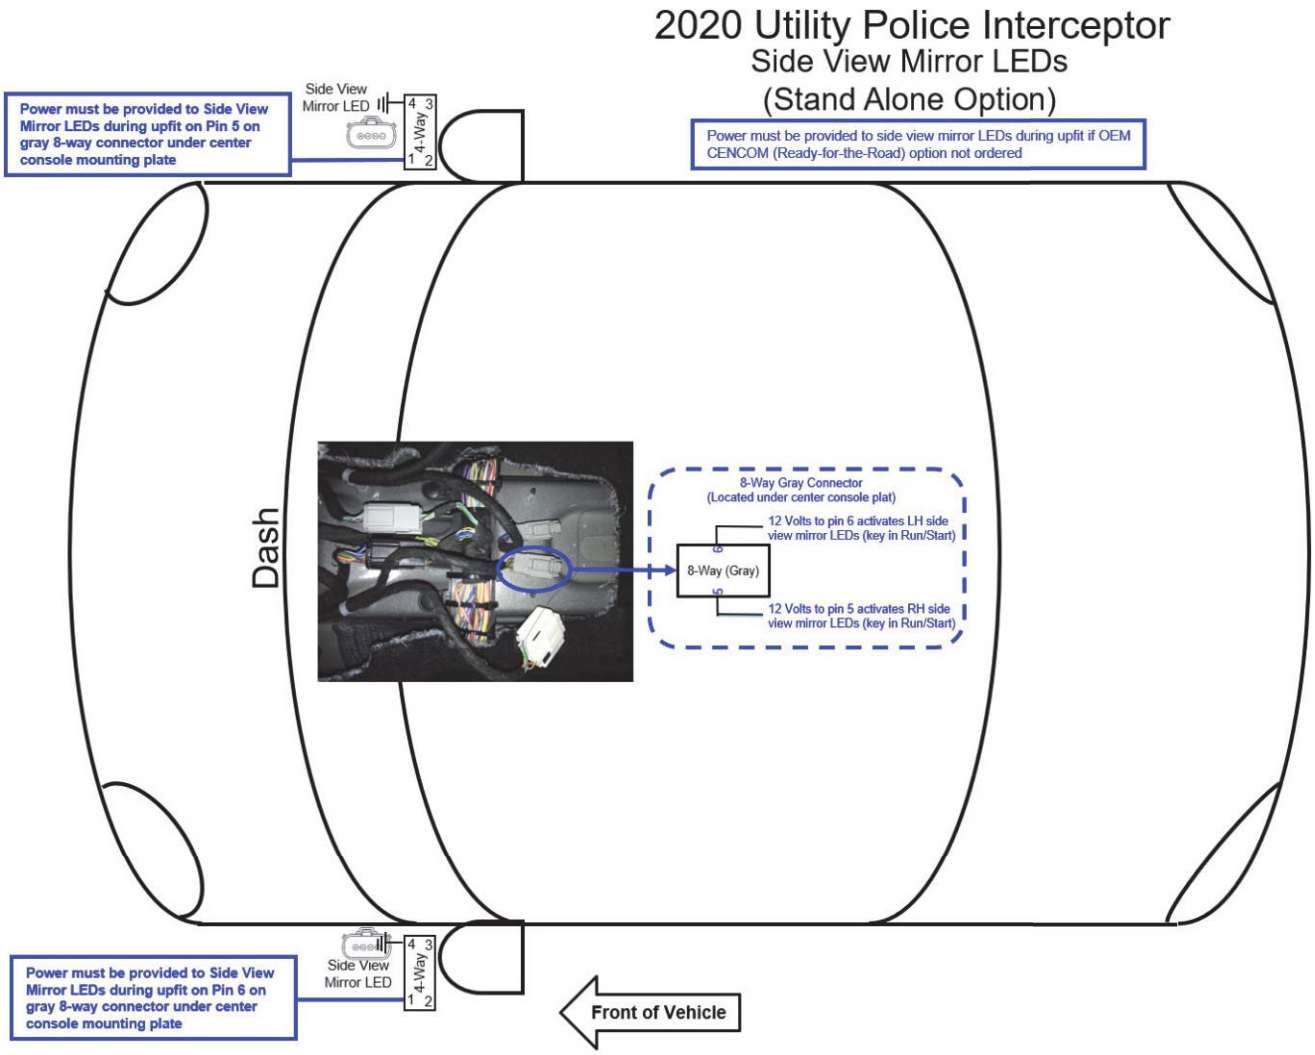
2020 Utility Police Interceptor
Side View Mirror LEDs
(Stand Alone Option)
Power must be provided to Side View Mirror LEDs during upfit on Pin 5 on gray 8-way connector under center console mounting plate
Side View Mirror LED
4-Way
Power must be provided to side view mirror LEDs during upfit if OEM CENCOM (Ready-for-the-Road) option not ordered
Dash
8-Way Gray Connector
(Located under center console plat)
12 Volts to pin 6 activates LH side view mirror LEDs (key in Run/Start)
8-Way (Gray)
12 Volts to pin 5 activates RH side view mirror LEDs (key in Run/Start)
Power must be provided to Side View Mirror LEDs during upfit on Pin 6 on gray 8-way connector under center console mounting plate
Side View Mirror LED
4-Way
Front of Vehicle

N0182627

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Rear Quarter Window LEDs

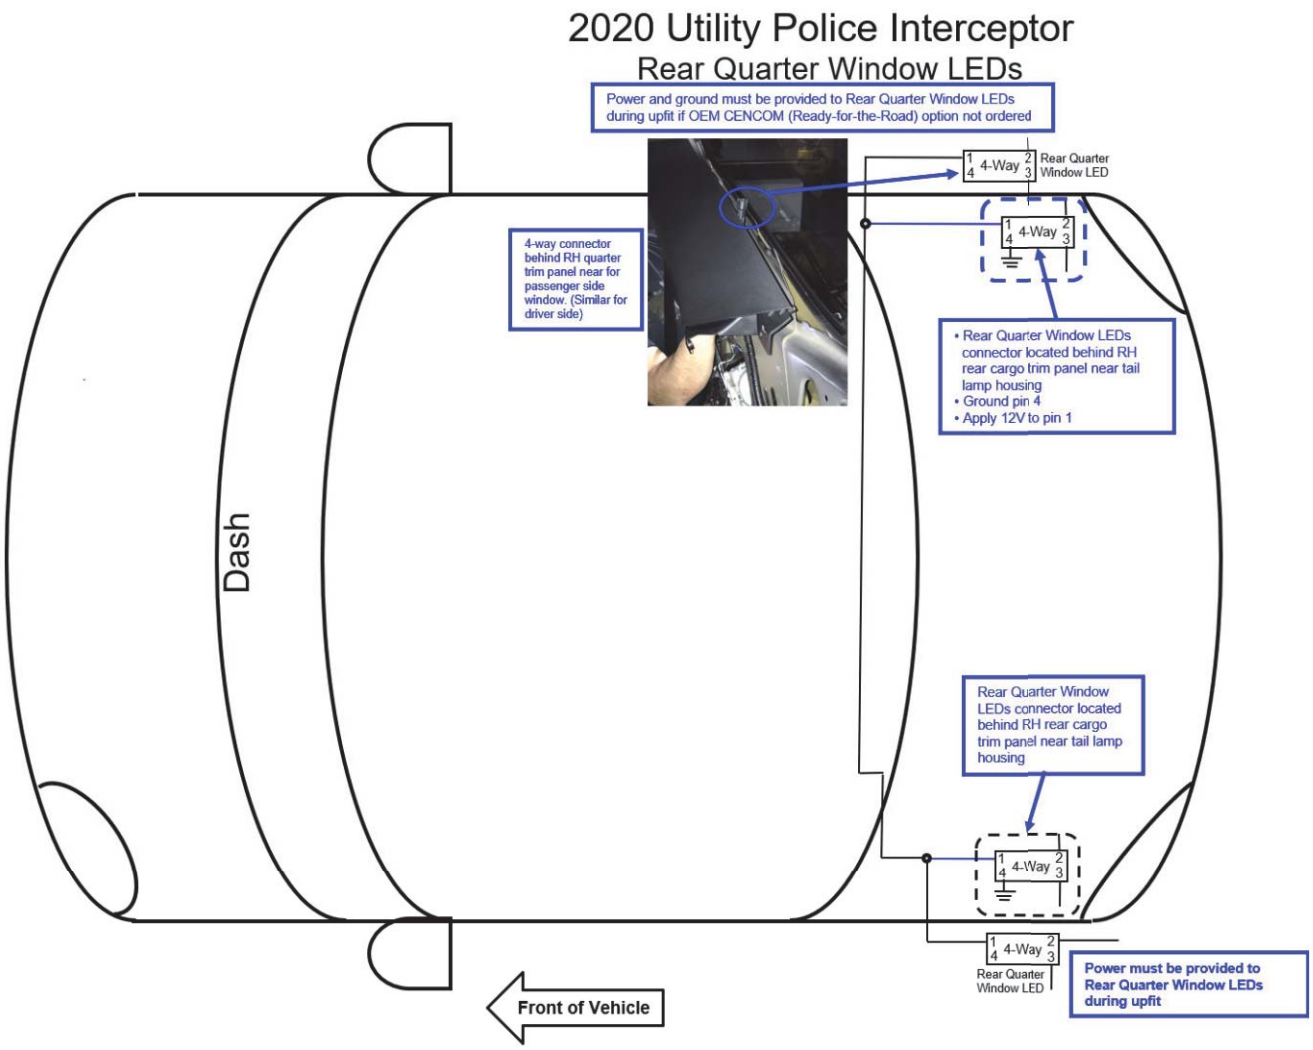
2020 Utility Police Interceptor
Rear Quarter Window LEDs
Power and ground must be provided to Rear Quarter Window LEDs during upfit if OEM CENCOM (Ready-for-the-Road) option not ordered
4-Way
Rear Quarter Window LED
4-way connector behind RH quarter trim panel near for passenger side window. (Similar for driver side)
• Rear Quarter Window LEDs connector located behind RH rear cargo trim panel near tail lamp housing
• Ground pin 4
• Apply 12V to pin 1
Dash
Rear Quarter Window LEDs connector located behind RH rear cargo trim panel near tail lamp housing
Rear Quarter Window LED
Power must be provided to Rear Quarter Window LEDs during upfit
Front of Vehicle

N0183005

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Ultimate Wire Harness (Wiring and connectors ONLY)

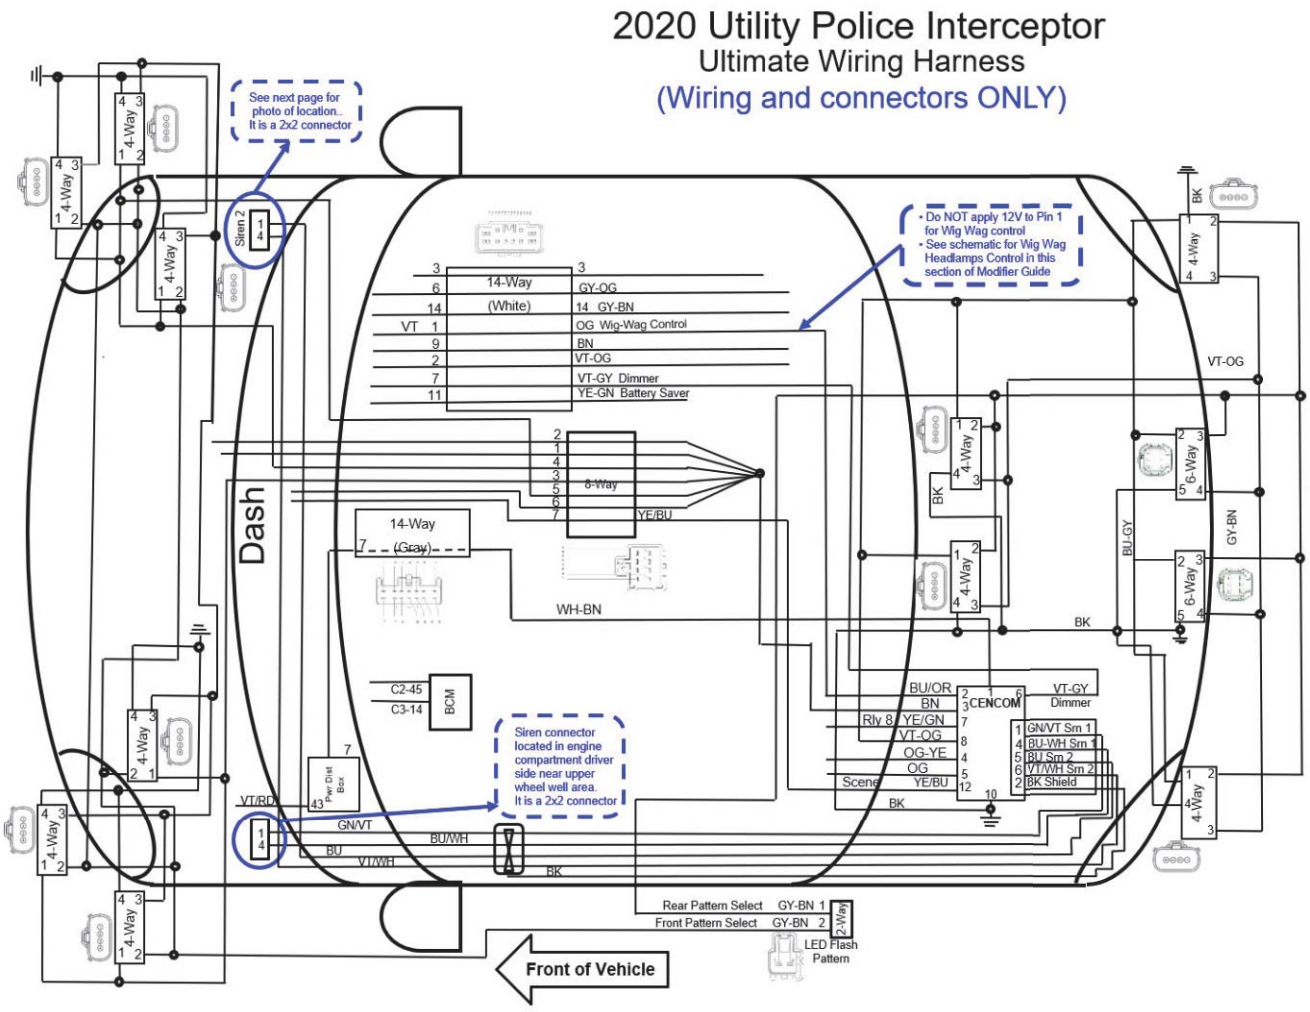

N0183311

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Ready-for-the-Road (Includes Lights and Driver Side Siren only)

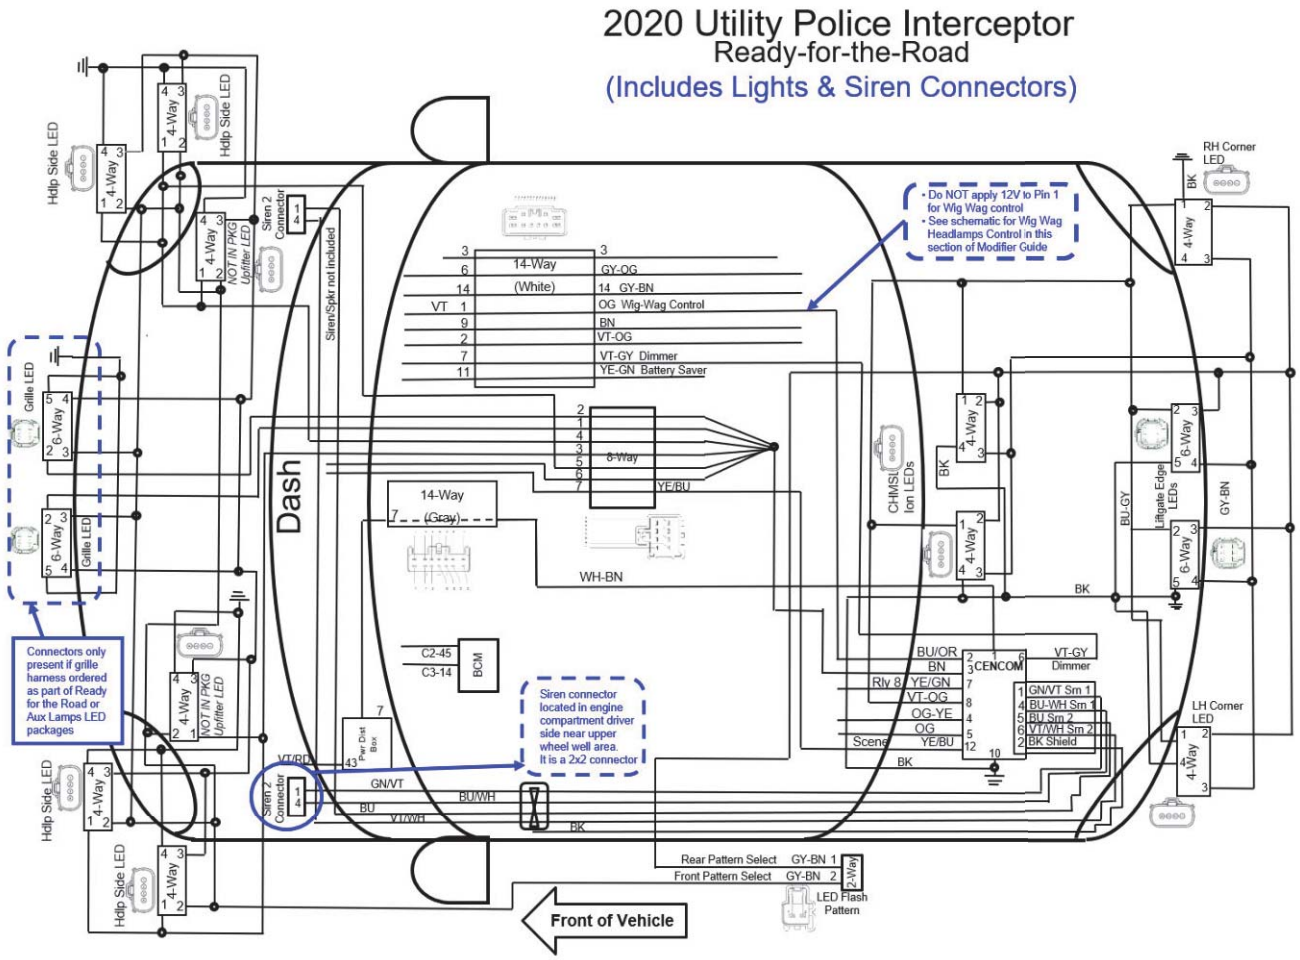

N0183312

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Lift Gate Applique LEDs (Stand-Alone Option)

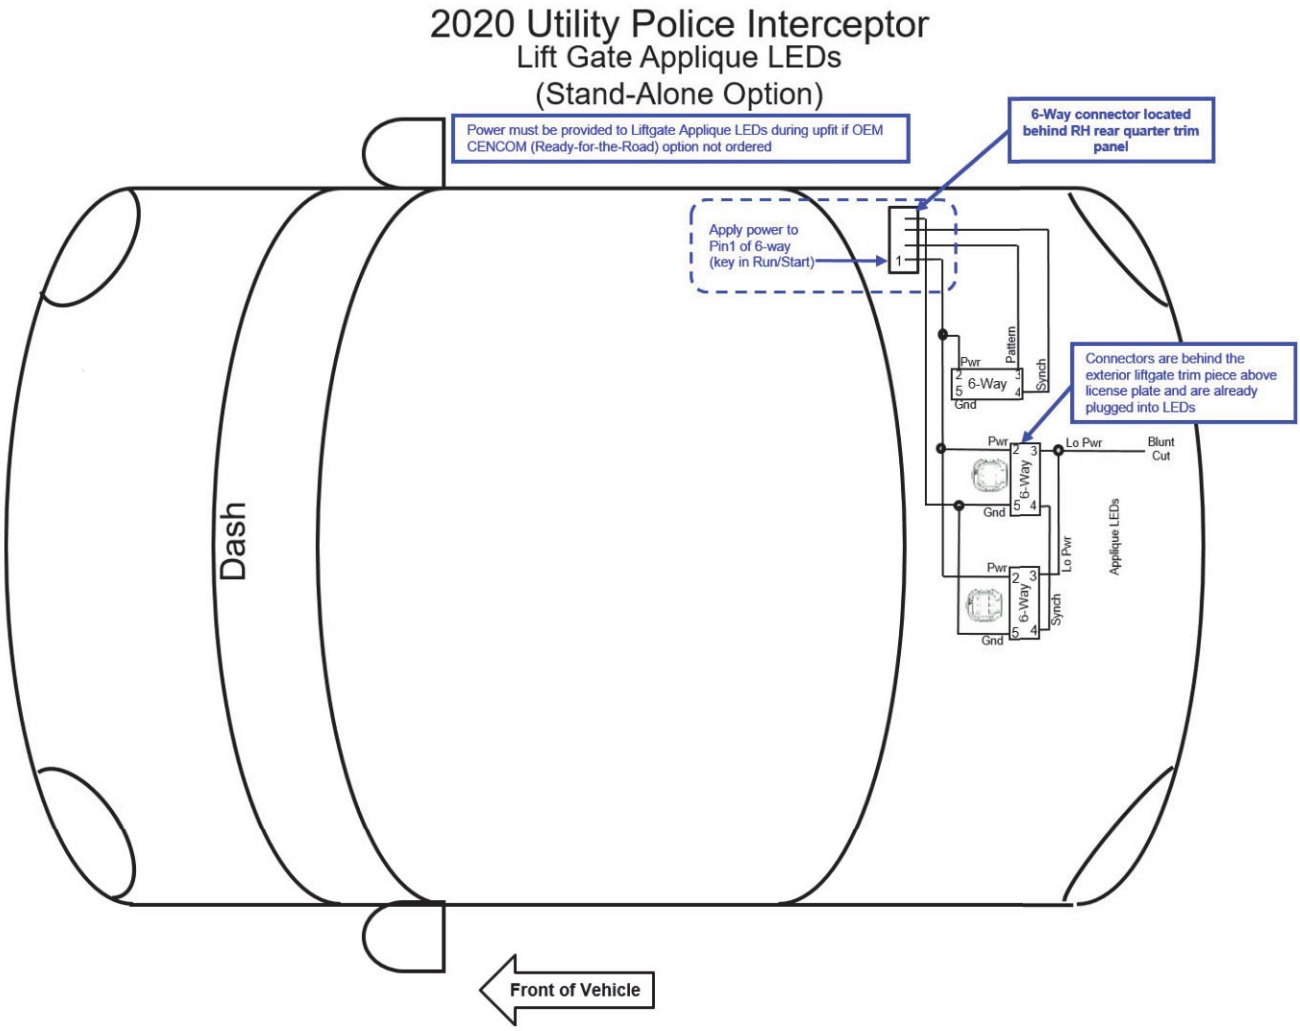
2020 Utility Police Interceptor
Lift Gate Applique LEDs
(Stand-Alone Option)
Power must be provided to Liftgate Applique LEDs during upfit if OEM CENCOM (Ready-for-the-Road) option not ordered
6-Way connector located behind RH rear quarter trim panel
Apply power to Pin1 of 6-way (key in Run/Start)
Connectors are behind the exterior liftgate trim piece above license plate and are already plugged into LEDs
Dash
Pwr
Pattern
Synch
Gnd
Lo Pwr
Blunt Cut
Applique LEDs
Front of Vehicle

N0182988

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Spot Lamps (Stand-Alone Option)

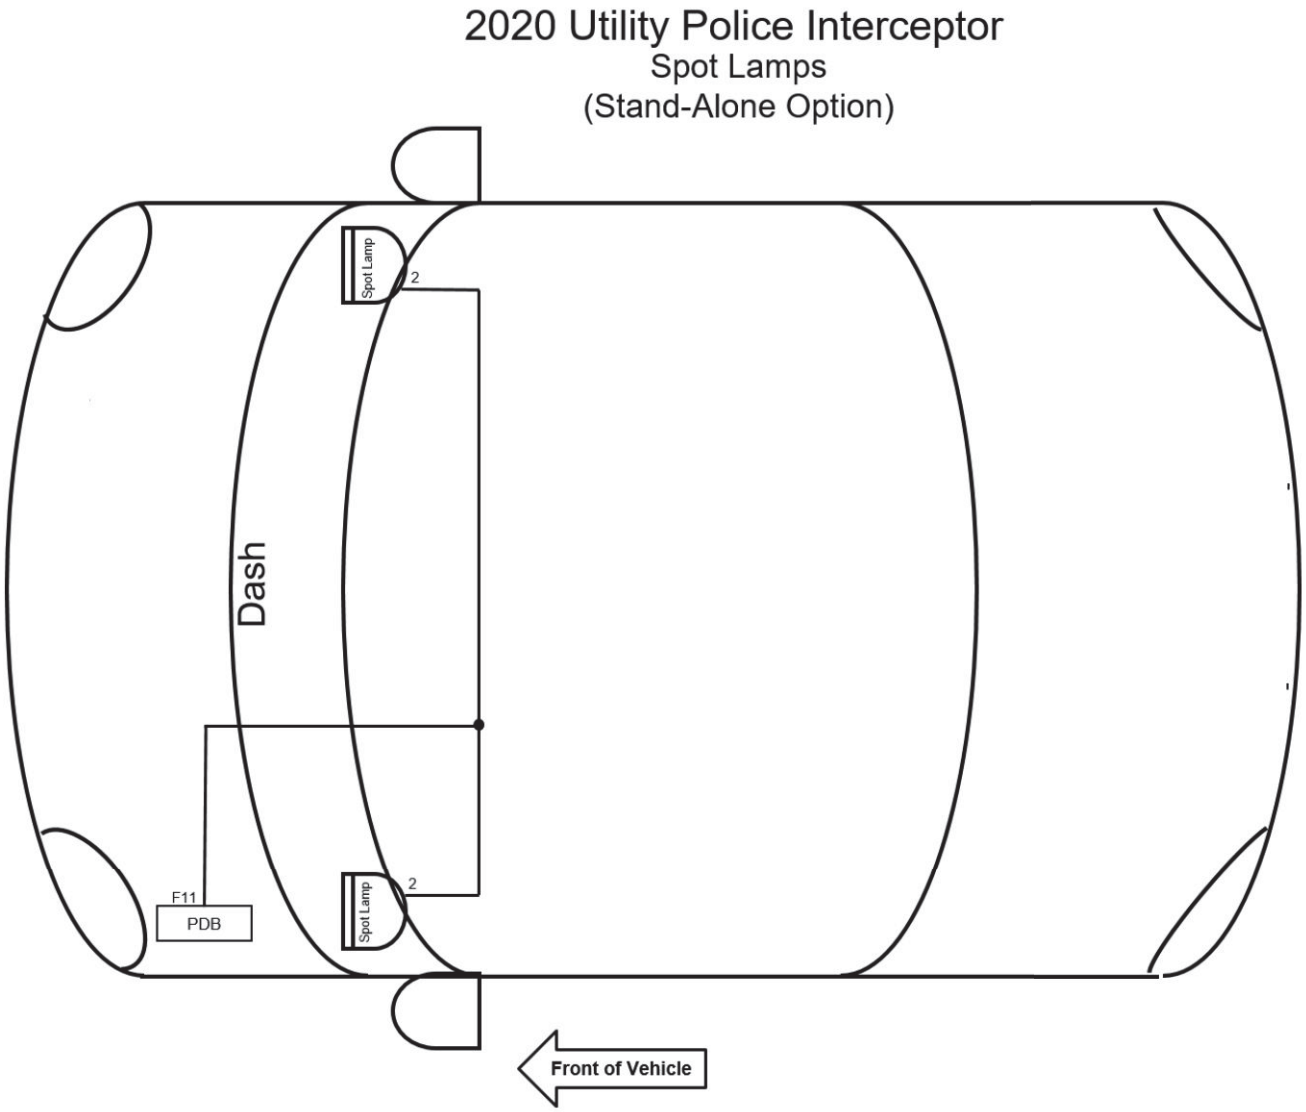

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Park Detect & Police Start

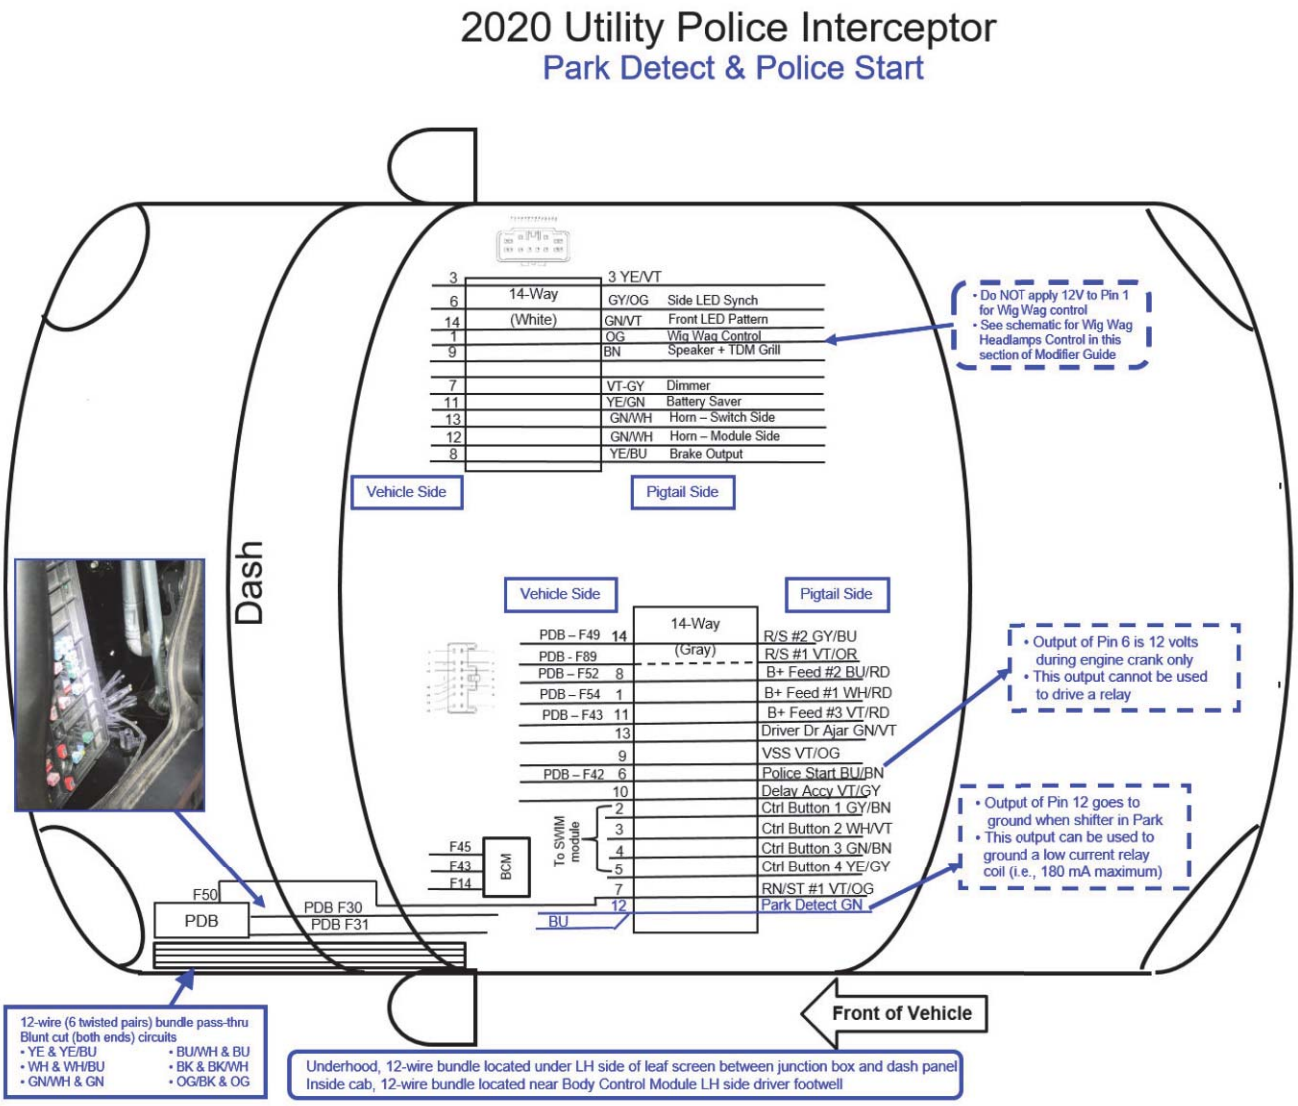
2020 Utility Police Interceptor
Park Detect & Police Start
14-Way
(White)
3 YE/VT
GY/OG Side LED Synch
GN/VT Front LED Pattern
OG Wig Wag Control
BN Speaker + TDM Grill
VT-GY Dimmer
YE/GN Battery Saver
GN/WH Horn – Switch Side
GN/WH Horn – Module Side
YE/BU Brake Output
Vehicle Side
Pigtail Side
• Do NOT apply 12V to Pin 1 for Wig Wag control
• See schematic for Wig Wag Headlamps Control in this section of Modifier Guide
Dash
14-Way
(Gray)
PDB – F49 14 R/S #2 GY/BU
PDB - F89 R/S #1 VT/OR
PDB – F52 8 B+ Feed #2 BU/RD
PDB – F54 1 B+ Feed #1 WH/RD
PDB – F43 11 B+ Feed #3 VT/RD
13 Driver Dr Ajar GN/VT
9 VSS VT/OG
PDB – F42 6 Police Start BU/BN
10 Delay Accy VT/GY
2 Ctrl Button 1 GY/BN
3 Ctrl Button 2 WH/VT
4 Ctrl Button 3 GN/BN
5 Ctrl Button 4 YE/GY
7 RN/ST #1 VT/OG
12 Park Detect GN
F45
F43
F14
BCM
To SWM module
F50
PDB
PDB F30
PDB F31
BU
• Output of Pin 6 is 12 volts during engine crank only
• This output cannot be used to drive a relay
• Output of Pin 12 goes to ground when shifter in Park
• This output can be used to ground a low current relay coil (i.e., 180 mA maximum)
12-wire (6 twisted pairs) bundle pass-thru
Blunt cut (both ends) circuits
• YE & YE/BU
• WH & WH/BU
• GN/WH & GN
• BU/WH & BU
• BK & BK/WH
• OG/BK & OG
Front of Vehicle
Underhood, 12-wire bundle located under LH side of leaf screen between junction box and dash panel
Inside cab, 12-wire bundle located near Body Control Module LH side driver footwell

N0182990

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Driver Door Ajar

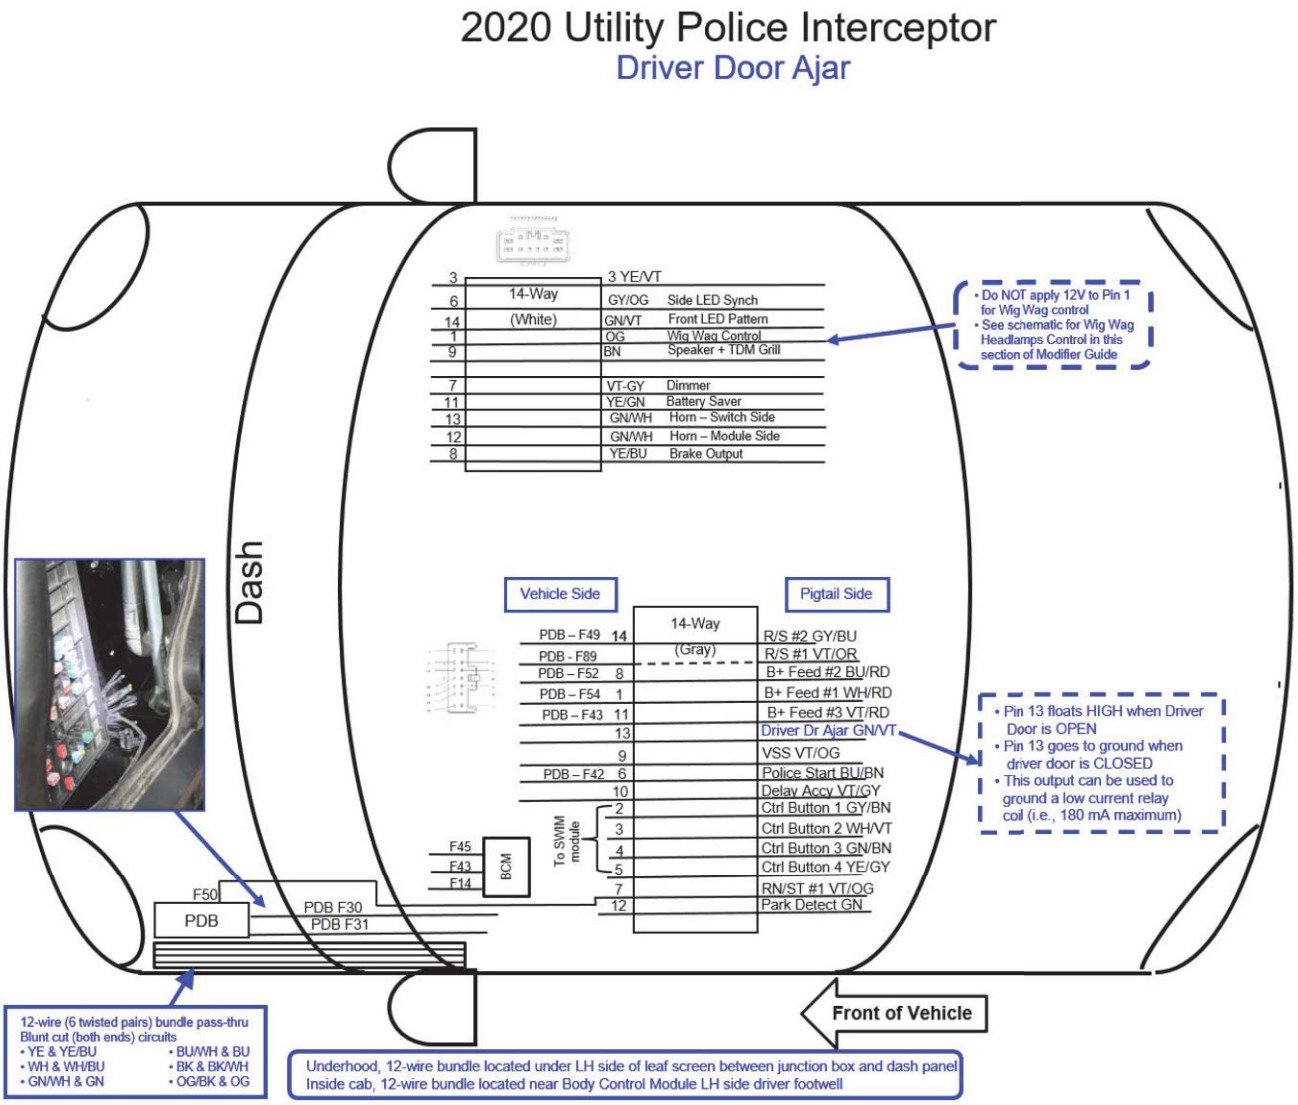
2020 Utility Police Interceptor
Driver Door Ajar
14-Way
(White)
3 YE/VT
GY/OG Side LED Synch
GN/VT Front LED Pattern
OG Wig Wag Control
BN Speaker + TDM Grill
VT-GY Dimmer
YE/GN Battery Saver
GN/WH Horn – Switch Side
GN/WH Horn – Module Side
YE/BU Brake Output
• Do NOT apply 12V to Pin 1 for Wig Wag control
• See schematic for Wig Wag Headlamps Control in this section of Modifier Guide
Dash
Vehicle Side
Pigtail Side
14-Way
(Gray)
PDB – F49 14 R/S #2 GY/BU
PDB - F89 R/S #1 VT/OR
PDB – F52 8 B+ Feed #2 BU/RD
PDB – F54 1 B+ Feed #1 WH/RD
PDB – F43 11 B+ Feed #3 VT/RD
13 Driver Dr Ajar GN/VT
9 VSS VT/OG
PDB – F42 6 Police Start BU/BN
10 Delay Accy VT/GY
2 Ctrl Button 1 GY/BN
3 Ctrl Button 2 WH/VT
4 Ctrl Button 3 GN/BN
5 Ctrl Button 4 YE/GY
7 RN/ST #1 VT/OG
12 Park Detect GN
To SWM module
F45
F43
F14
BCM
F50
PDB
PDB F30
PDB F31
• Pin 13 floats HIGH when Driver Door is OPEN
• Pin 13 goes to ground when driver door is CLOSED
• This output can be used to ground a low current relay coil (i.e., 180 mA maximum)
12-wire (6 twisted pairs) bundle pass-thru
Blunt cut (both ends) circuits
• YE & YE/BU
• WH & WH/BU
• GN/WH & GN
• BU/WH & BU
• BK & BK/WH
• OG/BK & OG
Front of Vehicle
Underhood, 12-wire bundle located under LH side of leaf screen between junction box and dash panel
Inside cab, 12-wire bundle located near Body Control Module LH side driver footwell

N0182991

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Steering Wheel Switches Output

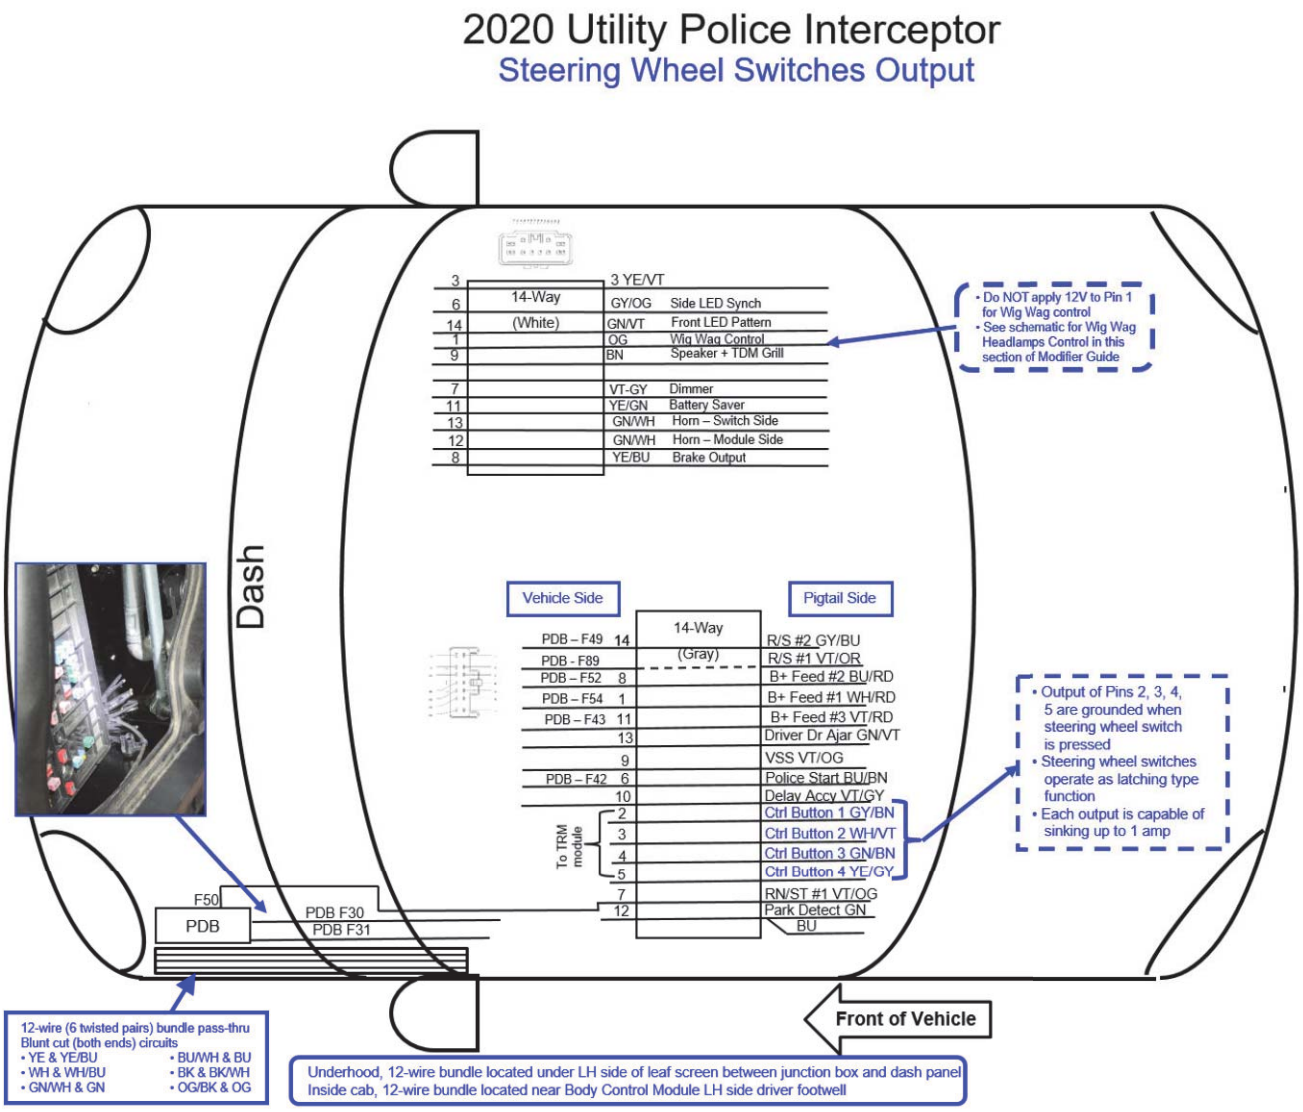
2020 Utility Police Interceptor
Steering Wheel Switches Output
14-Way
(White)
3 YE/VT
GY/OG Side LED Synch
GN/VT Front LED Pattern
OG Wig Wag Control
BN Speaker + TDM Grill
VT-GY Dimmer
YE/GN Battery Saver
GN/WH Horn – Switch Side
GN/WH Horn – Module Side
YE/BU Brake Output
• Do NOT apply 12V to Pin 1 for Wig Wag control
• See schematic for Wig Wag Headlamps Control in this section of Modifier Guide
Dash
Vehicle Side
Pigtail Side
14-Way
(Gray)
PDB – F49 14 R/S #2 GY/BU
PDB - F89 R/S #1 VT/OR
PDB – F52 8 B+ Feed #2 BU/RD
PDB – F54 1 B+ Feed #1 WH/RD
PDB – F43 11 B+ Feed #3 VT/RD
13 Driver Dr Ajar GN/VT
9 VSS VT/OG
PDB – F42 6 Police Start BU/BN
10 Delay Accy VT/GY
To TRM module
2 Ctrl Button 1 GY/BN
3 Ctrl Button 2 WH/VT
4 Ctrl Button 3 GN/BN
5 Ctrl Button 4 YE/GY
7 RN/ST #1 VT/OG
12 Park Detect GN BU
• Output of Pins 2, 3, 4, 5 are grounded when steering wheel switch is pressed
• Steering wheel switches operate as latching type function
• Each output is capable of sinking up to 1 amp
F50
PDB
PDB F30
PDB F31
12-wire (6 twisted pairs) bundle pass-thru
Blunt cut (both ends) circuits
• YE & YE/BU
• WH & WH/BU
• GN/WH & GN
• BU/WH & BU
• BK & BK/WH
• OG/BK & OG
Front of Vehicle
Underhood, 12-wire bundle located under LH side of leaf screen between junction box and dash panel
Inside cab, 12-wire bundle located near Body Control Module LH side driver footwell

N0182992

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Brake Output

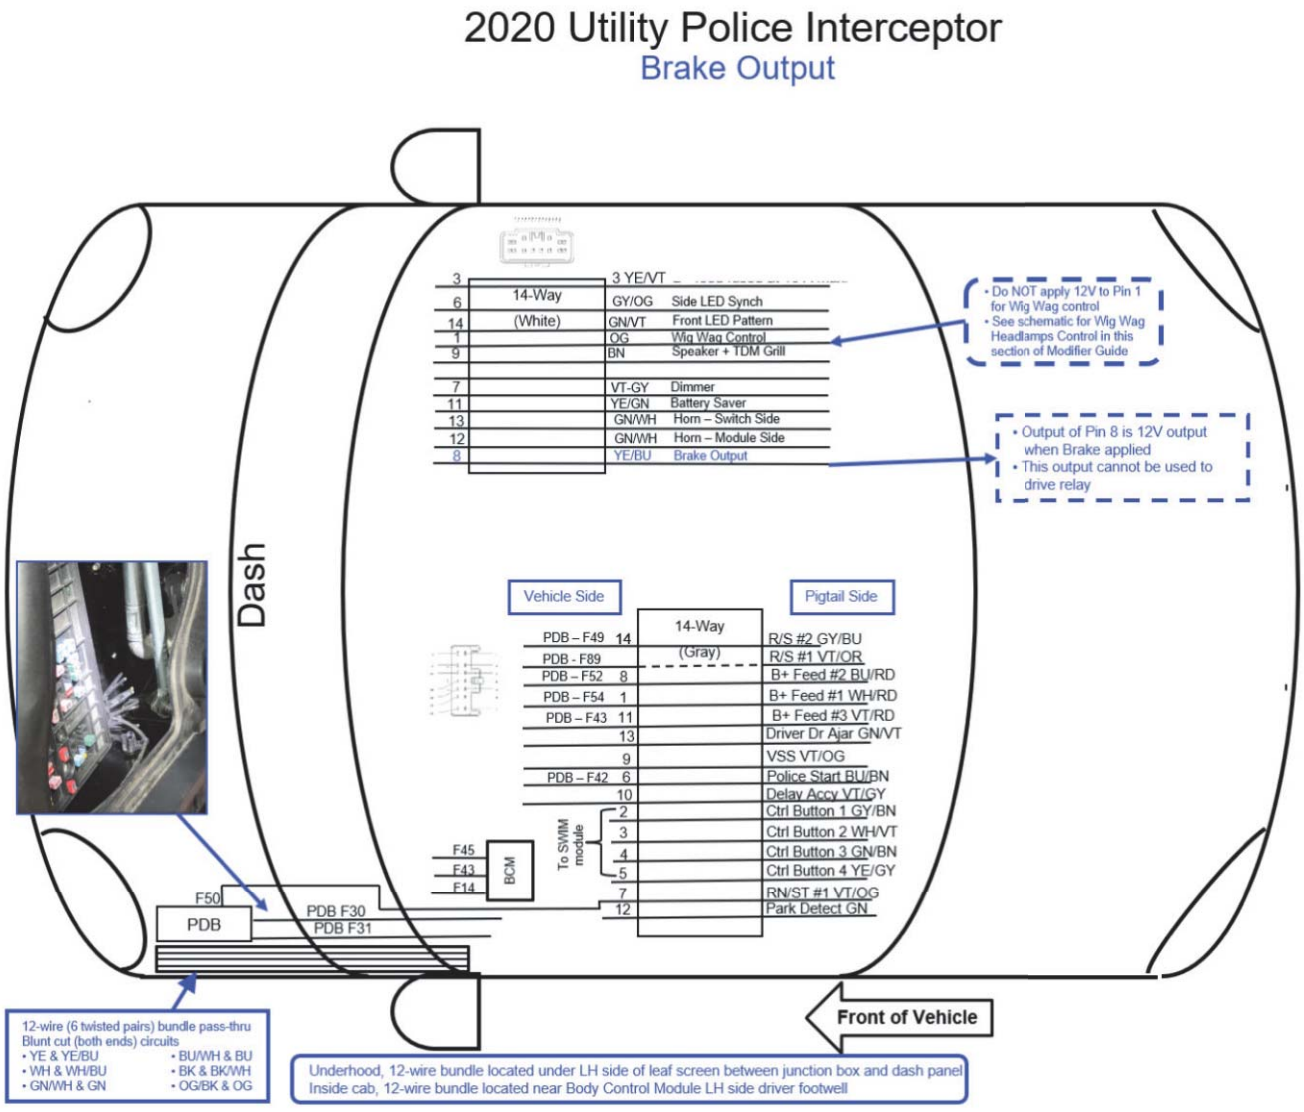
2020 Utility Police Interceptor
Brake Output
14-Way
(White)
3 YE/VT
GY/OG Side LED Synch
GN/VT Front LED Pattern
OG Wig Wag Control
BN Speaker + TDM Grill
VT-GY Dimmer
YE/GN Battery Saver
GN/WH Horn – Switch Side
GN/WH Horn – Module Side
YE/BU Brake Output
• Do NOT apply 12V to Pin 1 for Wig Wag control
• See schematic for Wig Wag Headlamps Control in this section of Modifier Guide
• Output of Pin 8 is 12V output when Brake applied
• This output cannot be used to drive relay
Dash
Vehicle Side
Pigtail Side
14-Way
(Gray)
PDB – F49 14 R/S #2 GY/BU
PDB - F89 R/S #1 VT/OR
PDB – F52 8 B+ Feed #2 BU/RD
PDB – F54 1 B+ Feed #1 WH/RD
PDB – F43 11 B+ Feed #3 VT/RD
13 Driver Dr Ajar GN/VT
9 VSS VT/OG
PDB – F42 6 Police Start BU/BN
10 Delay Accy VT/GY
2 Ctrl Button 1 GY/BN
3 Ctrl Button 2 WH/VT
4 Ctrl Button 3 GN/BN
5 Ctrl Button 4 YE/GY
7 RN/ST #1 VT/OG
12 Park Detect GN
To SWM module
F45
F43
F14
BCM
F50
PDB
PDB F30
PDB F31
12-wire (6 twisted pairs) bundle pass-thru
Blunt cut (both ends) circuits
• YE & YE/BU
• WH & WH/BU
• GN/WH & GN
• BU/WH & BU
• BK & BK/WH
• OG/BK & OG
Front of Vehicle
Underhood, 12-wire bundle located under LH side of leaf screen between junction box and dash panel
Inside cab, 12-wire bundle located near Body Control Module LH side driver footwell

N0182995

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Base Vehicle — No Wiring Options

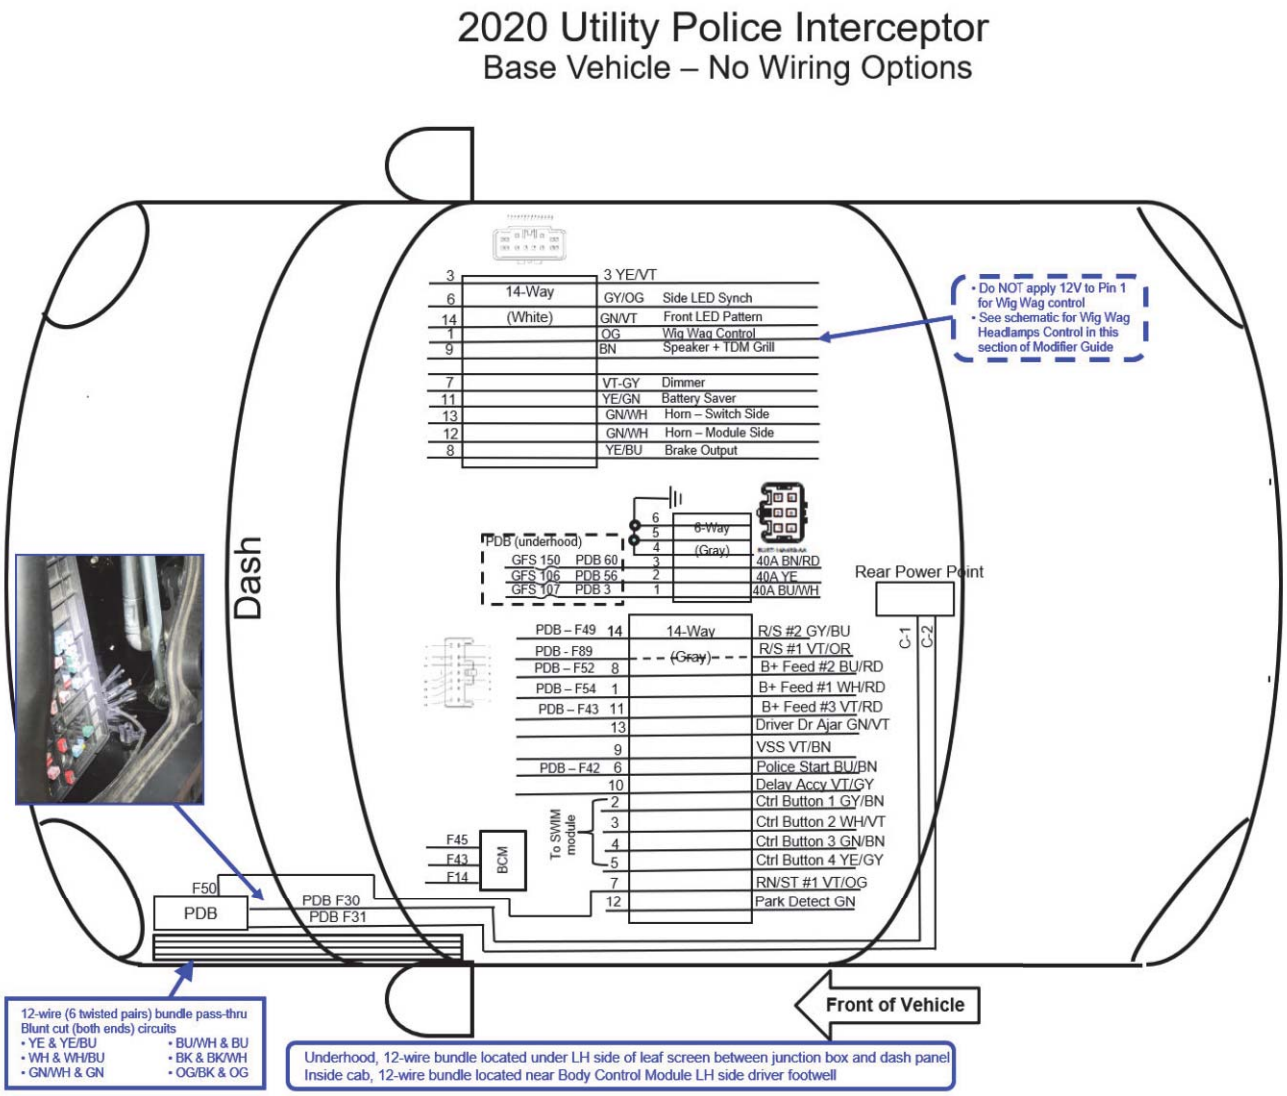
2020 Utility Police Interceptor
Base Vehicle – No Wiring Options
Dash
14-Way (White)
3 YE/VT
GY/OG Side LED Synch
GN/VT Front LED Pattern
OG Wig Wag Control
BN Speaker + TDM Grill
VT-GY Dimmer
YE/GN Battery Saver
GN/WH Horn – Switch Side
GN/WH Horn – Module Side
YE/BU Brake Output
• Do NOT apply 12V to Pin 1 for Wig Wag control
• See schematic for Wig Wag Headlamps Control in this section of Modifier Guide
PDB (underhood)
GFS 150 PDB 60
GFS 106 PDB 56
GFS 107 PDB 3
6-Way (Gray)
40A BN/RD
40A YE
40A BU/WH
Rear Power Point
C-1
C-2
PDB – F49 14 14-Way (Gray)
R/S #2 GY/BU
PDB - F89 R/S #1 VT/OR
PDB – F52 8 B+ Feed #2 BU/RD
PDB – F54 1 B+ Feed #1 WH/RD
PDB – F43 11 B+ Feed #3 VT/RD
13 Driver Dr Ajar GN/VT
9 VSS VT/BN
PDB – F42 6 Police Start BU/BN
10 Delay Accy VT/GY
2 Ctrl Button 1 GY/BN
3 Ctrl Button 2 WH/VT
4 Ctrl Button 3 GN/BN
5 Ctrl Button 4 YE/GY
7 RN/ST #1 VT/OG
12 Park Detect GN
To SWIM module
F45
F43
F14
BCM
F50
PDB
PDB F30
PDB F31
12-wire (6 twisted pairs) bundle pass-thru
Blunt cut (both ends) circuits
• YE & YE/BU
• WH & WH/BU
• GN/WH & GN
• BU/WH & BU
• BK & BK/WH
• OG/BK & OG
Front of Vehicle
Underhood, 12-wire bundle located under LH side of leaf screen between junction box and dash panel
Inside cab, 12-wire bundle located near Body Control Module LH side driver footwell

N0183313

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Wig-Wag Headlamps Control

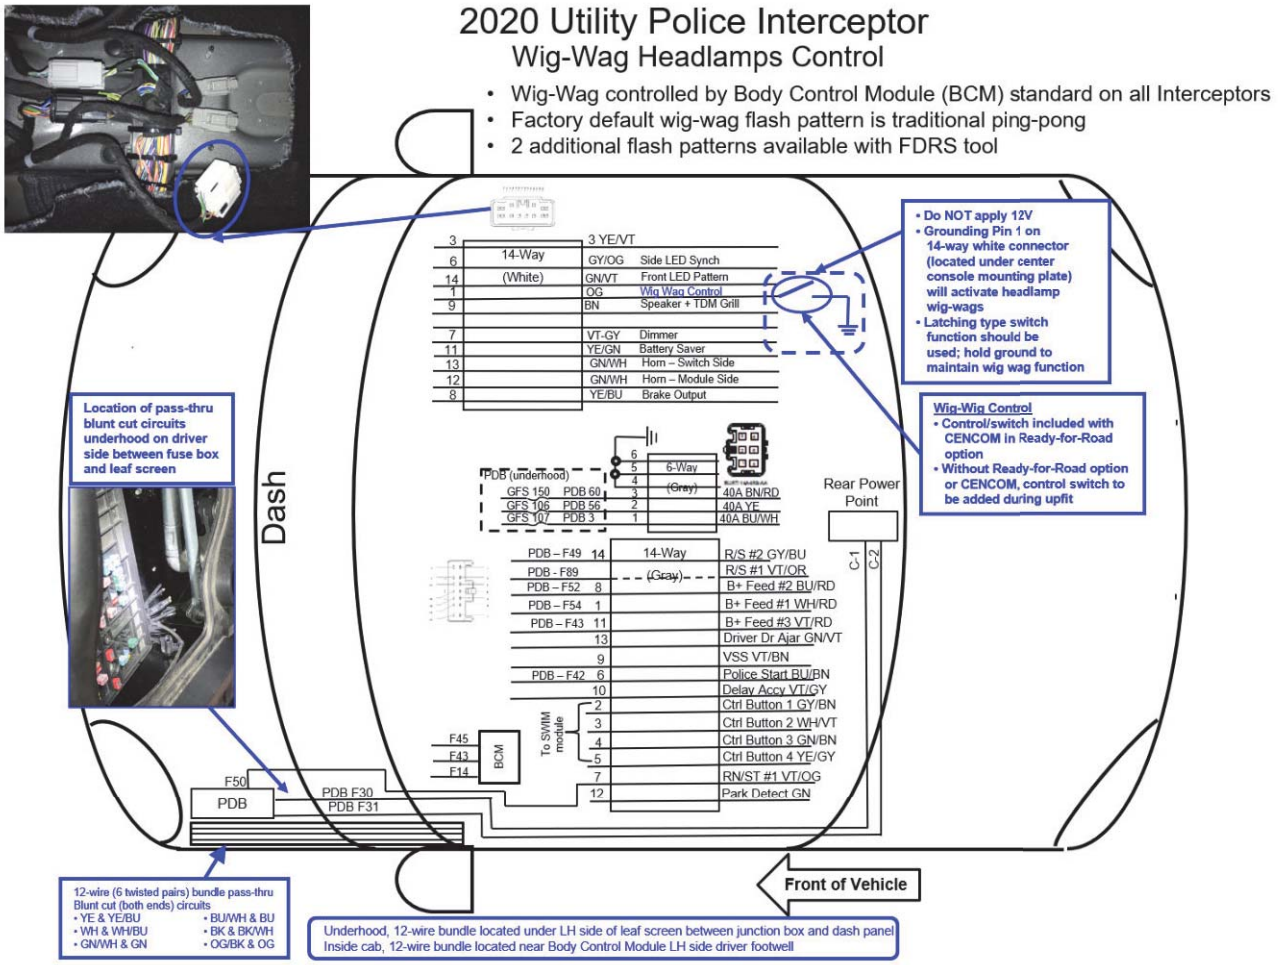
2020 Utility Police Interceptor
Wig-Wag Headlamps Control
• Wig-Wag controlled by Body Control Module (BCM) standard on all Interceptors
• Factory default wig-wag flash pattern is traditional ping-pong
• 2 additional flash patterns available with FDRS tool
• Do NOT apply 12V
• Grounding Pin 1 on 14-way white connector (located under center console mounting plate) will activate headlamp wig-wags
• Latching type switch function should be used; hold ground to maintain wig wag function
Wig-Wig Control
• Control/switch included with CENCOM in Ready-for-Road option
• Without Ready-for-Road option or CENCOM, control switch to be added during upfit
Location of pass-thru blunt cut circuits underhood on driver side between fuse box and leaf screen
Dash
14-Way (White)
3 YE/VT
GY/OG Side LED Synch
GN/VT Front LED Pattern
OG Wig Wag Control
BN Speaker + TDM Grill
VT-GY Dimmer
YE/GN Battery Saver
GN/WH Horn – Switch Side
GN/WH Horn – Module Side
YE/BU Brake Output
PDB (underhood)
GFS 150 PDB 60
GFS 106 PDB 56
GFS 107 PDB 3
6-Way (Gray)
40A BN/RD
40A YE
40A BU/WH
Rear Power Point
C1
C2
PDB – F49 14
PDB - F89
PDB – F52 8
PDB – F54 1
PDB – F43 11
PDB – F42 6
14-Way (Gray)
R/S #2 GY/BU
R/S #1 VT/OR
B+ Feed #2 BU/RD
B+ Feed #1 WH/RD
B+ Feed #3 VT/RD
Driver Dr Ajar GN/VT
VSS VT/BN
Police Start BU/BN
Delay Accy VT/GY
Ctrl Button 1 GY/BN
Ctrl Button 2 WH/VT
Ctrl Button 3 GN/BN
Ctrl Button 4 YE/GY
RN/ST #1 VT/OG
Park Detect GN
To SWM module
F45
F43
F14
BCM
F50
PDB
PDB F30
PDB F31
12-wire (6 twisted pairs) bundle pass-thru Blunt cut (both ends) circuits
• YE & YE/BU
• WH & WH/BU
• GN/WH & GN
• BU/WH & BU
• BK & BK/WH
• OG/BK & OG
Front of Vehicle
Underhood, 12-wire bundle located under LH side of leaf screen between junction box and dash panel
Inside cab, 12-wire bundle located near Body Control Module LH side driver footwell

N0183314

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Horn Ring Circuit

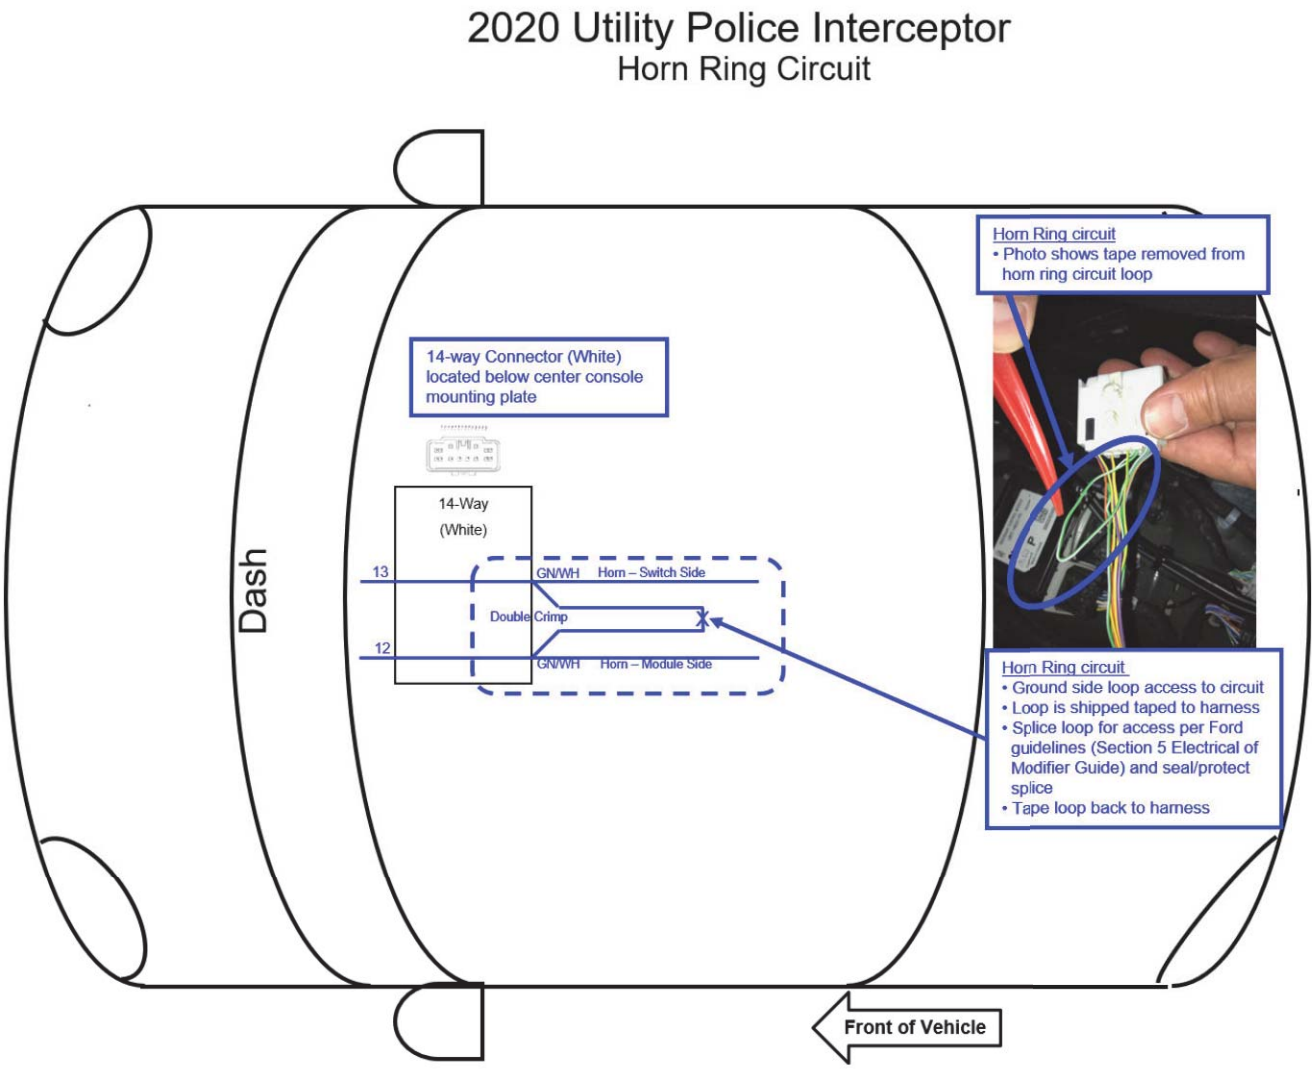
2020 Utility Police Interceptor
Horn Ring Circuit
Dash
14-way Connector (White) located below center console mounting plate
14-Way
(White)
13
GN/WH
Horn – Switch Side
Double Crimp
12
GN/WH
Horn – Module Side
Horn Ring circuit
• Photo shows tape removed from horn ring circuit loop
Horn Ring circuit
• Ground side loop access to circuit
• Loop is shipped taped to harness
• Splice loop for access per Ford guidelines (Section 5 Electrical of Modifier Guide) and seal/protect splice
• Tape loop back to harness
Front of Vehicle

N0182639

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Location of siren connector 1

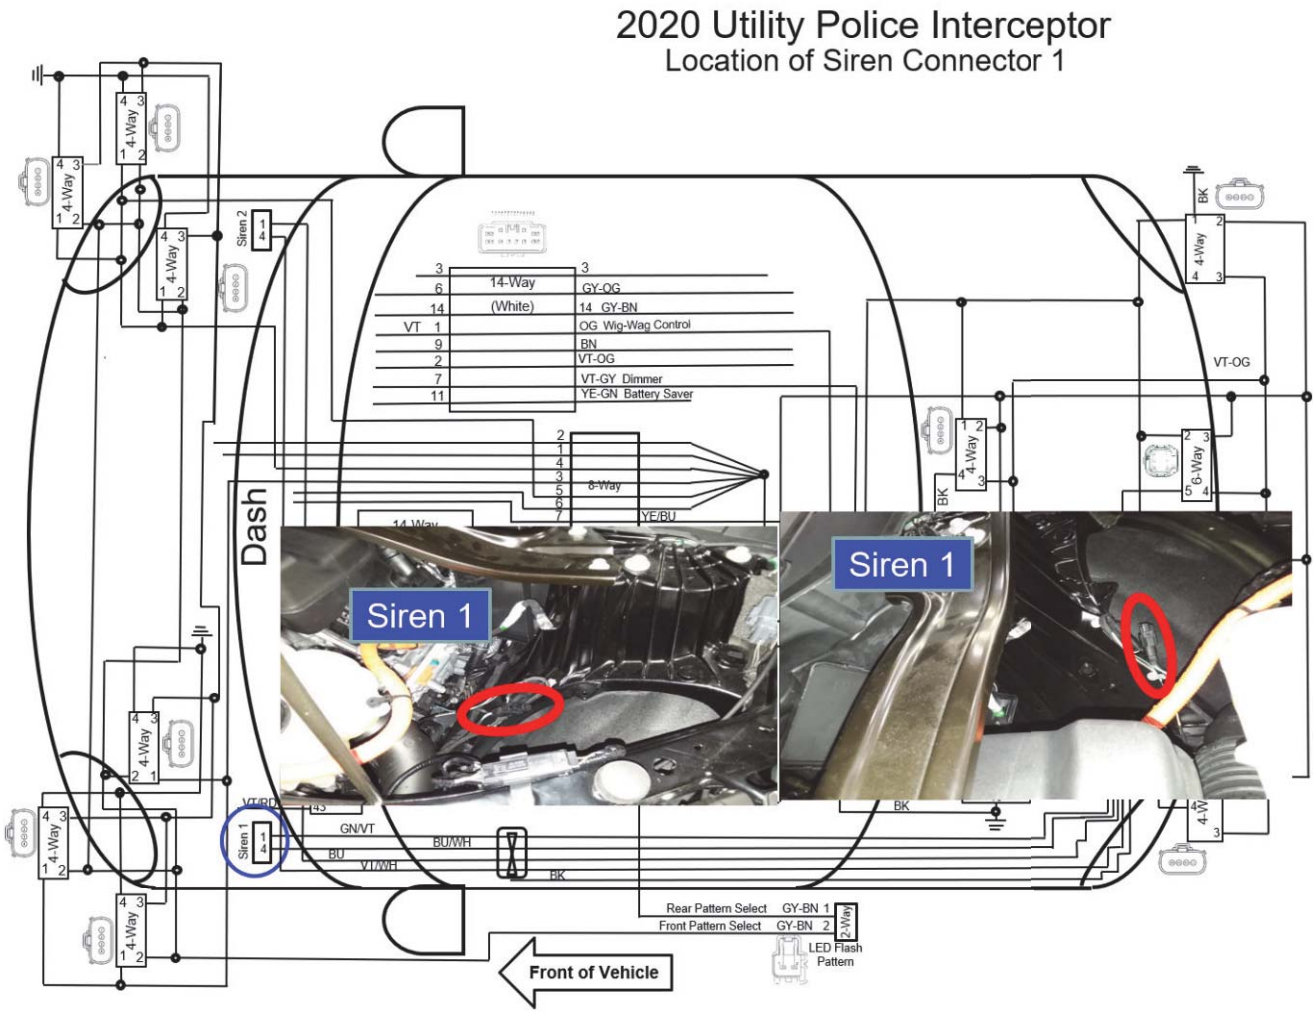

N0183309

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Location of siren connector 2

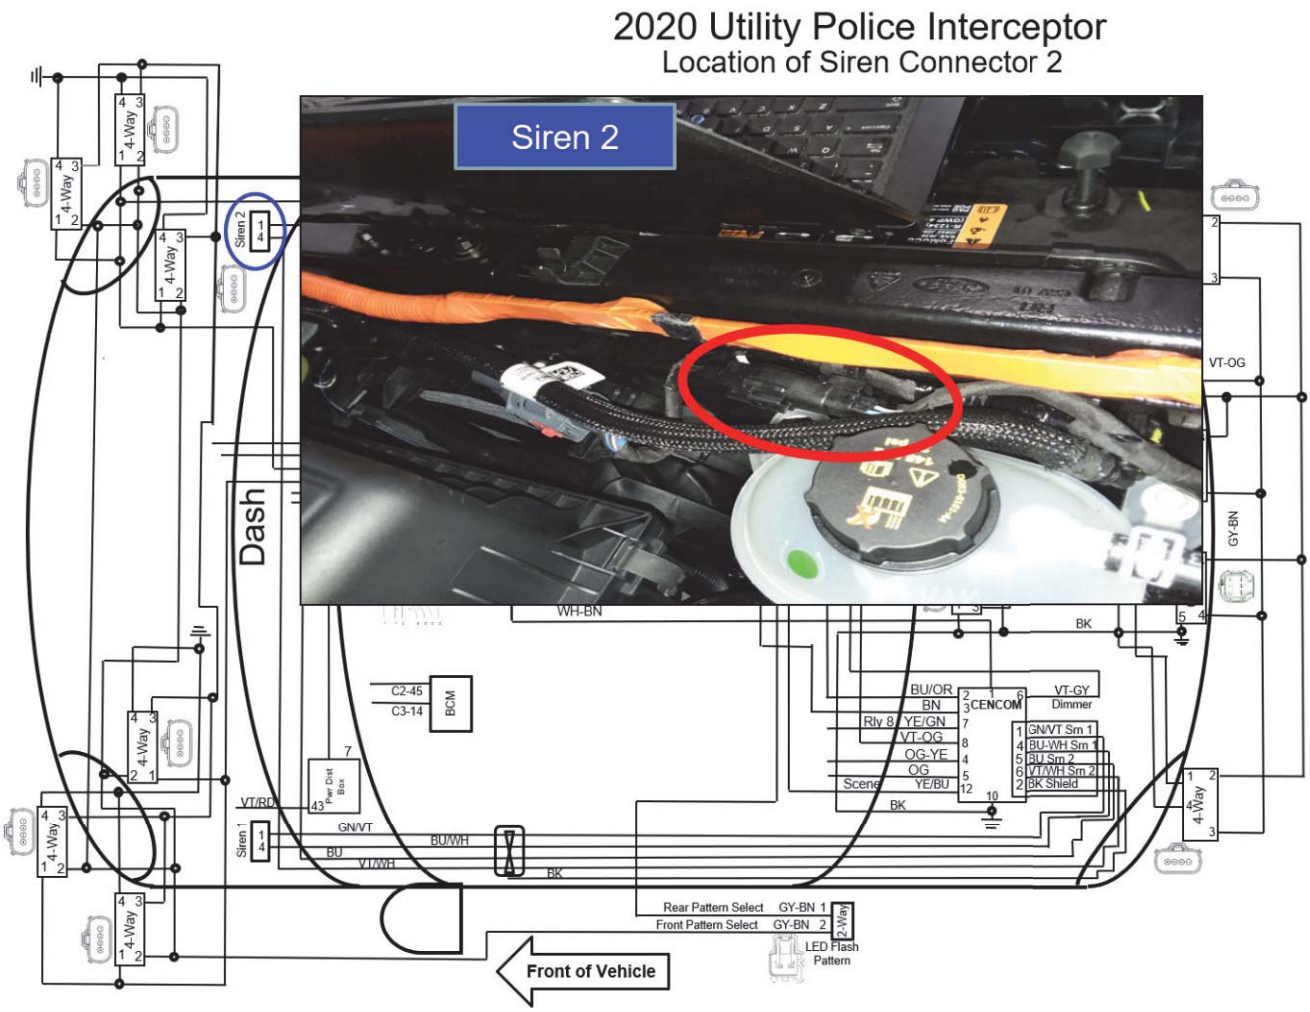

N0183310

Wire Diagram

Battery Junction Box (BJB)

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

BATTERY JUNCTION BOX [BCMC]
(top view)

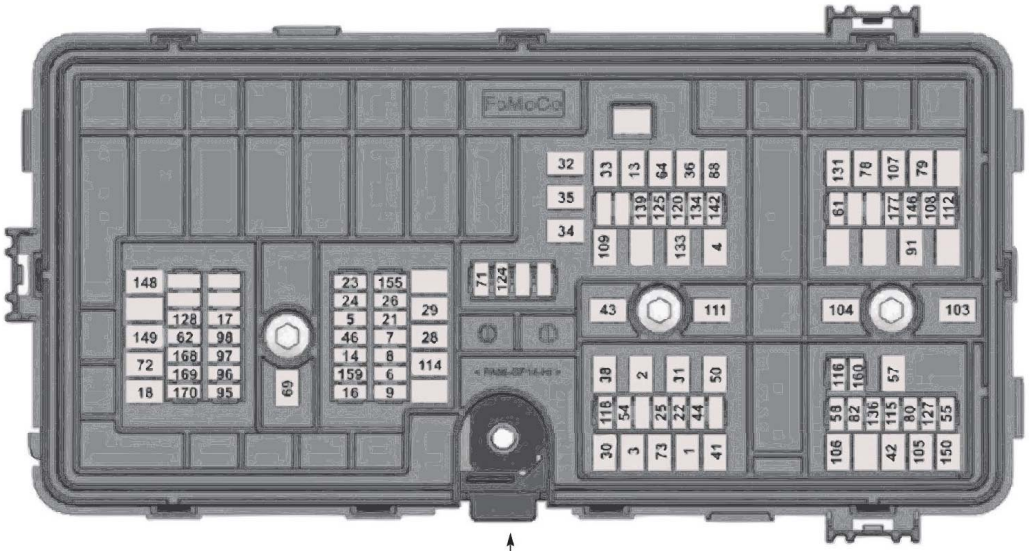

N0184761

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

Horn Ring Circuit

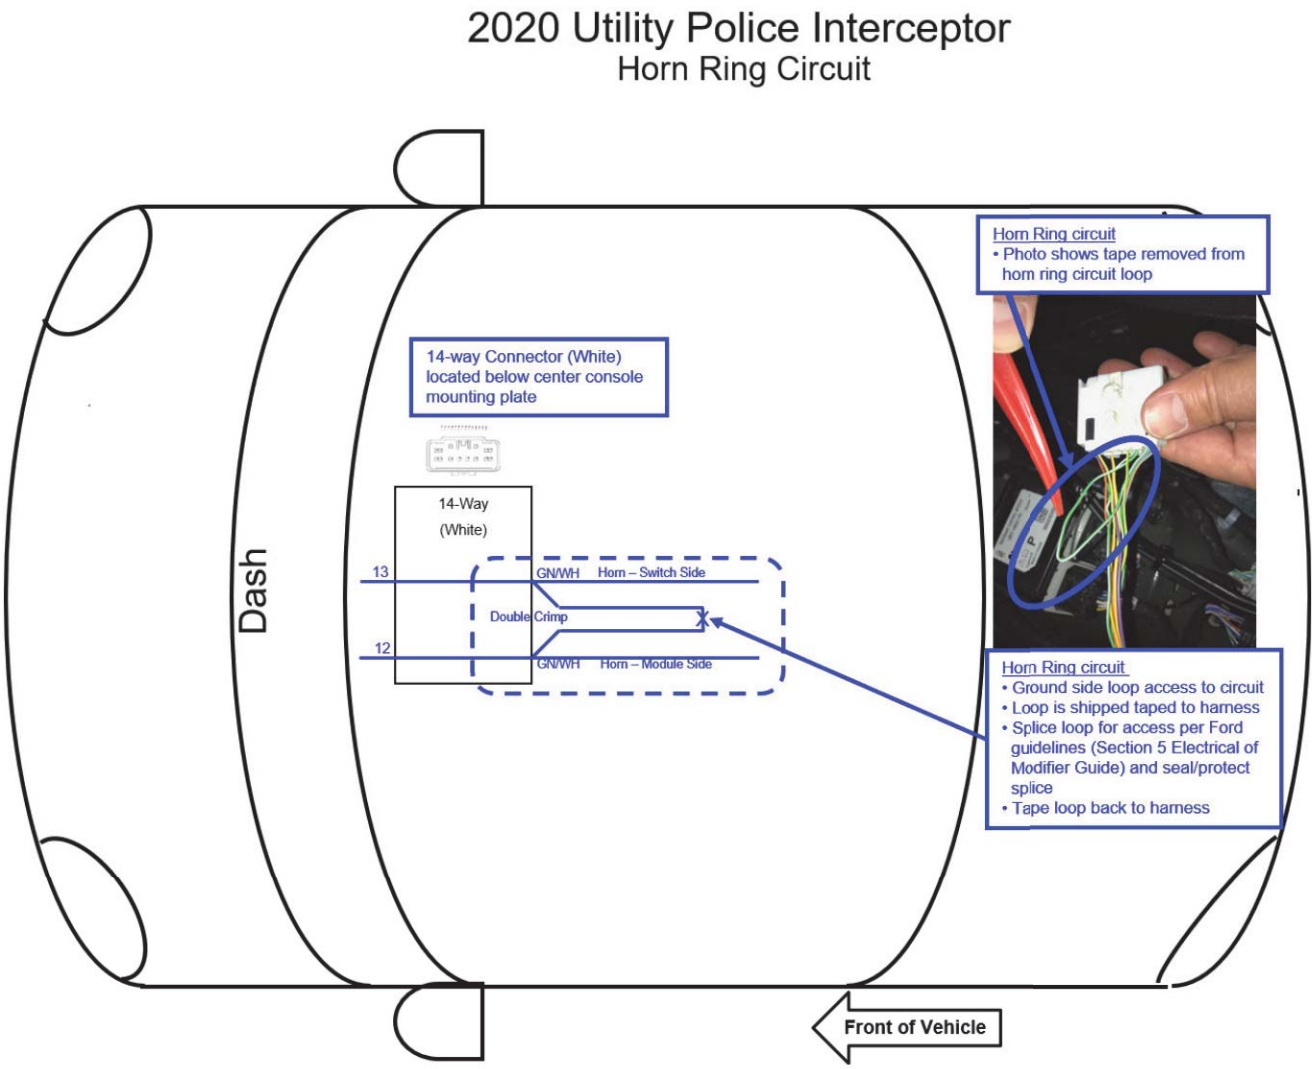
2020 Utility Police Interceptor
Horn Ring Circuit
Dash
14-way Connector (White) located below center console mounting plate
14-Way
(White)
13
GN/WH
Horn – Switch Side
Double Crimp
12
GN/WH
Horn – Module Side
Horn Ring circuit
• Photo shows tape removed from horn ring circuit loop
Horn Ring circuit
• Ground side loop access to circuit
• Loop is shipped taped to harness
• Splice loop for access per Ford guidelines (Section 5 Electrical of Modifier Guide) and seal/protect splice
• Tape loop back to harness
Front of Vehicle

N0182639

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

BODY CONTROL MODULE (BCM)

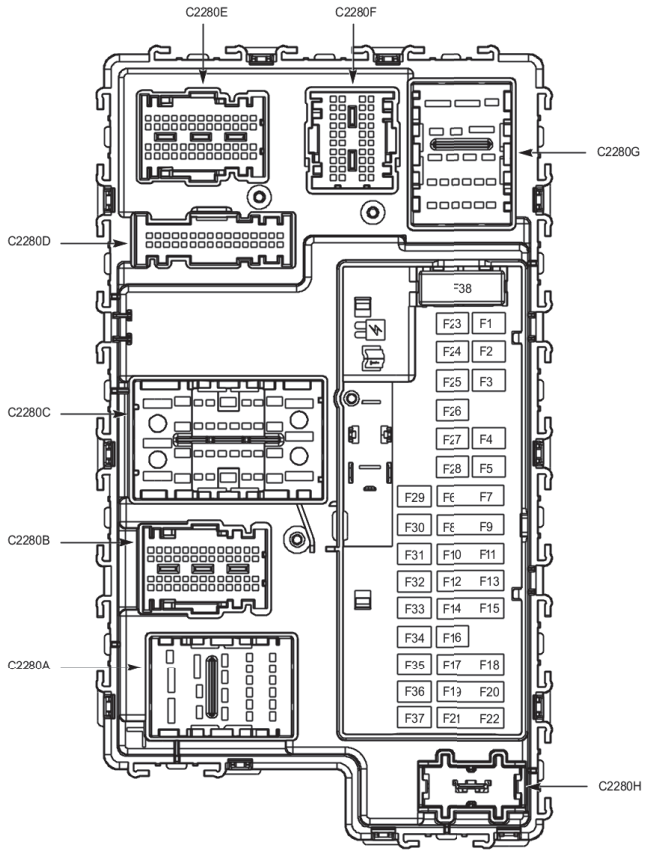

N0180419

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

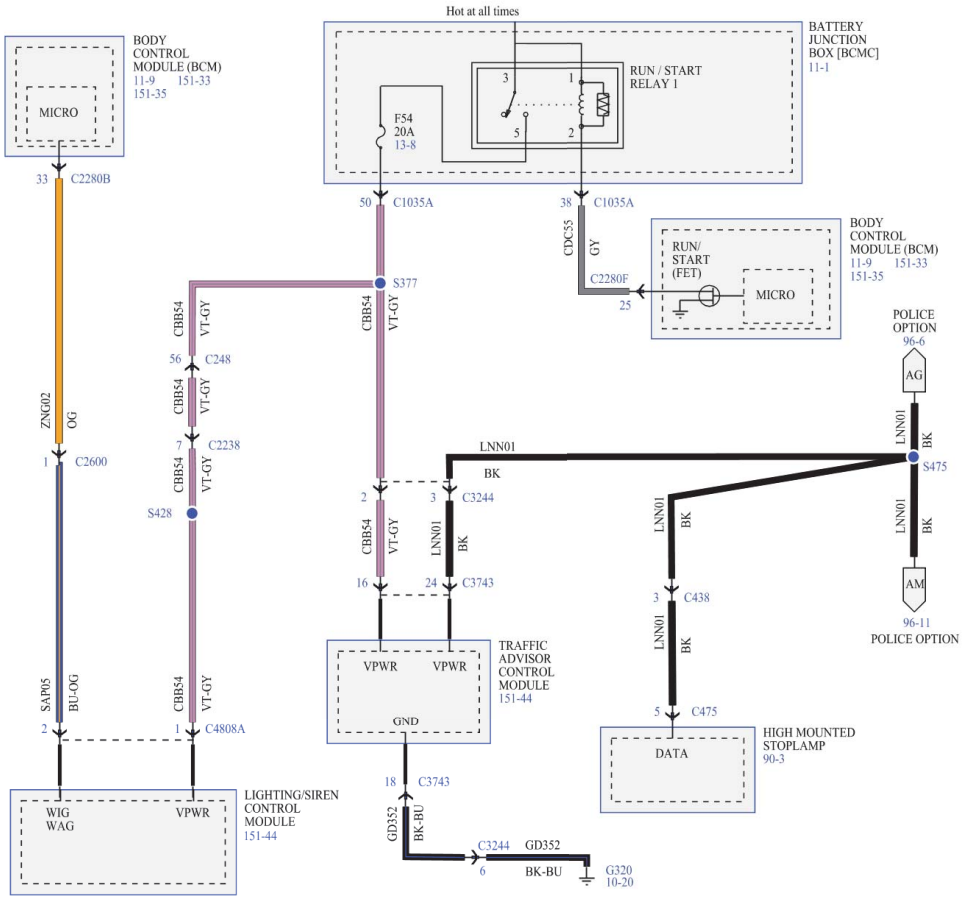

N0182456

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

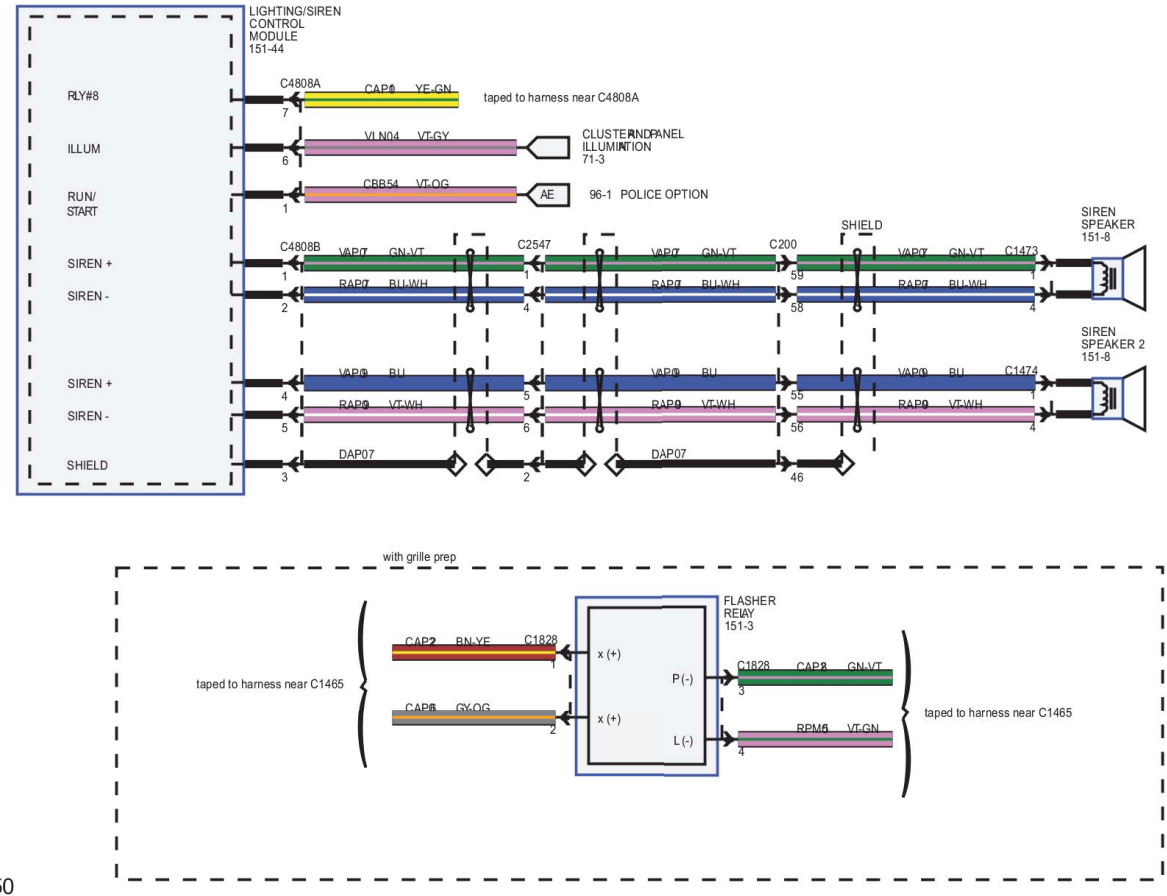

N0180650

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

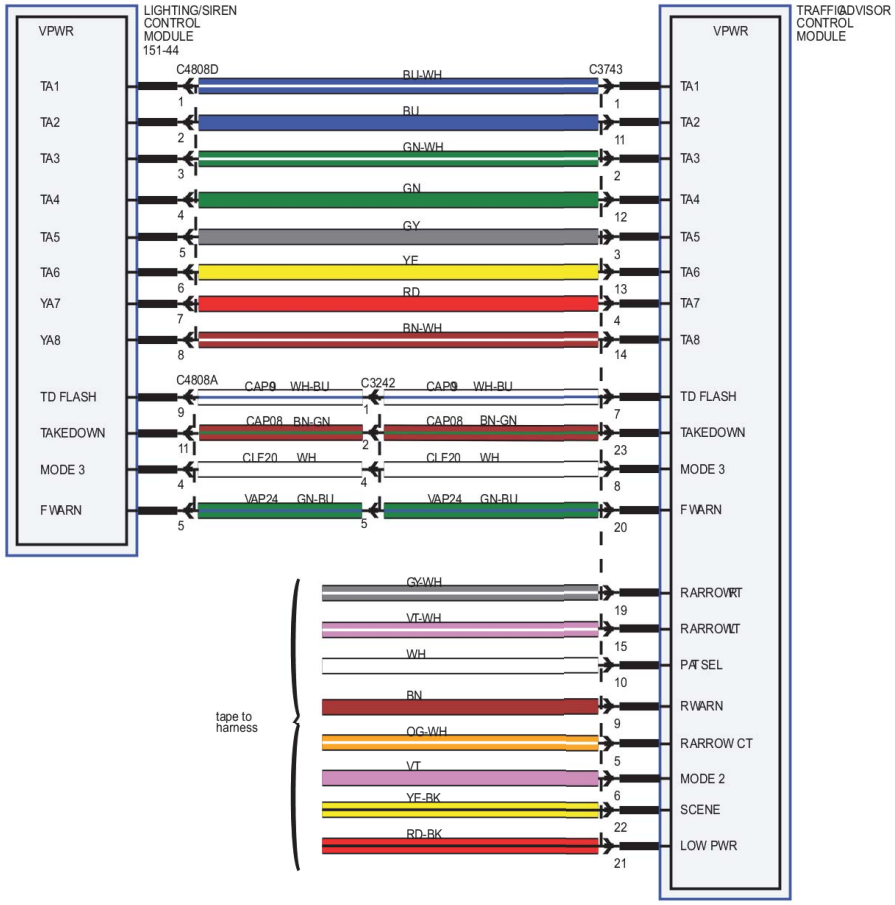

N0180649

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

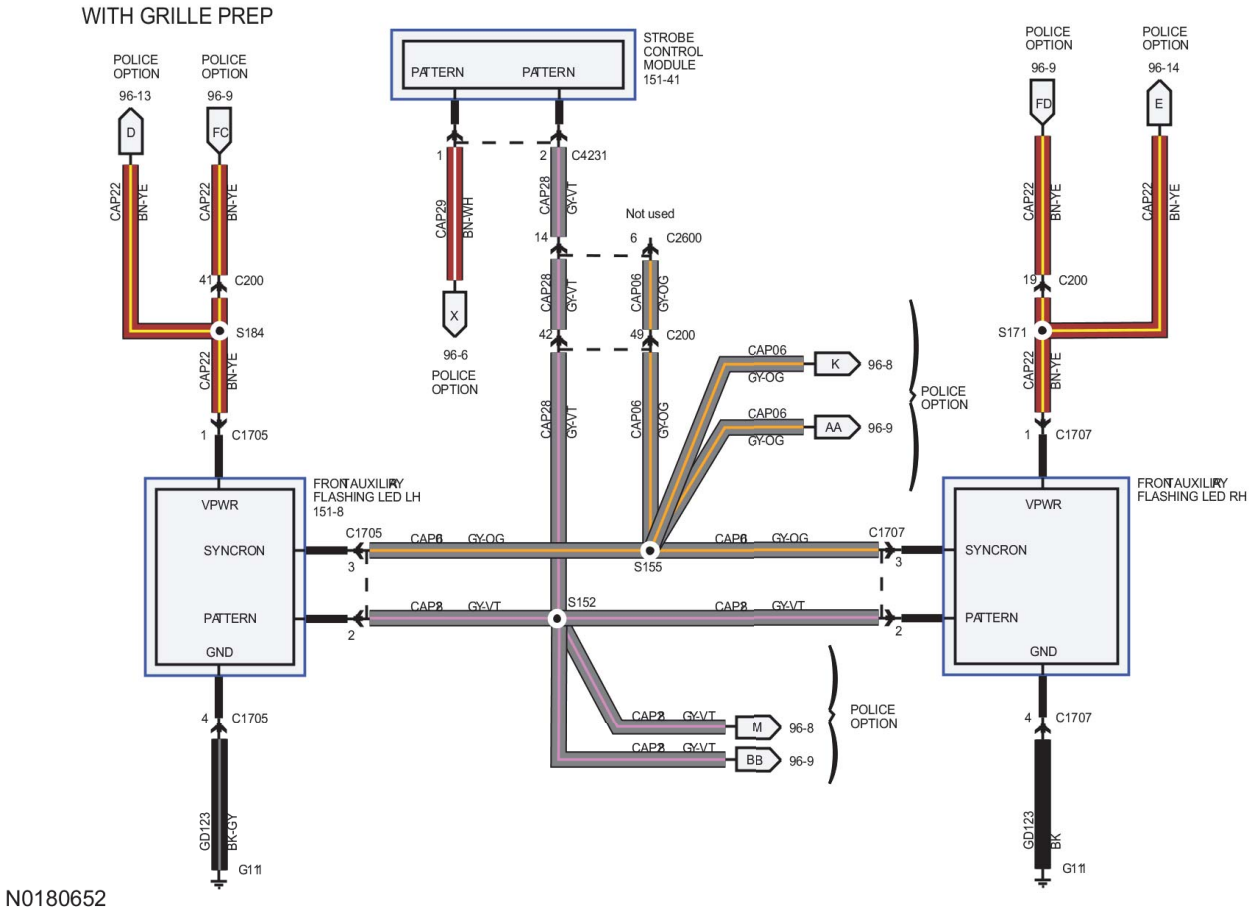

N0180652

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

WITH GRILLE PREP

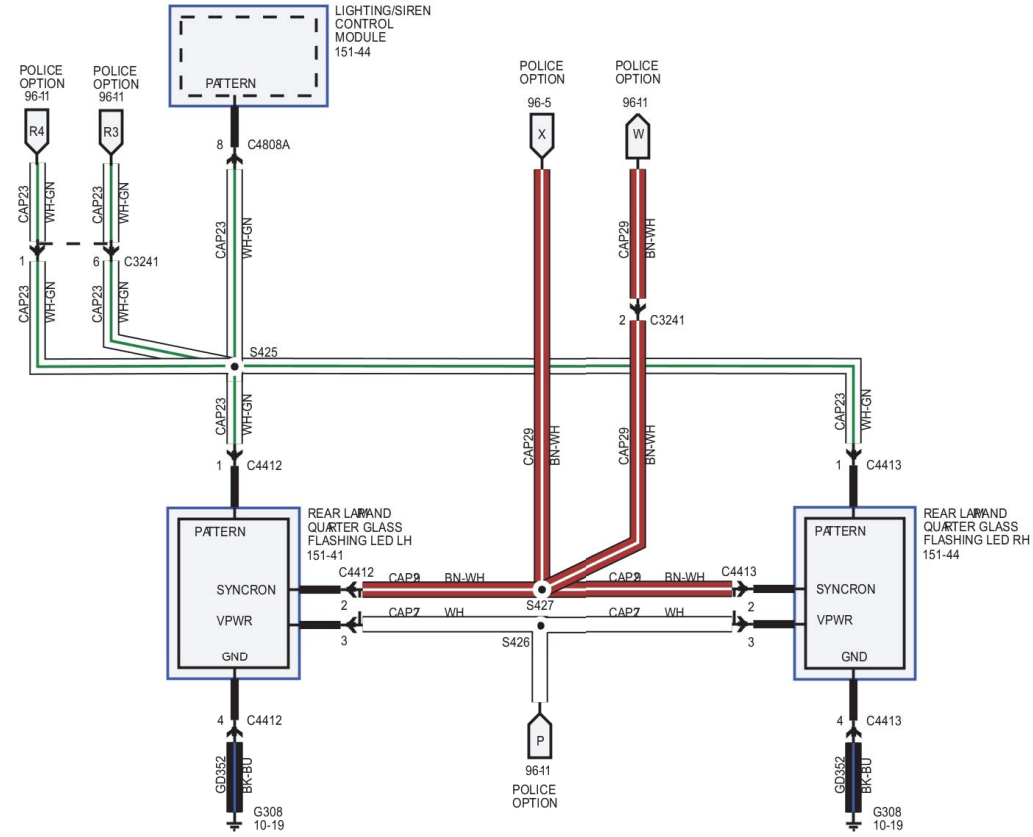

N0180653

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

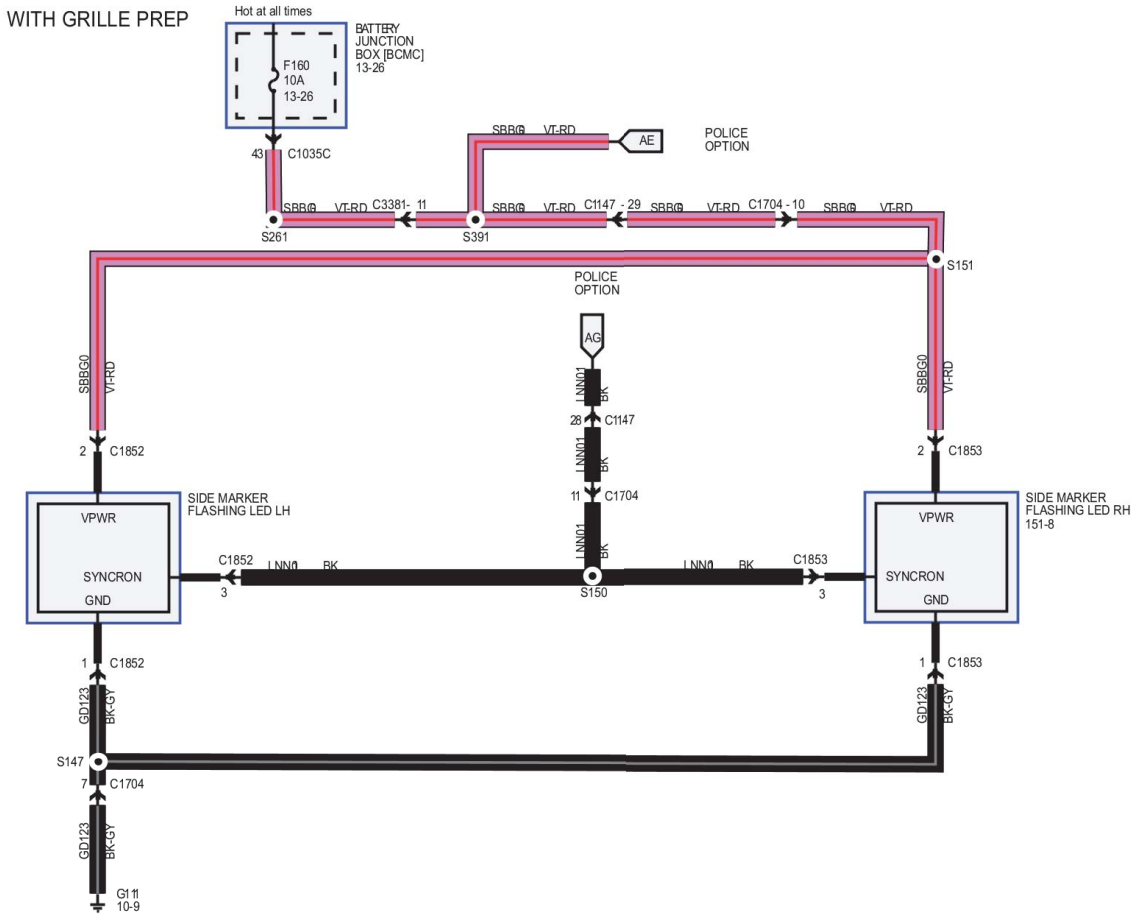

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

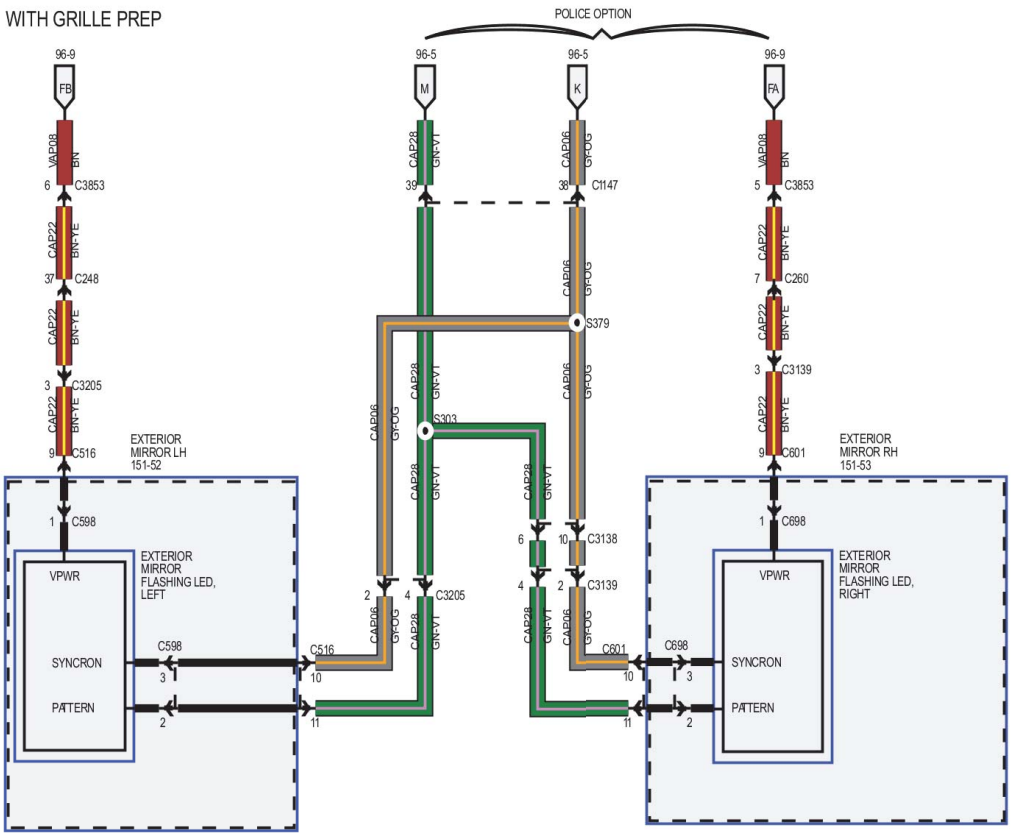

N0180656

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

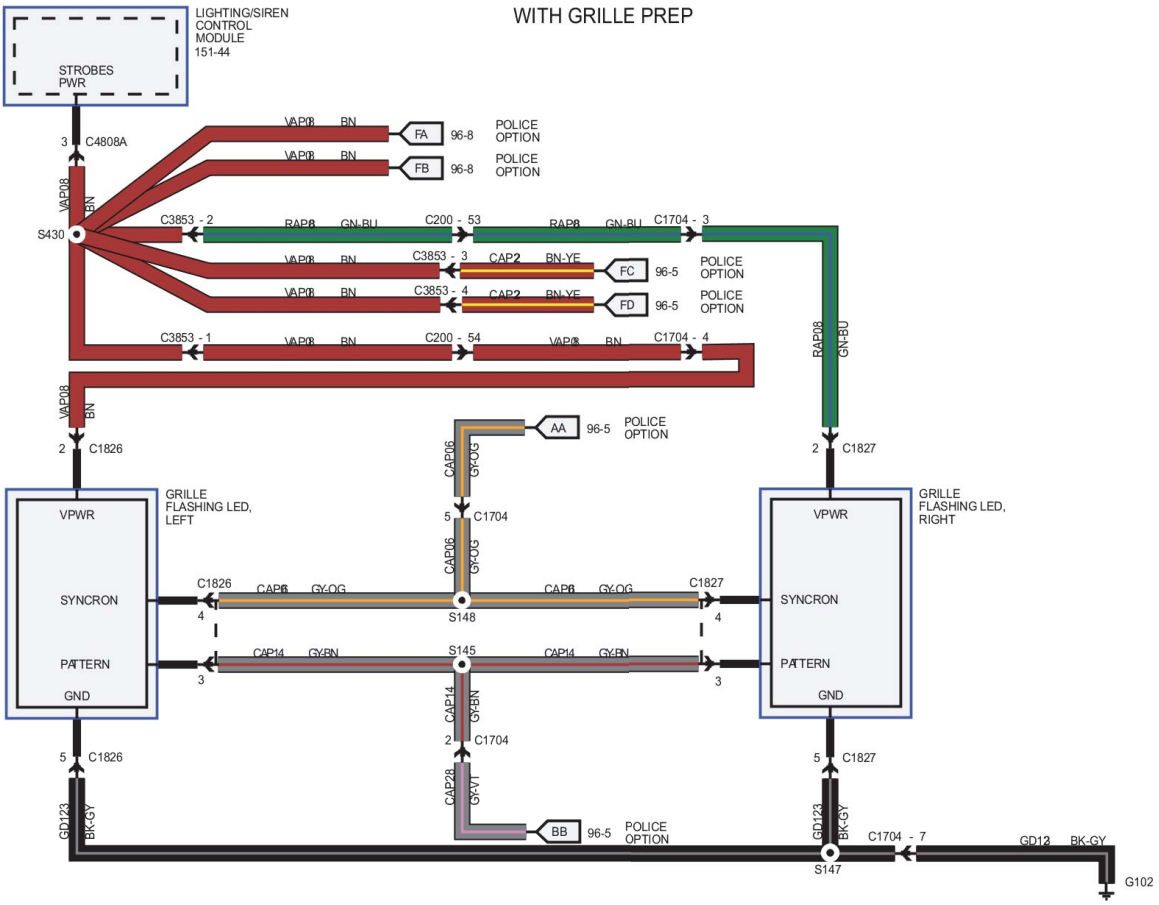

N0180657

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

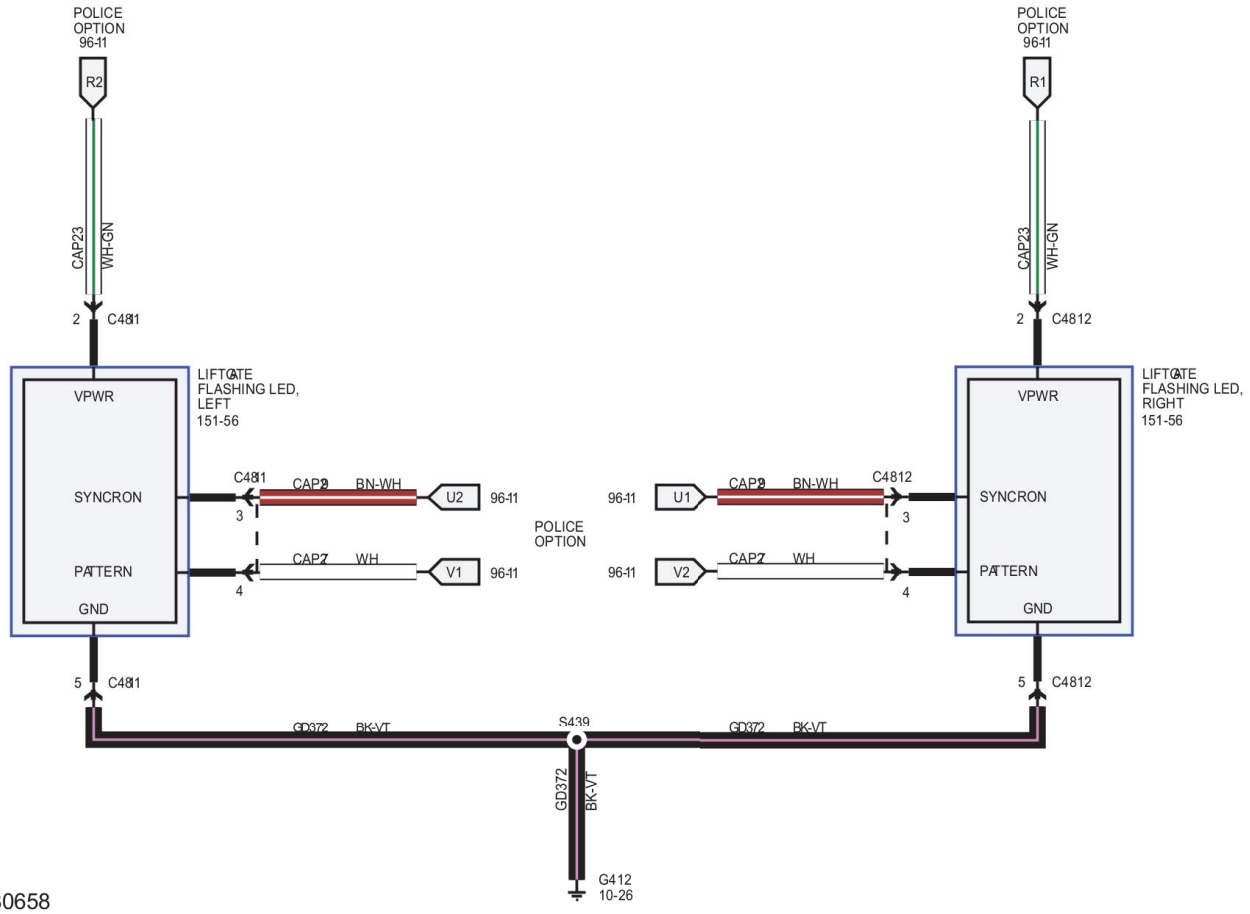

N0180658

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

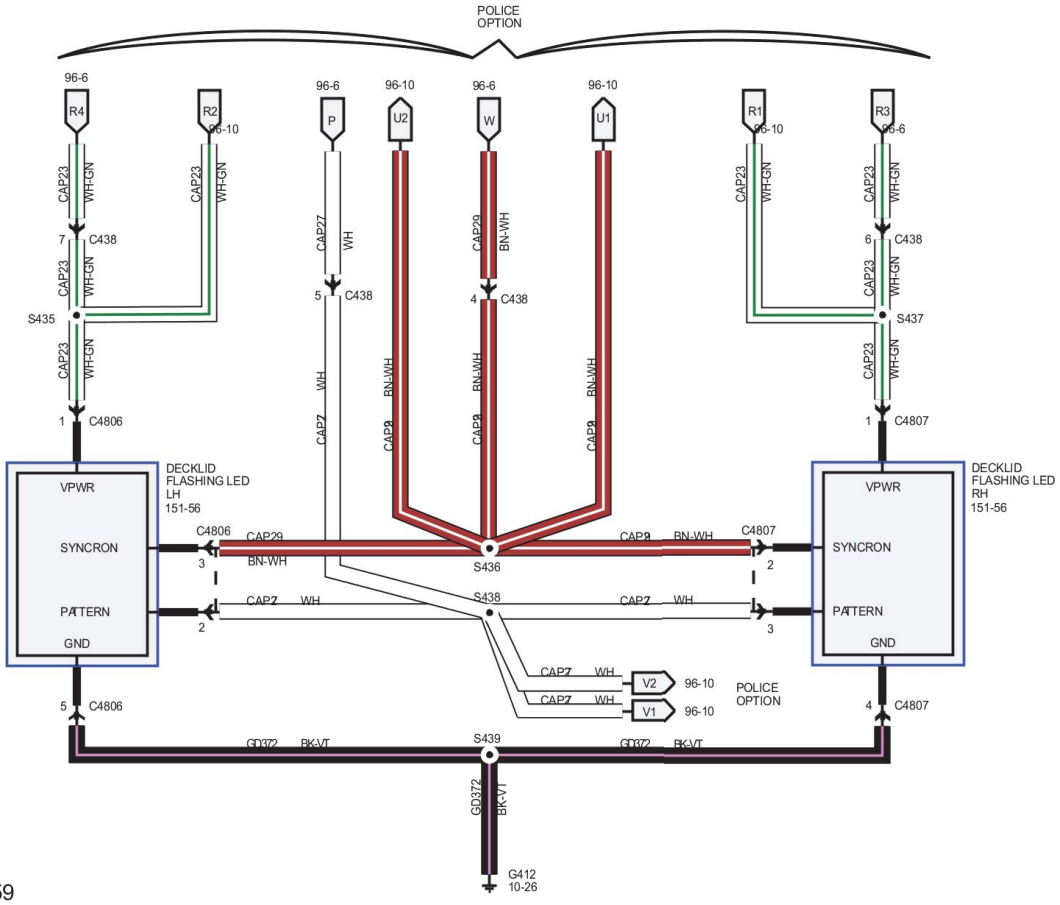

N0180659

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

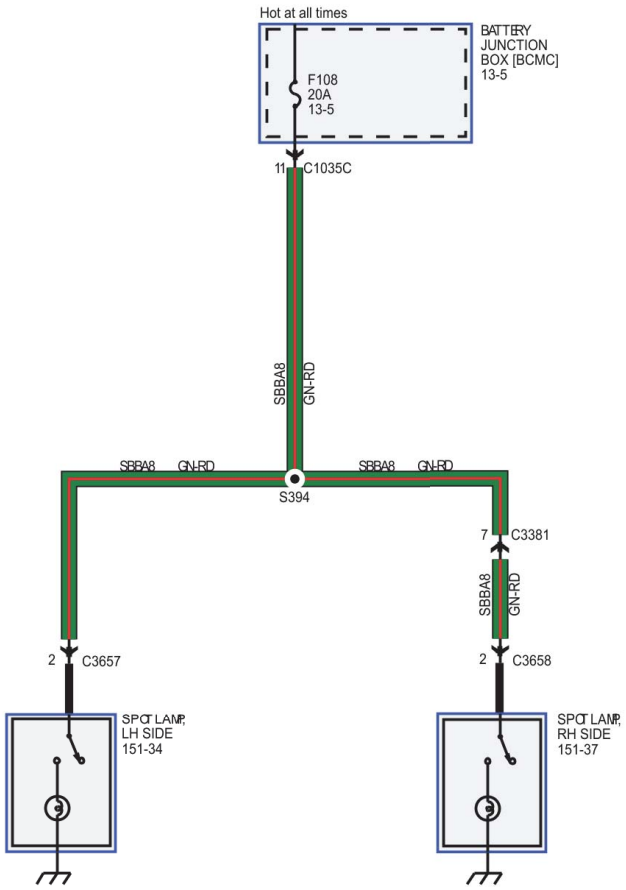

N0180660

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

POLICE HEADLAMPS

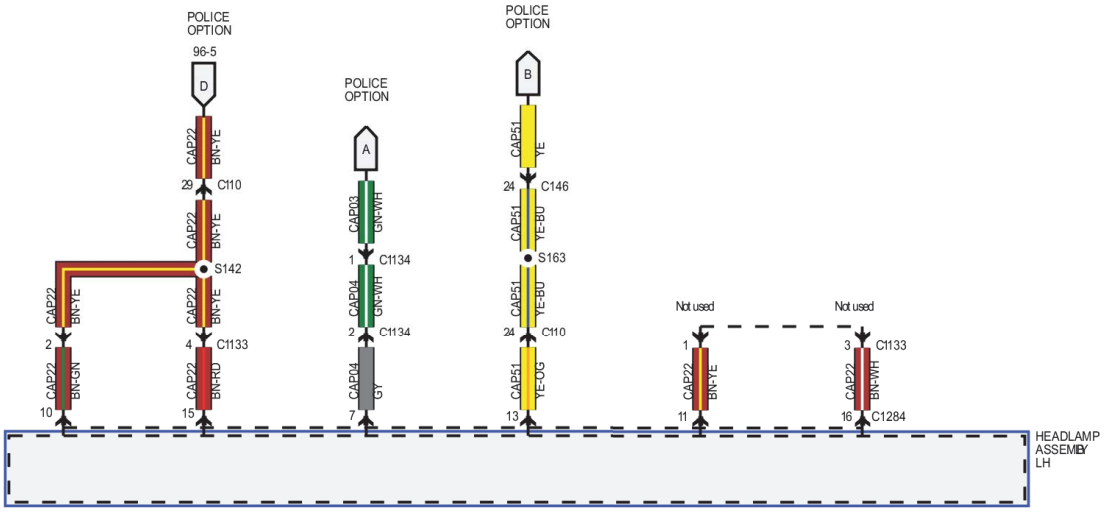

N0180661

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

POLICE HEADLAMPS

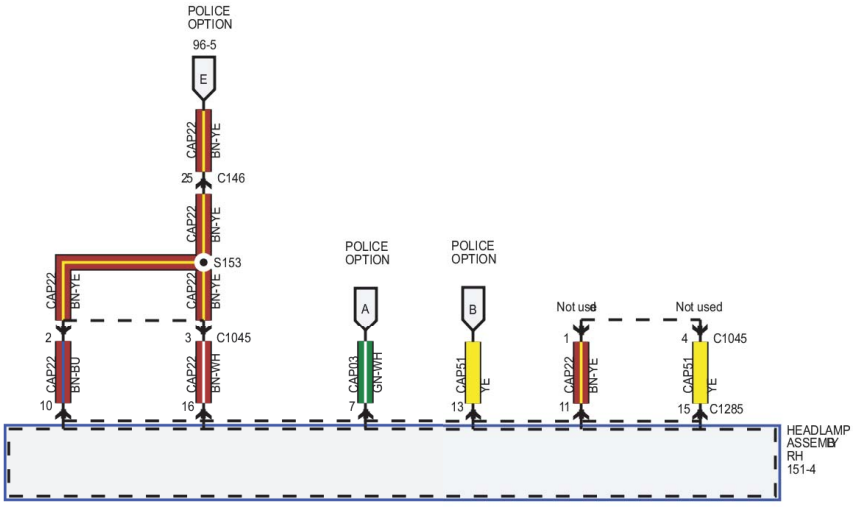

N0180662

 © Copyright Ford 2023 FoMoCo

Section 5: Electrical

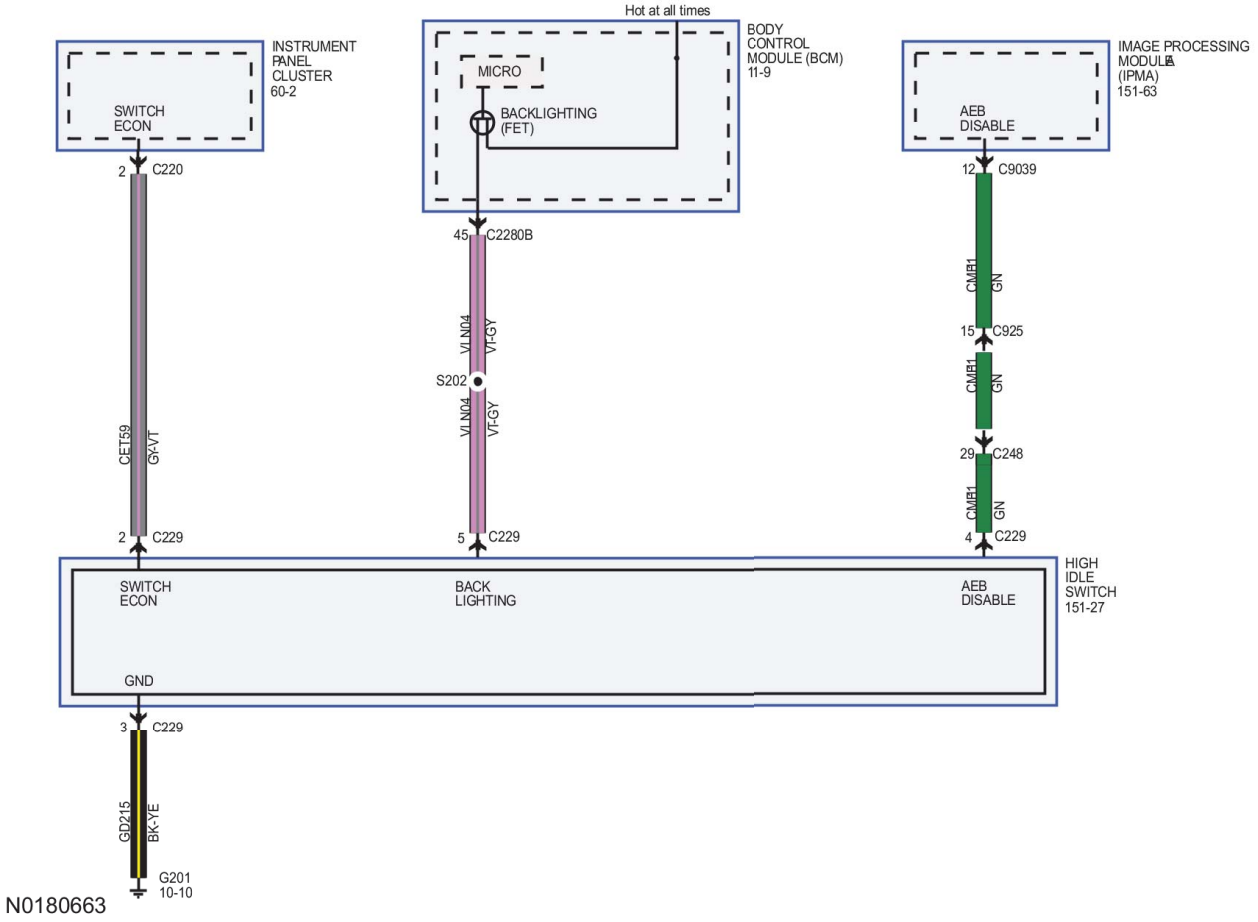

 © Copyright Ford 2023 FoMoCo

Table of Contents

Contents	PAGE
Section 6: Mounting	6-2
Push Bumpers	6-2
Vehicle Interior Partitions	6-2
Seatbelt Opperation	6-3
Siren and Grille Lights	6-3
Mounting Equipment to the Vehicle	6-3
Airbag, Safety Restraint System and Side Impact Sensor Component Description and Location	6-3
Airbag Deployment Interference	6-8
Front Seat Headrest	6-9
Seat Attaching Bolts	6-9
Roof Bow Locations	6-16
Cargo Area View	6-17
Areas to Avoid When Choosing Mounting Locations	6-17
High Voltage System Components	6-18
Fuel System Components	6-18
Brake System Components	6-19
Exhaust System Components	6-19
Floor Drain	6-20

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

Section 6: Mounting

Push Bumpers

Ford Motor Company understands it may be desirable to install a push bumper mounted on the front of emergency vehicles. The installation of push bumpers may adversely affect certain safety systems and/or performance aspects of your vehicle. You should consider the following when deciding whether to install a push bumper, the type of push bumper, and the appropriate installation.

Effect on Driver Assist Features

Driver assist features require sensors and cameras to monitor areas around the vehicle. Some push bumper designs may block or restrict the ability of the sensors and cameras to monitor the area around the vehicle. This could prevent the driver assist feature(s) from performing as designed and provide the intended safety benefit.

Effect on Air Bag Deployment

Different push bumper designs may each have unique deformation characteristics in a crash situation that may or may not affect the deployment of air bags. Without the benefit of crash tests on vehicles equipped with push bumpers (there are a number of different styles available), it is the opinion of Ford Motor Company that installation of some push bumpers could affect the timing of the air bag deployment. Use of a push bumper that mounts solely to the vehicle's bumper should not have a significant effect on air bag deployment.

Effect on Weight Distribution

The balance and weight distribution of a vehicle is carefully planned to achieve optimal stability, handling, and braking. Push bumpers can change this weight distribution by adding excessive weight to the front of the vehicle. There are many different styles of push bumpers available. Depending on the mounting and weight of the push bumper to be installed, it could have an adverse effect on the handling of a vehicle. Always verify the vehicle ride height after the addition of a push bumper. Adjust the ride weight if the measurements are not within specifications.

Effect on Air Flow

The powertrain cooling system on a vehicle relies on proper airflow through the radiator to keep the powertrain at its proper operating temperature. When adding a push bumper to a vehicle, make sure this airflow is not obstructed, especially when light and sirens are mounted on the push bumper. Reduced airflow could put additional strain on the cooling system and shorten the operational life of the related components. Elevated temperatures may also result in a reduced performance mode of operation intended to prevent temperature increase that may operate in a reduced power mode. During the installation process, keep the placement of components away from the grille area of the vehicle. For any components mounted in the grille area above the bumper, use factory-installed locations and do not exceed sizing of factory-installed components to maintain required airflow. Do not mount equipment below the bumper in front of the lower front fascia opening.

Vehicle Interior Partitions

Ford Motor Company understands it may be desirable to install partitions between certain areas inside the vehicle. The installation of partitions may adversely affect certain safety systems and/or occupants and K-9 passengers. You should consider the following when deciding whether to install a partitions, the type of partition, and the appropriate installation.

Effect on Air Bag Deployment

Care must be taken when selecting and installing partitions to prevent the partition from restricting the deployment path of air bags, routing of air bag wiring to the air bags and aftermarket police equipment (examples include, lights, siren, radios, antenna, video, etc.) wiring that may use the same routing path and restrict/prevent air bags from deploying. If the partition restricts the deployment path, the air bag may not fully deploy and/or its rate of deployment changed such that it will not provide the designed protection for the vehicle. Damage to the wiring and/or connectors that control the deployment of the air bags may prevent the air bag from deploying either fully or at the intended timing.

Occupant Protection

For air bags to perform as designed, a vehicle upfit must not affect the as-designed full deployment and timing of deployment. Federal Motor Vehicle Safety Standards (FMVSS) and Canadian Motor Vehicle Safety Standards (CMVSS) provide information regarding occupant area requirements. FMVSS/CMVSS requirements should be consulted when selecting and installing a partition and the occupant area created. Occupant safety can also be affected by contact with a hard surface (i.e., steel, etc.) or with aftermarket partitions and equipment, as a result of, for example, traffic collision, emergency response-type driving conditions, etc.

Occupant Comfort

The design of the partition may affect air flow from the vehicle climate control (heating/cooling) system if air flow inside the vehicle is restricted. Vehicle climate control venting can be considered with the design of the partition for temperature considerations.

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

Interior Equipment Mounting

⚠ WARNING:
Interior trim panels should not be used for mounting police equipment.

Seatbelt Opperation

⚠ WARNING:
The partition and the installation hardware of the partition must not interfere with the proper operation of the safety belt, safety belt retractor, side impact sensor and the safety belt height adjusters. Failure to follow these instructions may result in personal injury.

Siren and Grille Lights

NOTICE:
Do not modify the cooling system. High voltage vehicle components may be damaged if any cooling system modifications are attempted.

The cooling system relies on proper airflow through the radiator to keep components at their proper operating temperature. When adding sirens and grille lights to a vehicle, make sure this airflow is not obstructed. Reduced airflow could put additional strain on the cooling system and shorten the operational life of related components. The cooling system also cools the electric motors and electronics. If the coolant exceeds certain temperatures, the components will attempt to protect themselves by limiting the power and torque available. During the installation process, keep the placement of components away from the grille area of the vehicle.

Mounting Equipment to the Vehicle

- Do not mount equipment to the high voltage (orange) wiring/cables, the high voltage cover or the HVTB cooling plenum.
- Do not mount equipment on the instrument panel between the driver and passenger airbags due to deployment variability.
- Do not mount equipment on the instrument panel between the driver and the pedals, between the door and the console area due to knee airbag deployment variability.
- Do not mount equipment obstructing the HVTB service disconnect located under the hood, LH side of the engine compartment.
- Do not remove or block the HVTB cooling plenum or ducts. These components are necessary for the proper cooling of the HVTB.
- Do not cover any warning or vehicle labels.
- ***NOTICE:***
  The side impact sensors are tuned to excite based on their mass (including wiring), as well as the host sheet metal. Any alteration to these components must be avoided. Additions such as padding, wire connectors, retainers, tape or fasteners of any kind should not be used. All fasteners in this predominantly sheet metal environment should be made of steel or a non-conductive plastic to guarantee retention and longevity. If any part of a steel fastener is exposed to a wet area, it should be plated to resist corrosion.
- Do not mount equipment to the A, B, C, or D-pillars.
- Do not mount equipment on the headliner within 200 mm (8 in) of the side edges.
- Do not mount equipment above the beltline within 200 mm (8 in) of the side glass from the A-pillar leading edge to the rear edge of the D-pillar.
- Do not mount equipment on the headliner along the siderails.
- Do not install a partition, divider or equipment that spans the vehicle above the beltline.

Airbag, Safety Restraint System and Side Impact Sensor Component Description and Location

The safety belt retractors are located in the base of the B-pillars. The pretensioner located in the retractor is referred to as the safety belt retractor pretensioner. In the event the Restraints Control Module (RCM) senses an impact, pretensioners provide improved occupant protection by rapidly removing slack from the safety belt. Removing slack from the safety belt helps to properly position the occupant and allows for maximum effectiveness of the safety belts and the airbags.

- Do not use the safety belt retractor bolts for mounting the partition.
- Do not mount any partition hardware on the inboard side of the B-pillar within the bottom 305 mm (12 in).
- Do not mount any partition hardware that will interfere with the proper sealing of the door.
- Do not mount any police hardware to block and/or reduce the design intent function of driver safety systems such as auto emergency brakeing camera if equipped.

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

NOTE:
The effectiveness of all safety system sensing equipment should be reviewed duirng the upfit process to ensure design intent function.

The side impact sensors are located in the front doors and C-pillars; one sensor in each door and in each C-pillar. The location and orientation are critical for the correct operation of all the impact sensors. Do not use the attachment bolts of the impact sensors to mount any equipment.

The RCM is mounted under the front of the center console. The RCM orientation is critical for proper operation of the restraint systems. Do not relocate or use the RCM mounting bolts for attachment purposes of any equipment.

Various safety restraints exist within the vehicle, the restraint system includes various modules, sensors, retractors, airbags and the safety belt systems. Refer to the workshop manual for more detail on the safety restraint system.

NOTE:
If OEM rear seat belt, buckles and pre-tensioner cannot be used as design intent, retaining and securing them will prevent OEM warning notifications to occupants, but the vehicle modifier is responsible for providing an alternative safety restraints system that meets FMVSS requirements.

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

NOTE:
Airbag, safety restraint system and side impact sensor component location shown below.

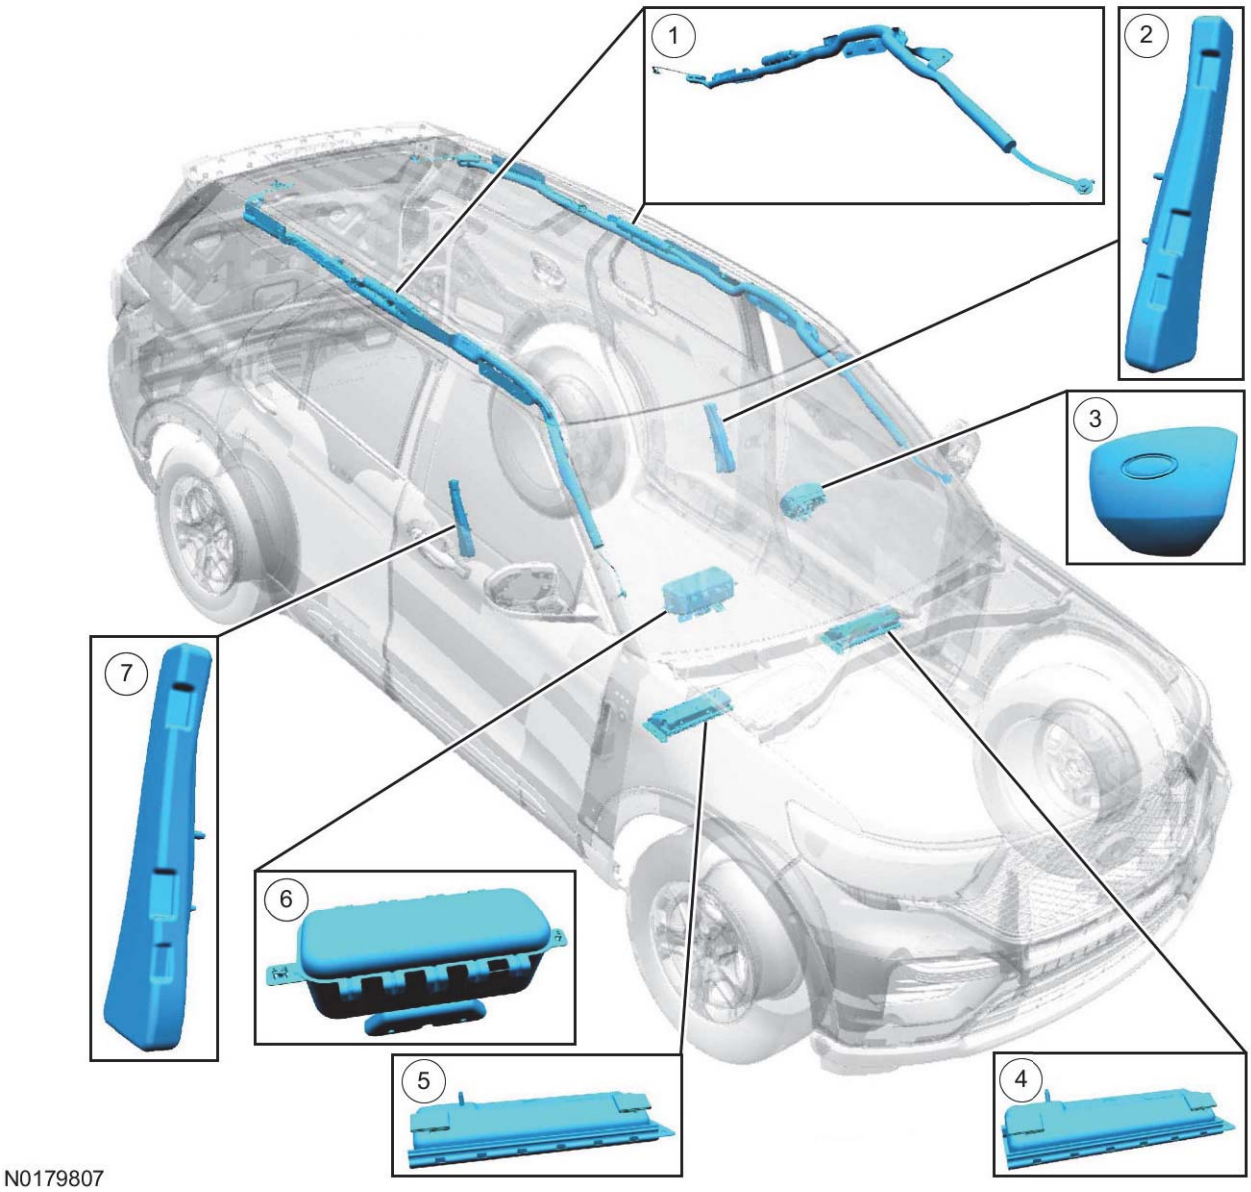

Item	Description
1	Driver and passenger side curtain airbag
2	Driver side airbag
3	Driver airbag
4	Driver knee airbag
5	Passenger knee airbag
6	Passenger airbag (includes canister vent)
7	Passenger side airbag

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

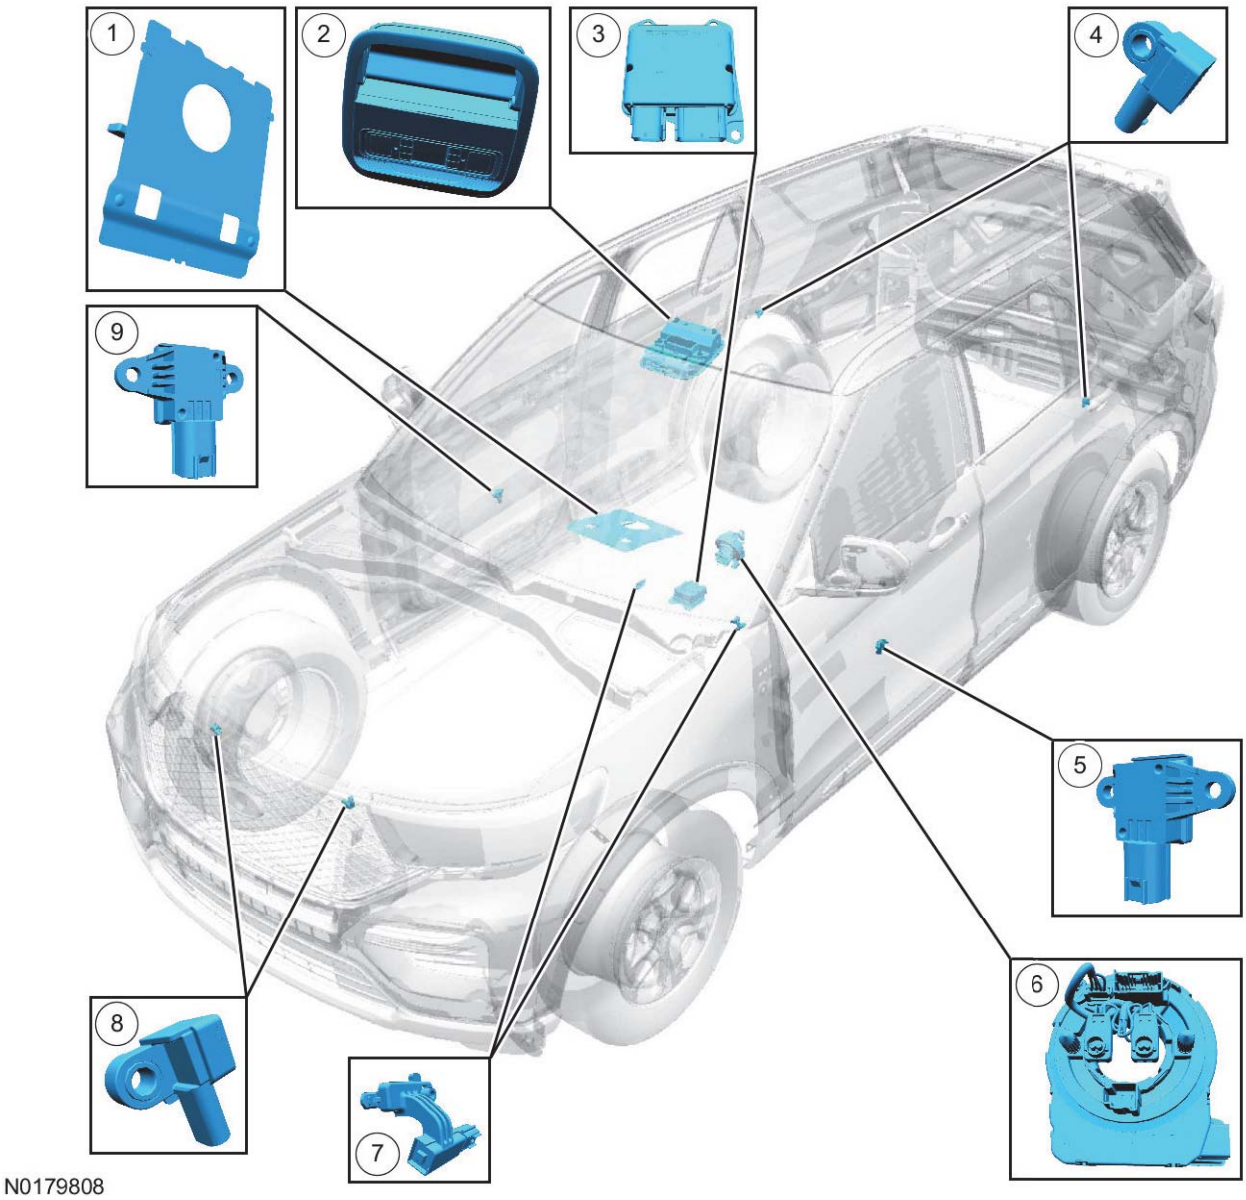

Item	Description
1	OCSM (occupant classification system module) (includes OCS (occupant classification system) sensor and gel-filled bladder)
2	Overhead console (includes PAD (passenger airbag deactivation) indicator)
3	RCM (restraints control module)
4	Driver and passenger C-pillar side impact sensors
5	Driver front door side impact sensor
6	Clockspring

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

(Continued)

7	Seat position sensors
8	Driver and passenger front impact severity sensors
9	Passenger front door side impact sensor

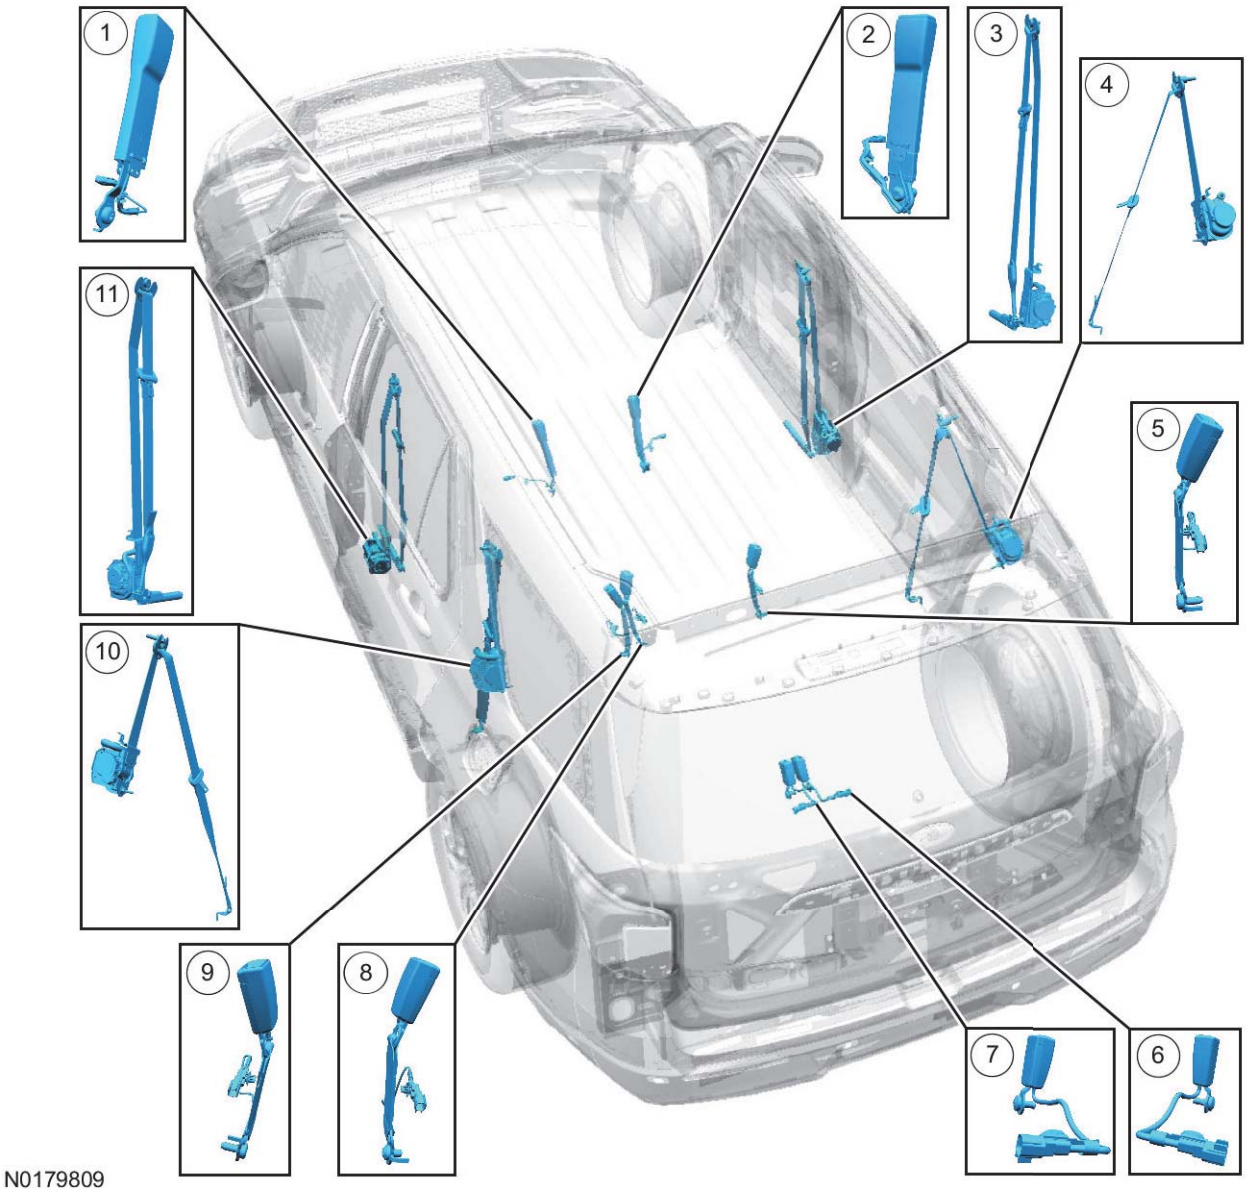

Item	Description
1	Driver seatbelt buckle (includes buckle sensor)
2	Front passenger seatbelt buckle (includes buckle sensor and Belt Tension Sensor (BTS)

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

(Continued)

3	Front passenger seatbelt retractor (includes retractor pretensioner, retractor load limiter and anchor pretensioner)
4	Second row passenger side outer seatbelt retractor (includes retractor pretensioner)
5	Second row passenger side outer seatbelt buckle (includes seatbelt buckle switch)
6	Third row passenger side seatbelt buckle (includes seatbelt buckle switch)
7	Third row driver side seatbelt buckle (includes seatbelt buckle switch)
8	Second row center seatbelt buckle (if equipped) (includes seatbelt buckle switch)
9	Second row driver side outer seatbelt buckle (includes seatbelt buckle switch)
10	Second row driver side outer seatbelt retractor (includes retractor pretensioner)
11	Driver seatbelt retractor (includes retractor pretensioner)

Airbag Deployment Interference

⚠ WARNING:
Do not place objects or mount equipment in front of the airbag module cover or in the front seat area; this is to avoid contact with a deploying airbag. Placing objects on or over the airbag inflation area may cause those objects to be propelled by the airbag. Failure to follow these instructions may result in personal injury.

⚠ WARNING:
Dash, tunnel or console-mounted equipment should be placed only within their specified zone. Failure to follow this instruction may result in personal injury.

⚠ WARNING:
Do not mount equipment between the side of the front seat and the door trim that would block deployment of the side airbag. Failure to follow this instruction may result in personal injury.

⚠ WARNING:
Do not mount equipment on the instrument panel between the driver and the pedal area, between the door and the console that may come in contact with or block a deploying knee airbag. Failure to follow this instruction may result in personal injury.

⚠ WARNING:
Do not attempt to service, repair or modify the airbag supplemental restraint systems (SRS) or its fuses. See your Ford or Lincoln dealer. Failure to follow this instruction may result in personal injury.

⚠ WARNING:
Modifications to the front end of the vehicle, including frame, bumper, front end body structure, tow hooks and B-pillar surrounding parts may affect the performance of the airbag sensors, increasing the risk of injury. Do not modify the front end of the vehicle.

⚠ WARNING:
Do not place objects or mount equipment on or near the headliner at the siderail that may come into contact with a deploying Safety Canopy® System. Failure to follow this instruction may increase the risk of personal injury in the event of a collision.

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

⚠ WARNING:
Do not attempt to service, repair or modify the Safety Canopy® System, its fuses, the A, B, C, or D-pillar trim, or the headliner on a vehicle containing a Safety Canopy® System. See your Ford or Lincoln dealer.

⚠ WARNING:
To reduce risk of injury, do not obstruct or place objects in the deployment path of the inflatable Safety Canopy® System.

NOTICE:
The side impact sensors are tuned to excite based on their mass (including wiring), as well as the host sheet metal. Any alteration to these components must be avoided. Additions, such as padding, wire connectors, retainers, tape or fasteners of any kind should not be used. All fasteners in this predominantly sheet metal environment should be made of steel or a non-conductive plastic to guarantee retention and longevity. If any part of a steel fastener is exposed to a wet area, it should be plated to resist corrosion.

Driver/passenger airbags affect the way equipment can be mounted in vehicles. Any surfaces that could come into contact with an airbag during deployment must not damage the airbag or alter its deployment path. Sharp edges, corners or protrusions could damage the nylon airbag material and reduce the effectiveness of the airbag. Do not mount or place any objects in the deployment path of an airbag. Airbags must be allowed to fully deploy without restriction. The deployment of airbags is not compatible with any configuration of equipment mounting that places objects in the airbag deployment path. Equipment mounted or placed in the deployment area of an airbag will reduce the effectiveness of the airbag, damage the airbag and potentially damage or dislodge the equipment.

Airbag deployment drawings are provided in Section 7. Consult the drawings before equipment is installed inside the passenger compartment to make sure that the mounted equipment does not interfere with airbag deployment.

Front Seat Headrest

1. Remove the outboard seat head restraint.
   a. Push down on the outboard seat backrest cover to gain access to the outboard seat head restraint retaining clip.
   b. Remove and discard the outboard seat head restraint retaining clip.
   c. Push the outboard seat headrest restraint release button.

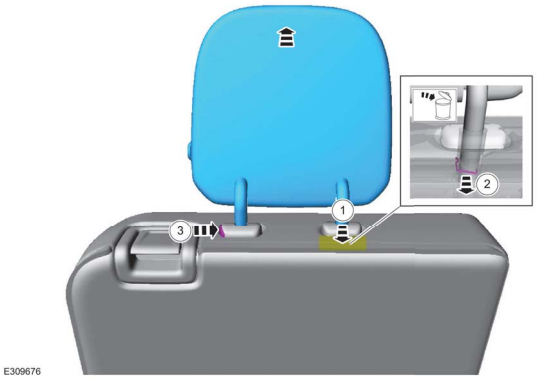

Seat Attaching Bolts

The vehicle safety belts and seat assemblies are factory installed in their correct location. Seat attaching bolts are not to be used as attachment points for any equipment. Front seat bolts are to be discarded when removed (one time use). Any added material between the seat attaching bolt and the seat frame could have unpredictable effects on the seat bolt torque. If the safety belts are removed for any reason, all of the appropriate attaching hardware must be hand started and then tightened to the correct torque specifications as per the Workshop Manual. Proper operation must be verified before returning the vehicle to service.

NOTE:
The retainers shown below are one time use. If removed, replace with a new retainer.

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

Front Seat

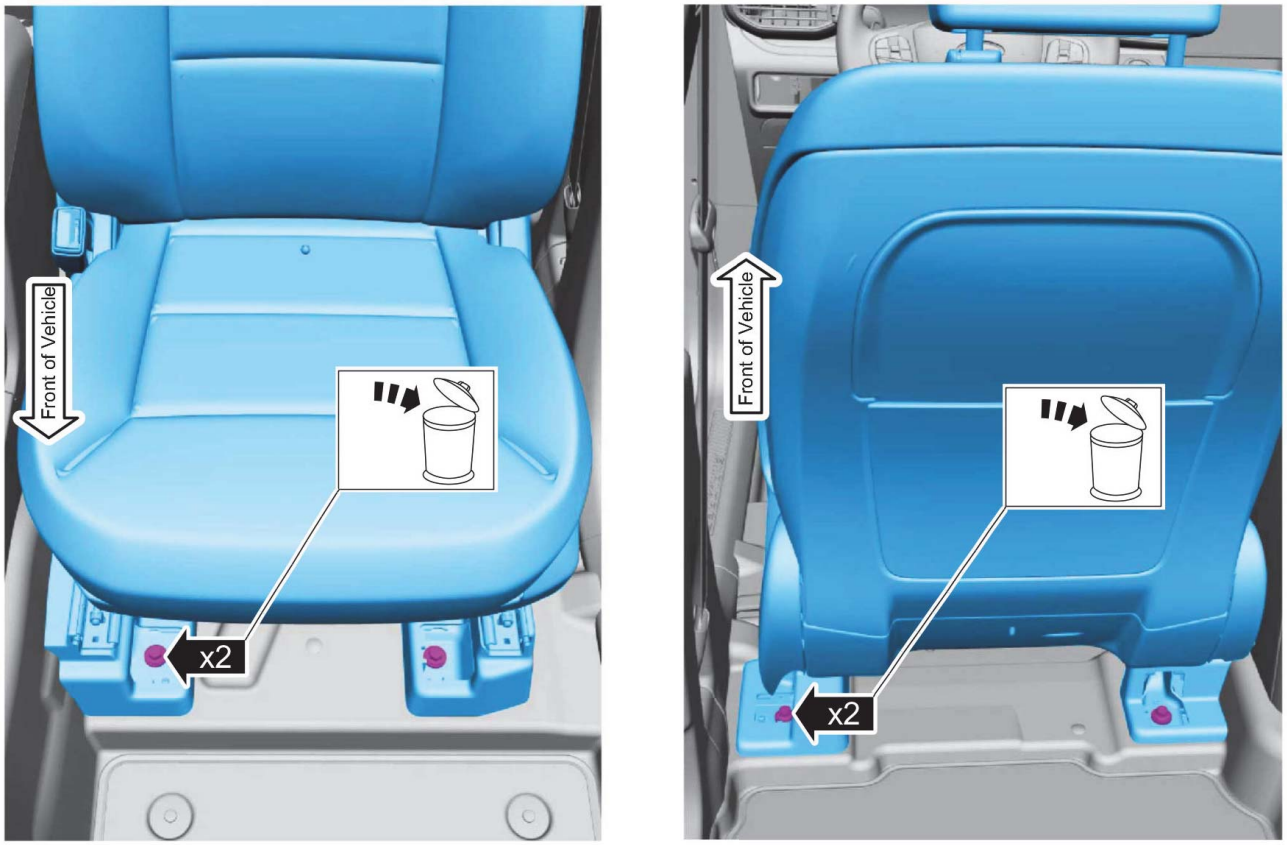

N0180476

NOTE:
If removed torque the bolts in the following sequence.

1. 35 lb.ft (47 Nm)
2. 35 lb.ft (47 Nm)
3. 35 lb.ft (47 Nm)
4. 35 lb.ft (47 Nm)

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

N0180477

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

Rear Outboard Seat

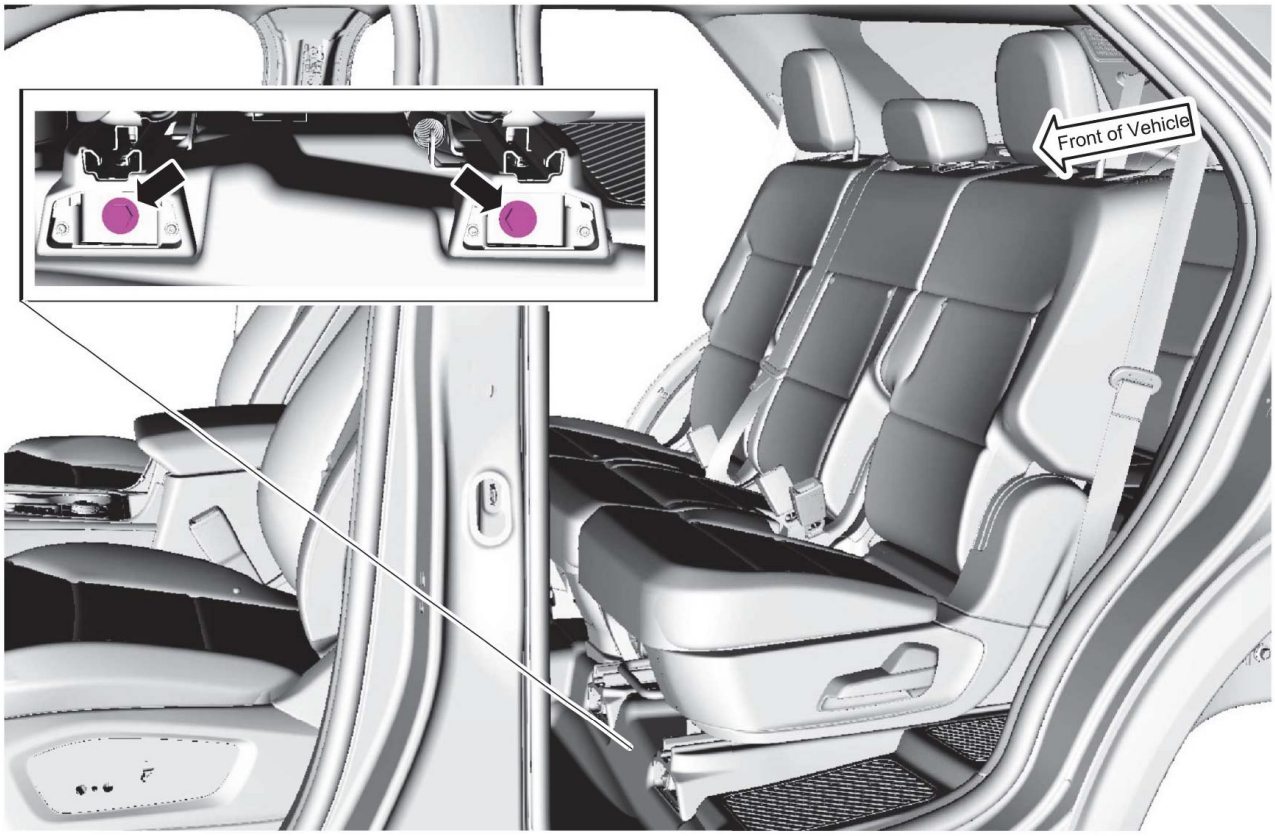

N0180478

If removed, torque to 33lb.ft (45 Nm)

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

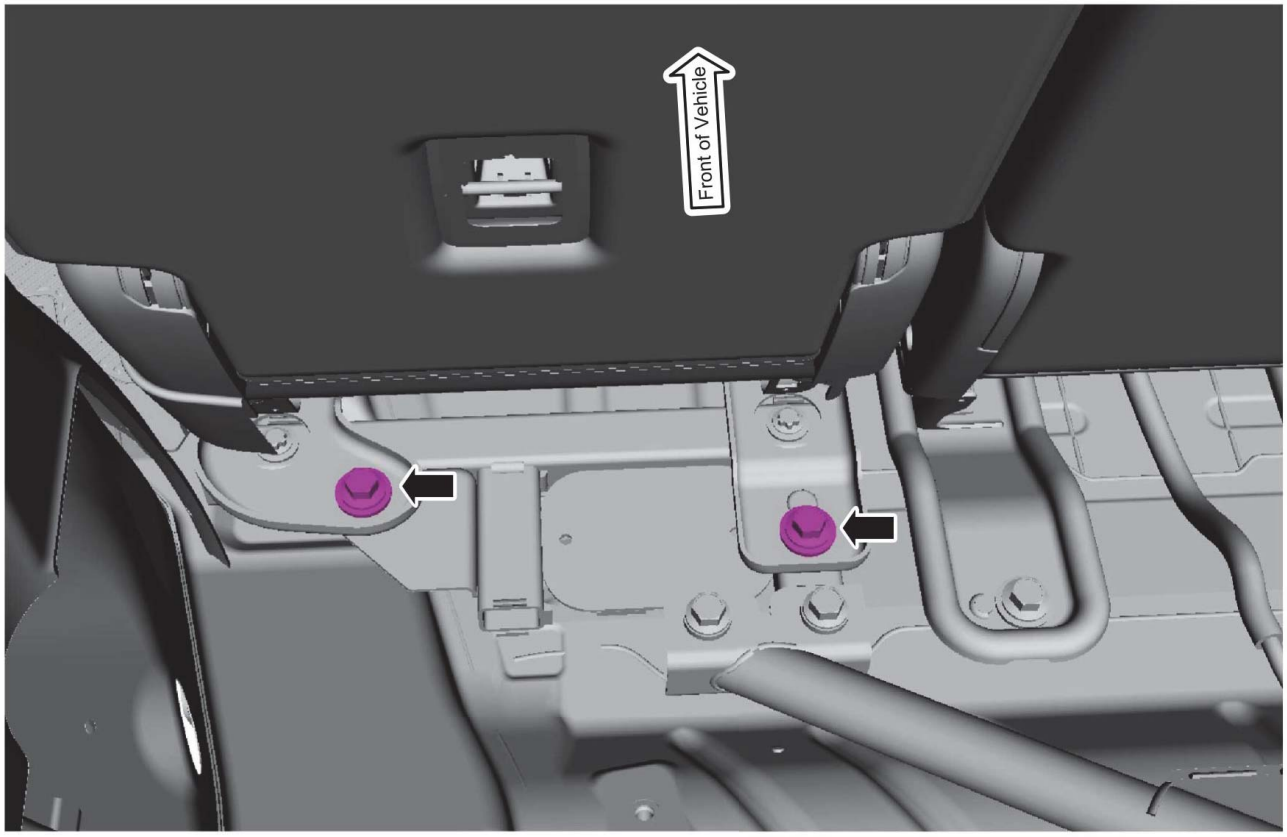

N0180479

If removed, torque to 33 lb.ft (45 Nm)

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

Rear Center Seat

N0180480

If removed, torque to 33lb.ft (45 Nm)

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

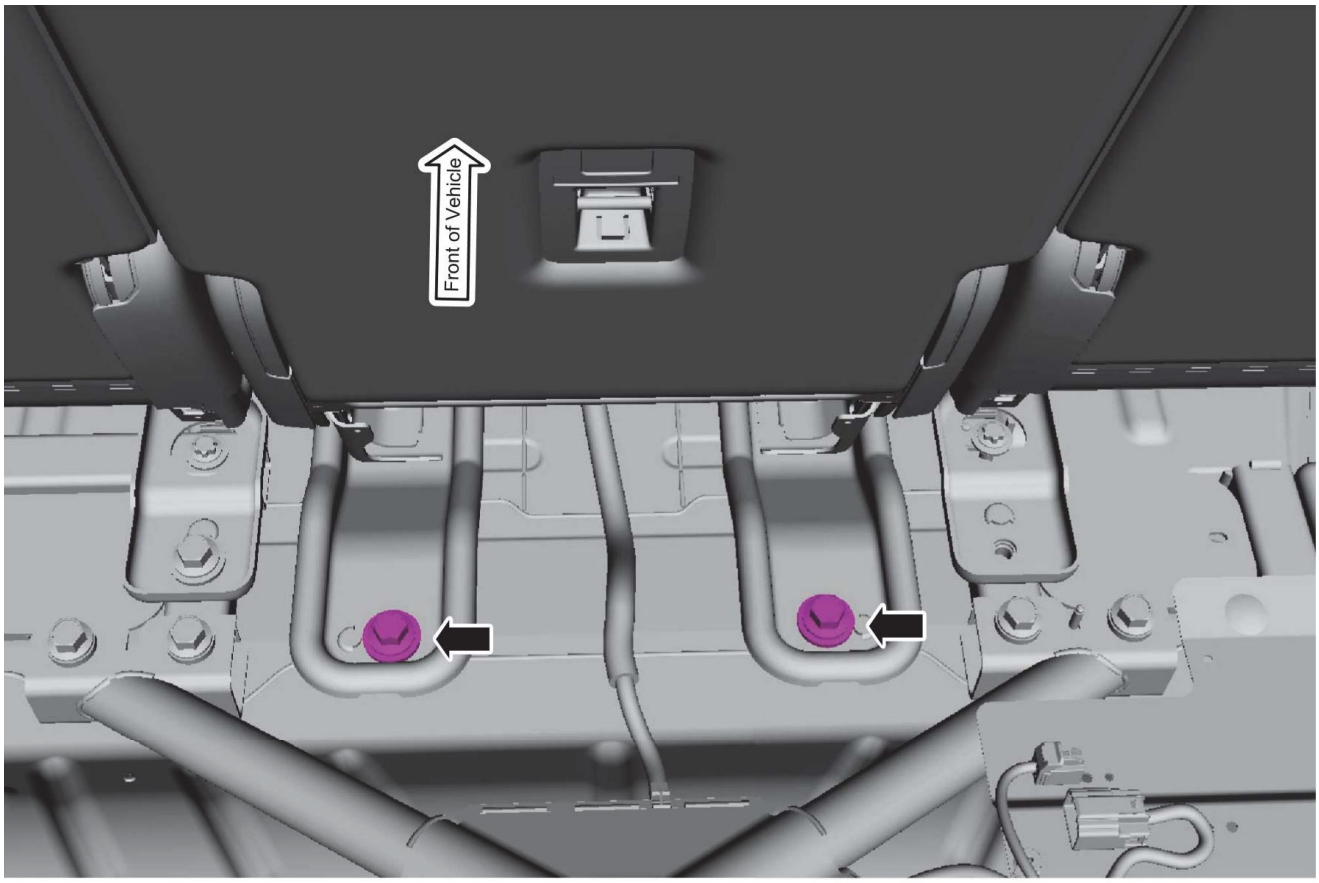

N0180481

If removed, torque to 33lb.ft (45 Nm)

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

Roof Bow Locations

TOP OF ROOF VIEW WITH FORWARD MOST ROOF BOW HIGHLIGHTED (DIMENSIONS)

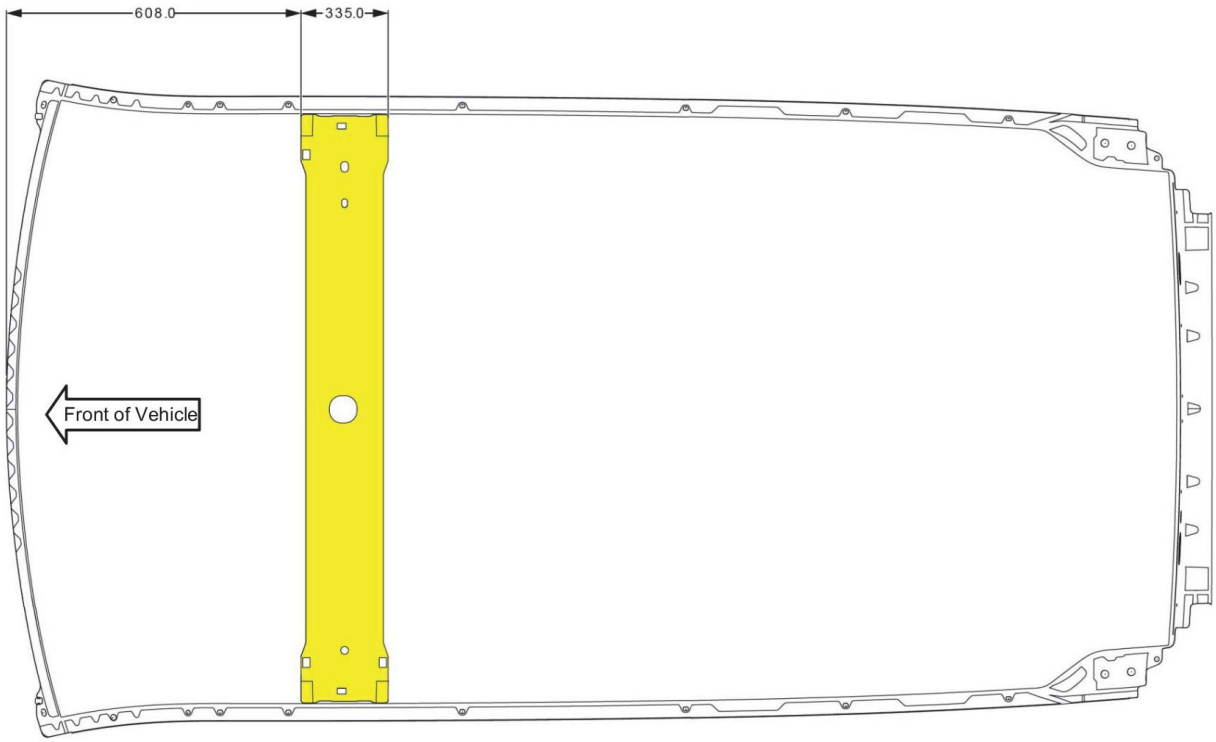

N0179842

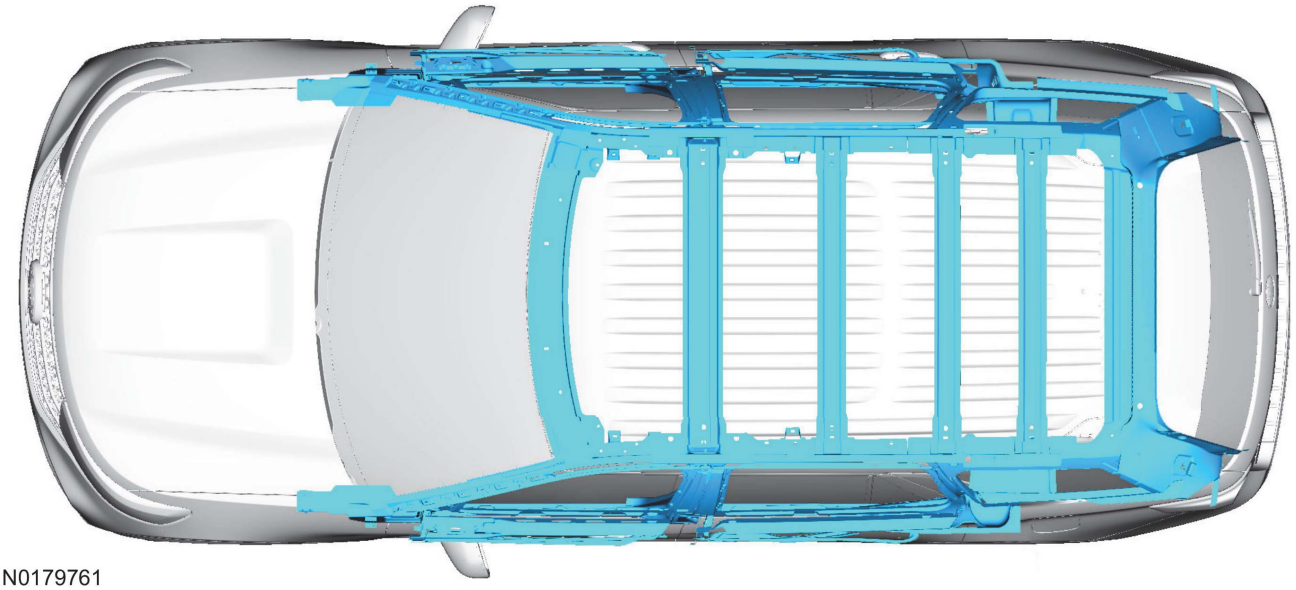

N0179761

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

Cargo Area View

Driver side of cargo area shown no fasteners should be attached to passenger side of cargo area also.

VIEW LOOKING FORWARD INTO REAR OF U625 DRIVER/PASSENGER SIDES TO HIGHLIGHT AREAS UPFITTERS ARE TO AVOID USING FASTENERS

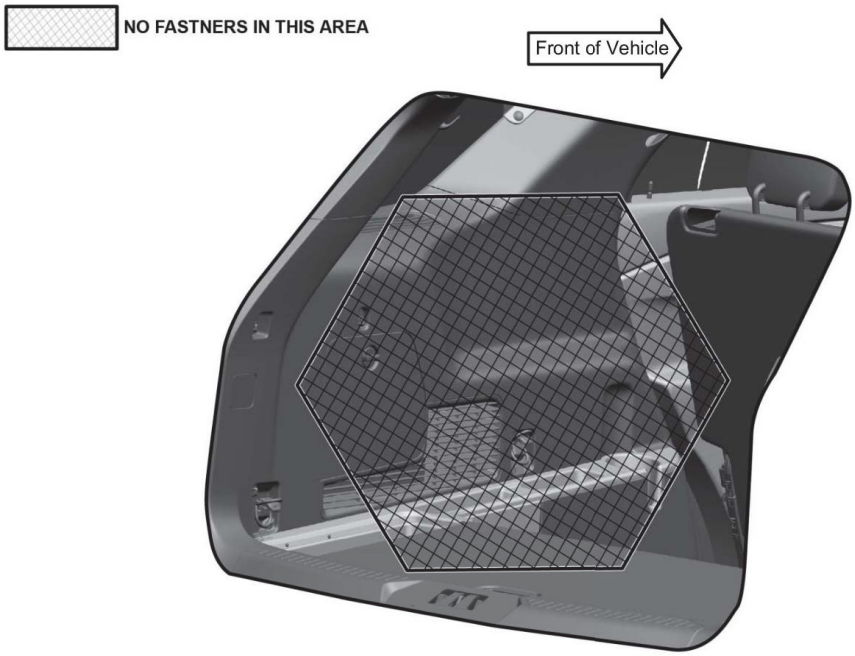

N0180482

Areas to Avoid When Choosing Mounting Locations

The following illustrations show locations to avoid when choosing components mounting locations, these locations include: High Voltage Components and Cables, Fuel System Components, Brake System Components, and Exhaust Components. To avoid personal injury or damage to vehicle systems avoid drilling or mounting of components in these areas.

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

High Voltage System Components

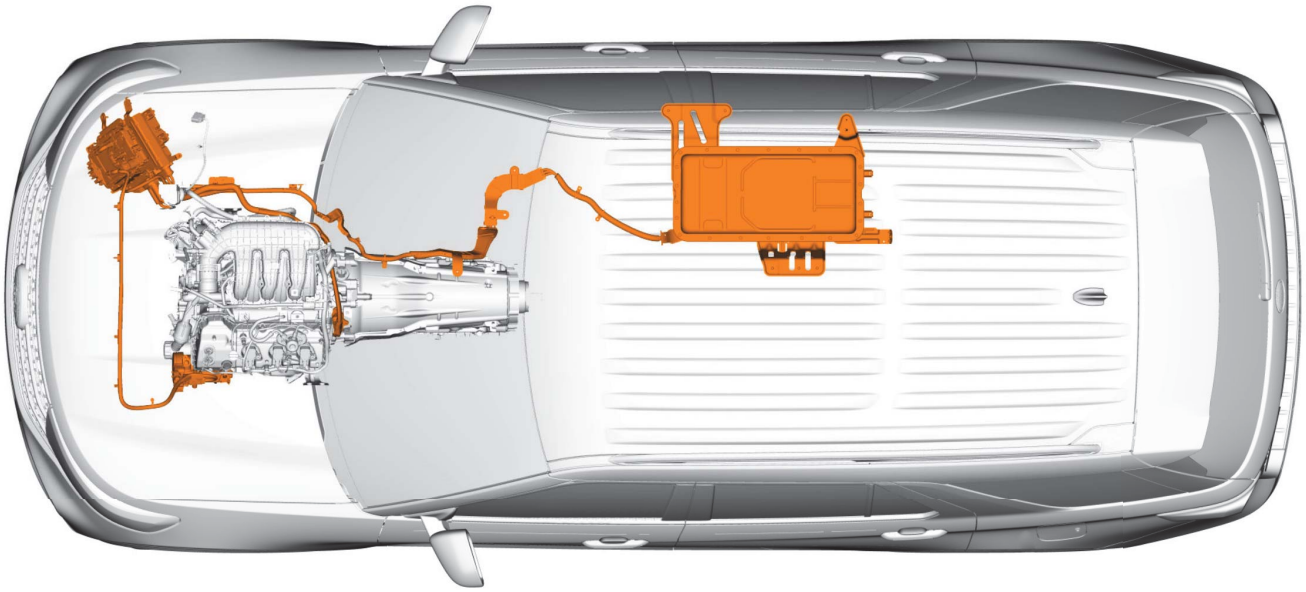

N0180458

Fuel System Components

FUEL SYSTEM COMPONENTS HIGHLIGHTED

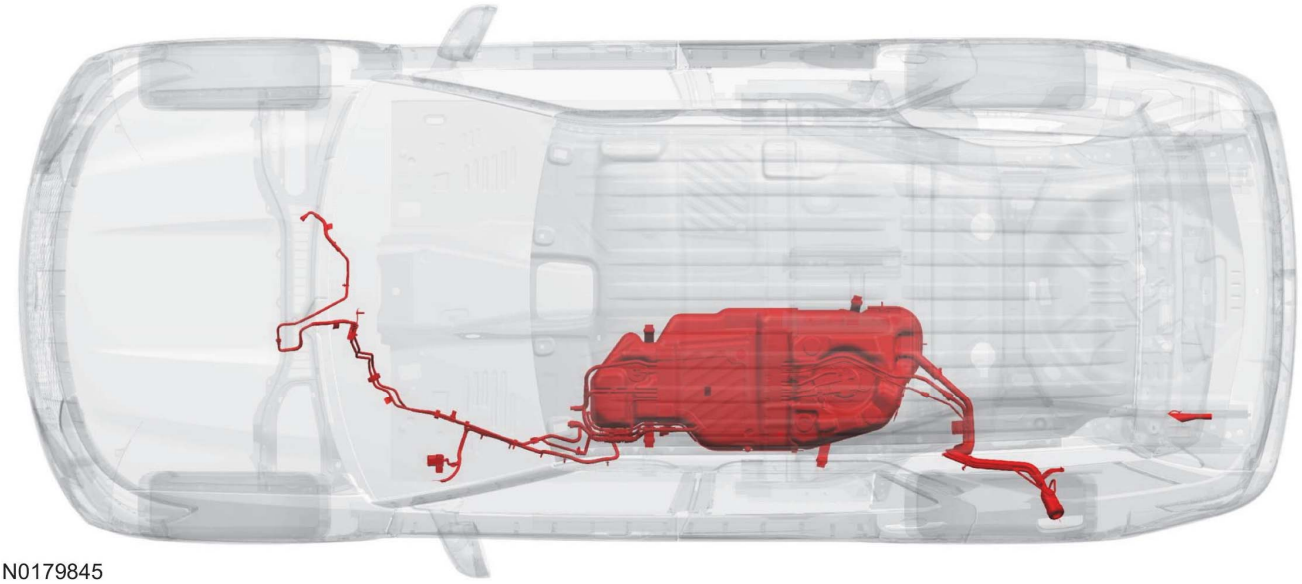

N0179845

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

Brake System Components

BRAKE SYSTEM COMPONENTS HIGHLIGHTED

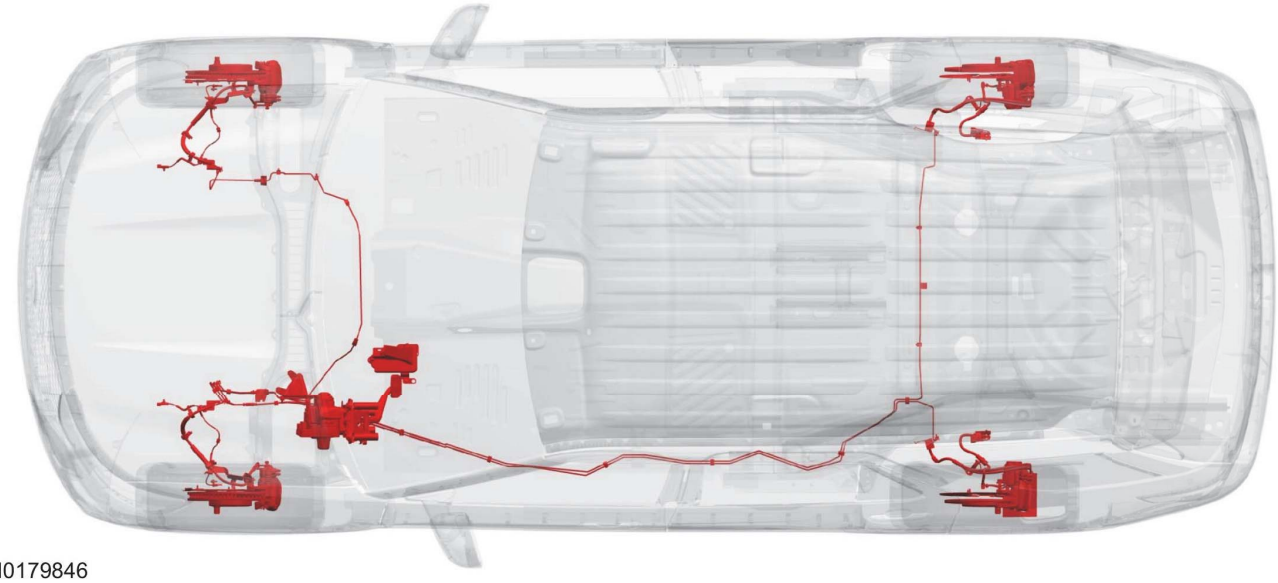

N0179846

Exhaust System Components

EXHAUST SYSTEM COMPONENTS HIGHLIGHTED

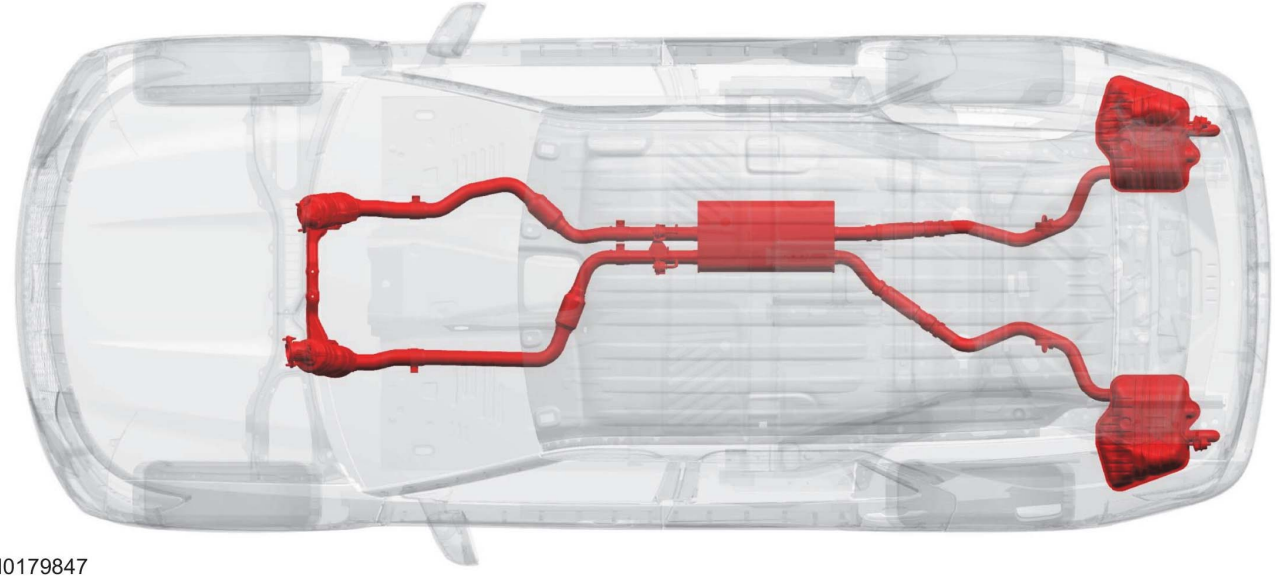

N0179847

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

Floor Drain

2nd row passenger side V-Drains are not feasible on the Police Interceptor Utility Hybrid due to the FHEV battery location.

Driver's Footwell

Measure 60 mm (2.4 inches) inboard and 26 mm (1 inch) forward of the front mounting stud of evaporator canister. Center the hole on flat between floor pan ribs, as seen in the images below. All holes should be drilled from the underside of the vehicle, starting with a small pilot hole, and then moving to the appropriately sized hole saw.

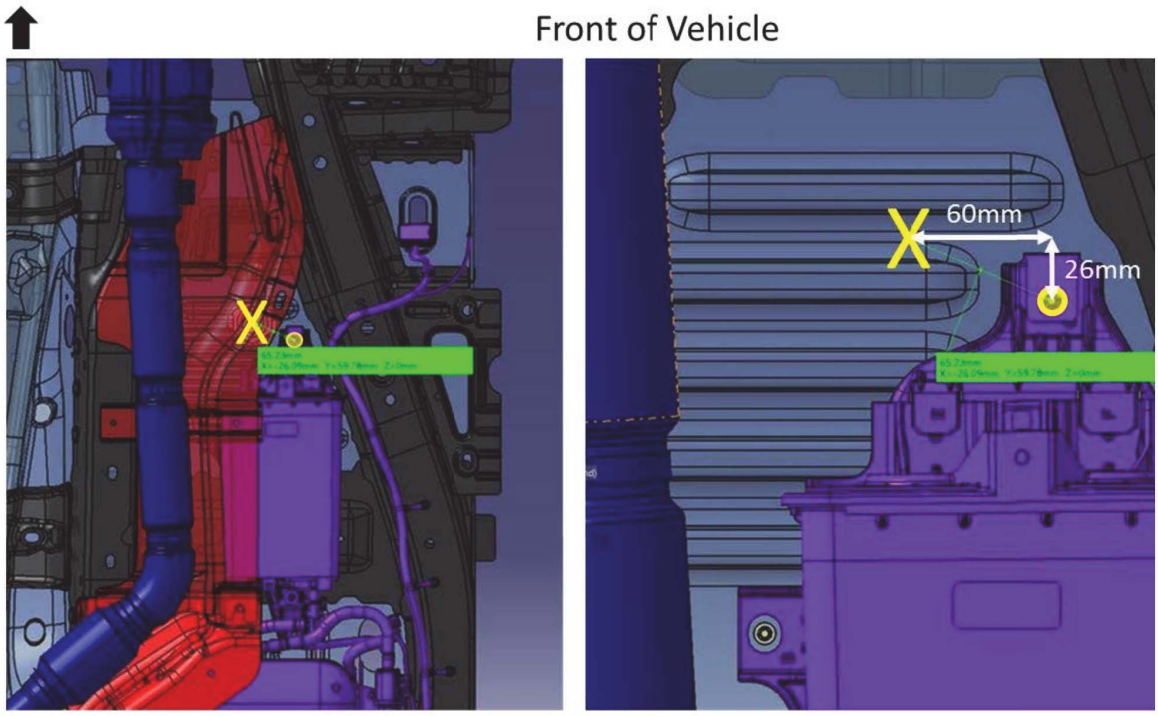

N0182537

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

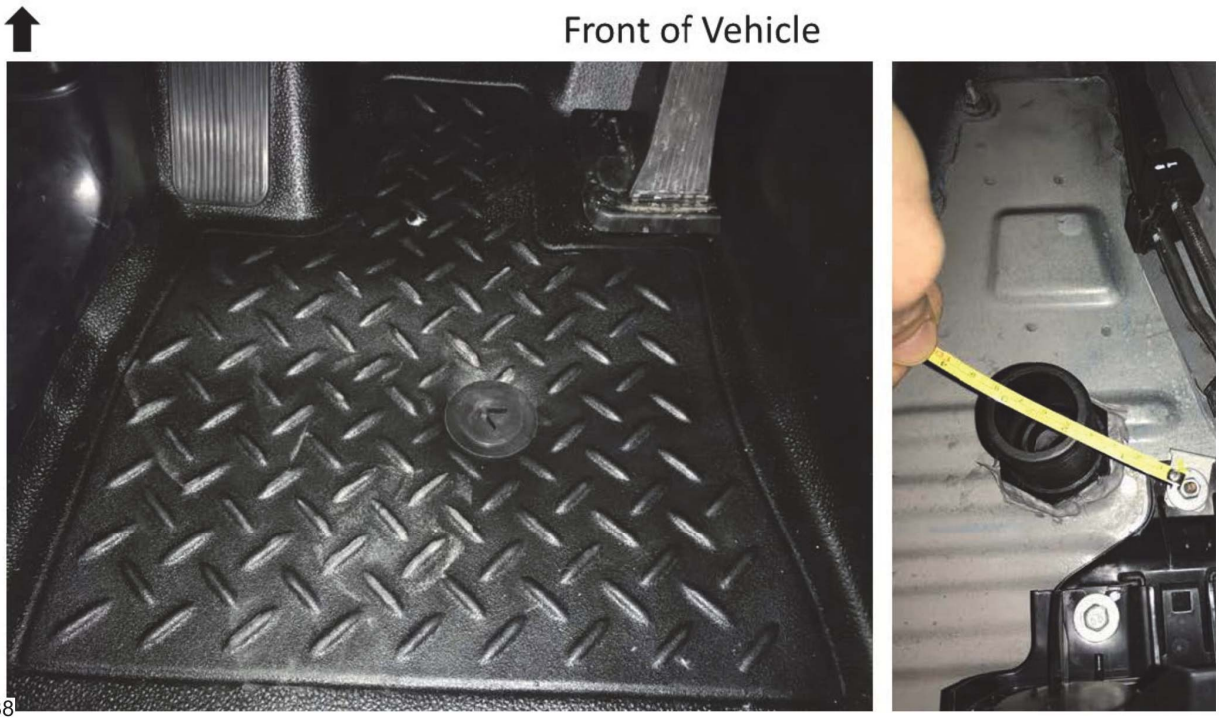

N0182538

2nd Row RHS Footwell (3.3L and 3.0L gas models ONLY)

Measure 139 mm (5.5 inches) outboard and 260 mm (10.2 inches) forward of the identified heat shield stud. Center the hole on flat between floor pan ribs, as seen in the images below. All holes should be drilled from the underside of the vehicle, starting with a small pilot hole, and then moving to the appropriately sized hole saw.

NOTE:
2nd row passenger side footwell drain not feasible on hybrid models due to FHEV battery location

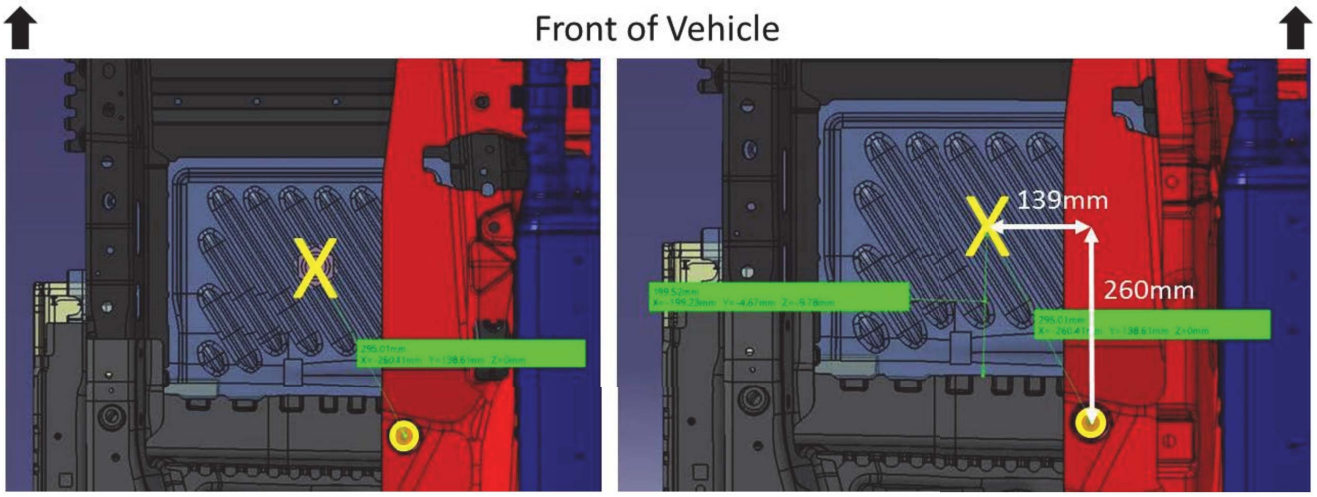

N0182539

 © Copyright Ford 2023 FoMoCo

Section 6: Mounting

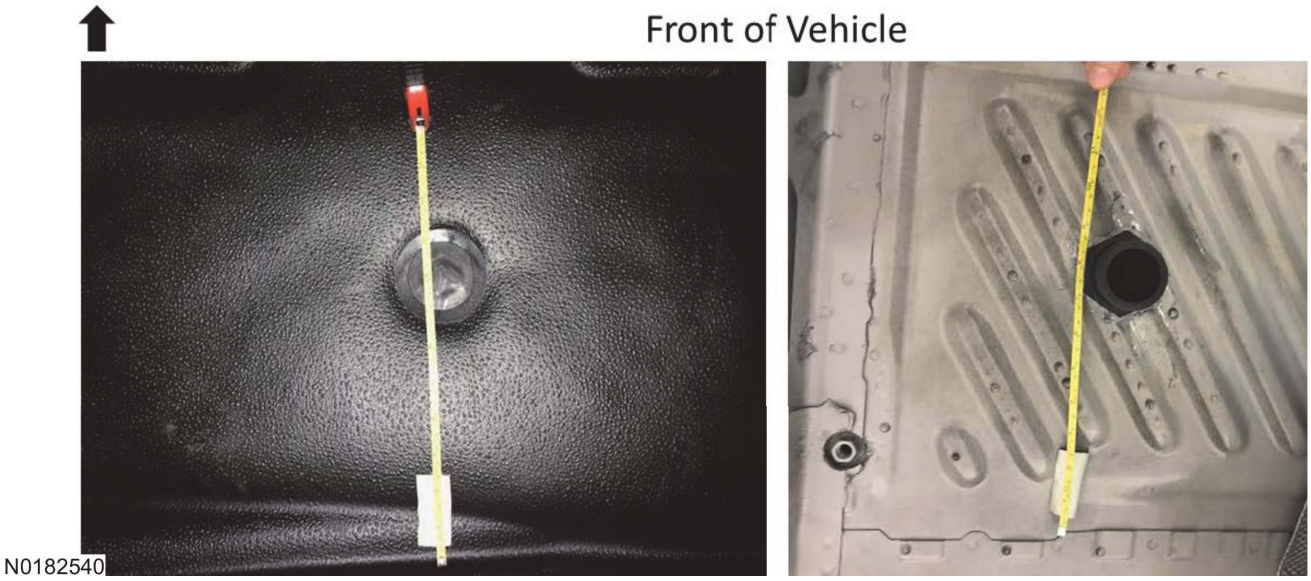

N0182540

 © Copyright Ford 2023 FoMoCo

Table of Contents

Contents **PAGE**

Section 7: Airbag Deployment Interference Zones 7-2
Airbag Deployment Interference Zones 7-2

 © Copyright Ford 2023 FoMoCo

Section 7: Airbag Deployment Interference Zones

Section 7: Airbag Deployment Interference Zones

Airbag Deployment Interference Zones

⚠ WARNING:
Do not place objects or mount equipment in front of the airbag module cover or in the front seat area; this is to avoid contact with a deploying airbag. Placing objects on or over the airbag inflation area may cause those objects to be propelled by the airbag. Failure to follow these instructions may result in severe personal injury or death.

⚠ WARNING:
Dash, tunnel or console-mounted equipment should be placed only within their specified zone. Failure to follow this instruction may result in severe personal injury or death.

⚠ WARNING:
Do not mount equipment between the side of the front seat and the door trim that would block deployment of the side airbag. Failure to follow this instruction may result in personal injury.

⚠ WARNING:
Do not attempt to service, repair or modify the airbag supplemental restraint systems (SRS) in any way. Failure to follow this instruction may result in severe personal injury. See your Ford or Lincoln dealer.

⚠ WARNING:
Modifications to the front end of the vehicle, including frame, bumper, front end body structure, tow hooks and B-pillar surrounding parts may affect the performance of the airbag sensors, increasing the risk of injury. Do not modify the front end of the vehicle. Failure to follow these instructions may result in severe personal injury or death.

⚠ WARNING:
Do not place objects or mount equipment on or near the headliner at the siderail that may come into contact with a deploying safety canopy. Failure to follow this instruction may increase the risk of personal injury in the event of a collision.

⚠ WARNING:
Do not attempt to service, repair or modify the Safety Canopy® System, its fuses, the A, B, C, or D-pillar trim, or the headliner on a vehicle containing a Safety Canopy® System. See your Ford or Lincoln dealer. Failure to follow these instructions may result in personal injury.

NOTICE:
The side impact sensors are tuned to excite based on their mass (including wiring), as well as the host sheet metal. Any alteration to these components must be avoided. Additions, such as padding, wire connectors, retainers, tape or fasteners of any kind should not be used. All fasteners in this predominantly sheet metal environment should be made of steel or a non-conductive plastic to guarantee retention and longevity. If any part of a steel fastener is exposed to a wet area, it should be plated to resist corrosion.

Driver/passenger airbags affect the way equipment can be mounted in vehicles. Any surface that could come into contact with an airbag during deployment must not damage the airbag or alter its deployment path. Sharp edges, corners or protrusions could damage the nylon airbag material and reduce the effectiveness of the airbag. Do not mount or place any objects in the deployment path of an airbag. Airbags must be allowed to fully deploy without restriction. The deployment of airbags is not compatible with any configuration of equipment mounting that places objects in the airbag deployment path. Equipment mounted or placed in the deployment area of an airbag will reduce the effectiveness of the airbag, damage the airbag and potentially damage or dislodge the equipment.

Some approximate dimensions for airbags, at full inflation, are provided. These dimensions are somewhat flexible and represent free-form deployments without the loading of occupants. The zone dimensions provided are approximate and will vary with the loading of occupants in the seats.

All airbag and equipment mounting zone dimensions are approximate due to different airbag deployment characteristics.

Do not mount equipment between the side of the front seat and the door trim that would block deployment of the side airbag.

 © Copyright Ford 2023 FoMoCo

Section 7: Airbag Deployment Interference Zones

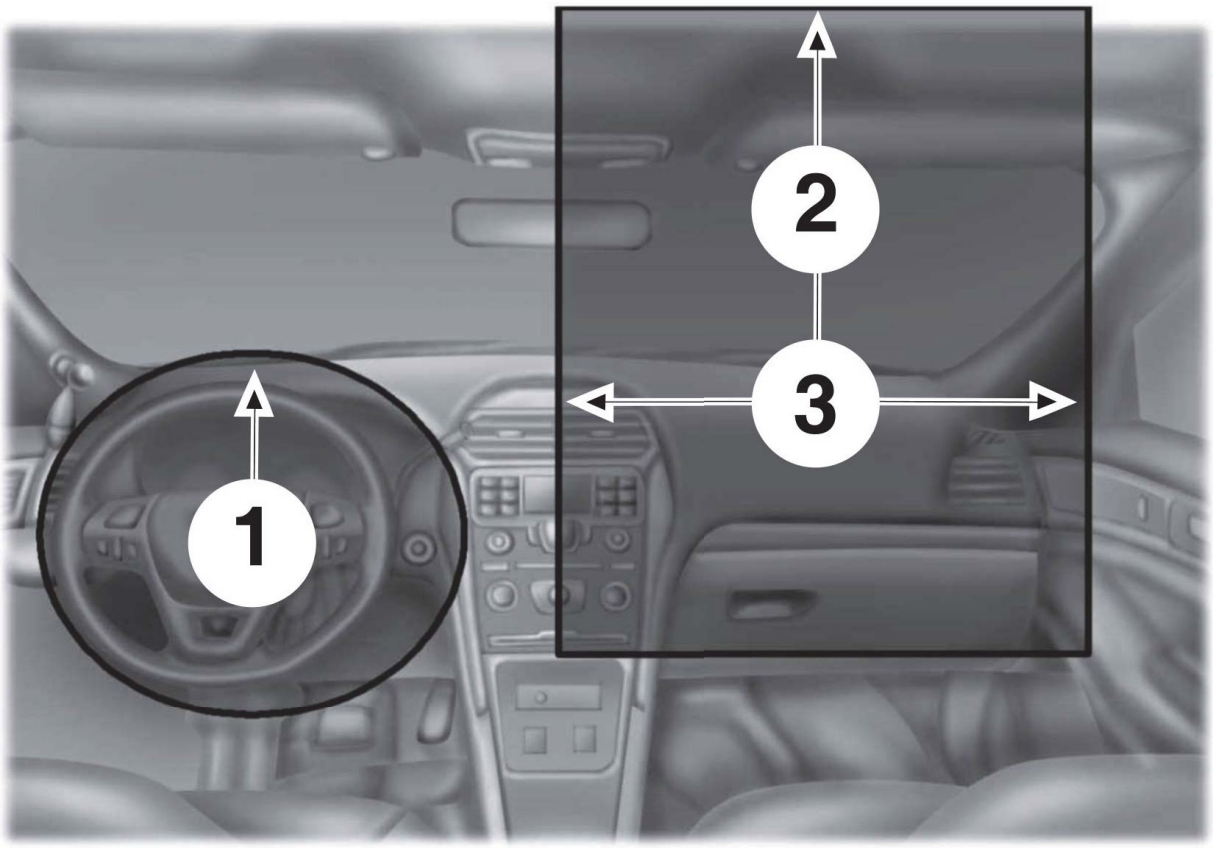

N0179716

NOTE:
Do not mount equipment on the instrument panel between the driver and passenger airbags due to deployment variability.

1. 240 mm (9.5 in) from center of emblem.
2. 350 mm (13.8 in) from center of airbag door
3. 720 mm (28.3 in)

 © Copyright Ford 2023 FoMoCo

Section 7: Airbag Deployment Interference Zones

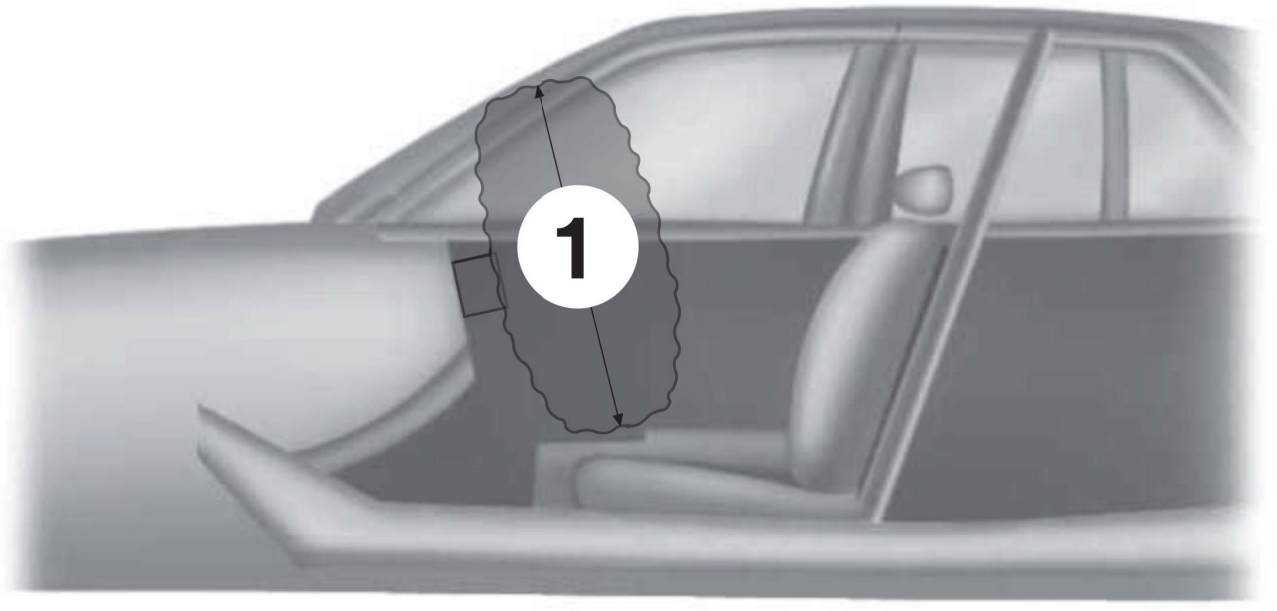

N0179718

1. 700 mm (27.5 in)

 © Copyright Ford 2023 FoMoCo

Section 7: Airbag Deployment Interference Zones

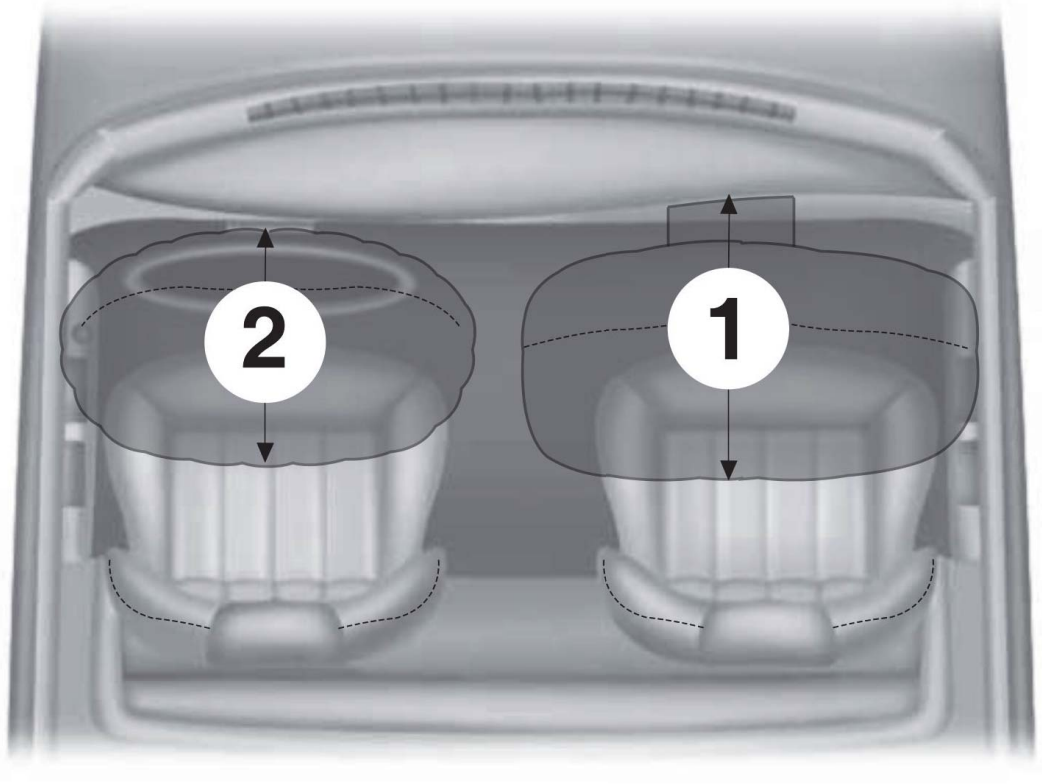

N0179719

1. 580 mm (22.8 in) Front passenger airbag.
2. 430 mm (17 in) Front driver airbag.

 © Copyright Ford 2023 FoMoCo

Section 7: Airbag Deployment Interference Zones

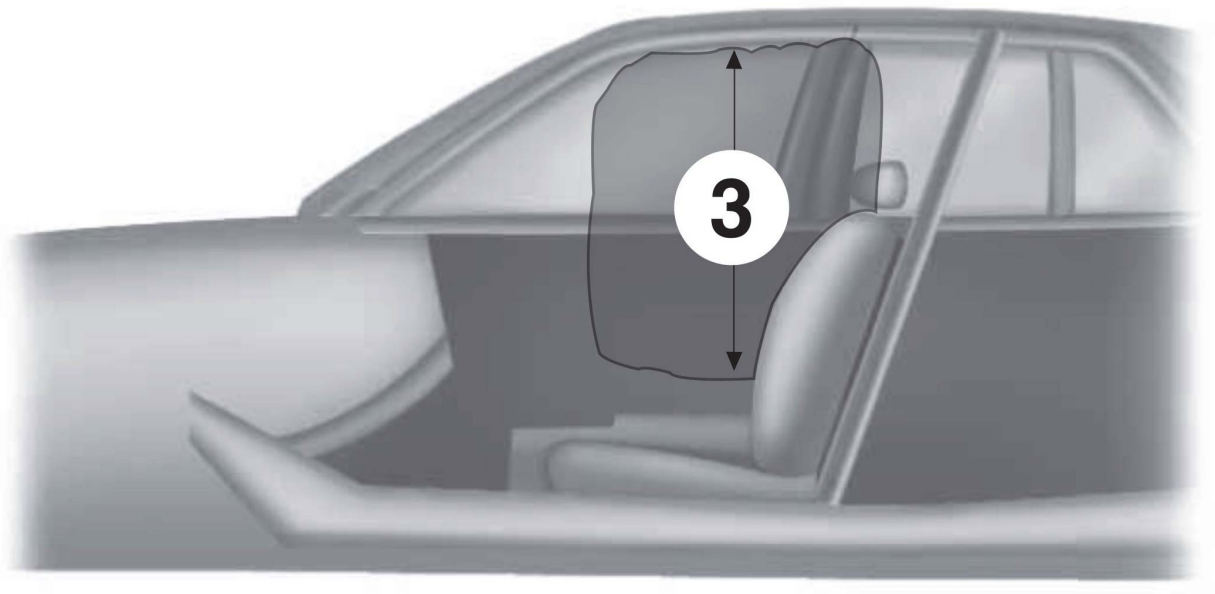

N0179721

3. 700 mm (27.5 in) Up from side airbag module

 © Copyright Ford 2023 FoMoCo

Section 7: Airbag Deployment Interference Zones

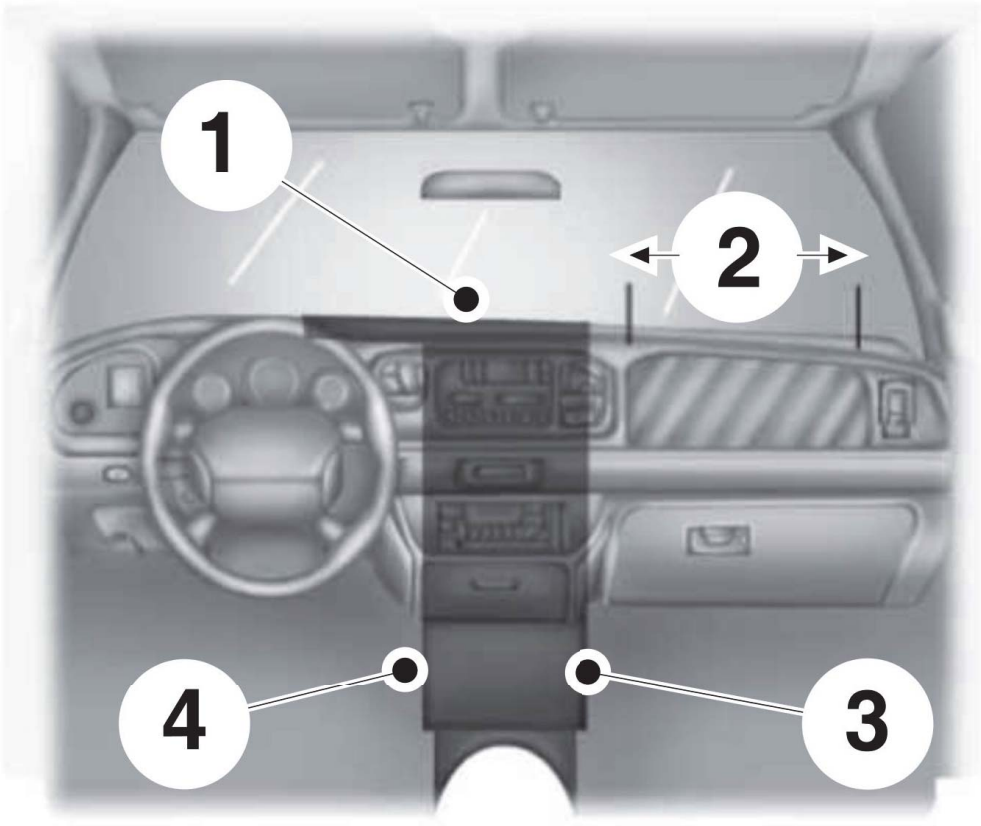

N0179722

1. Area on top of the instrument panel.

NOTE:
Equipment must not interfere with driver visibility.

2. Airbag door must be kept clear for deployment of the airbag.
3. Area in front of the center console from the bottom to the top of the instrument panel.
4. Area in front of electronic finish panel from the bottom to the top of the instrument panel.

 © Copyright Ford 2023 FoMoCo

Section 7: Airbag Deployment Interference Zones

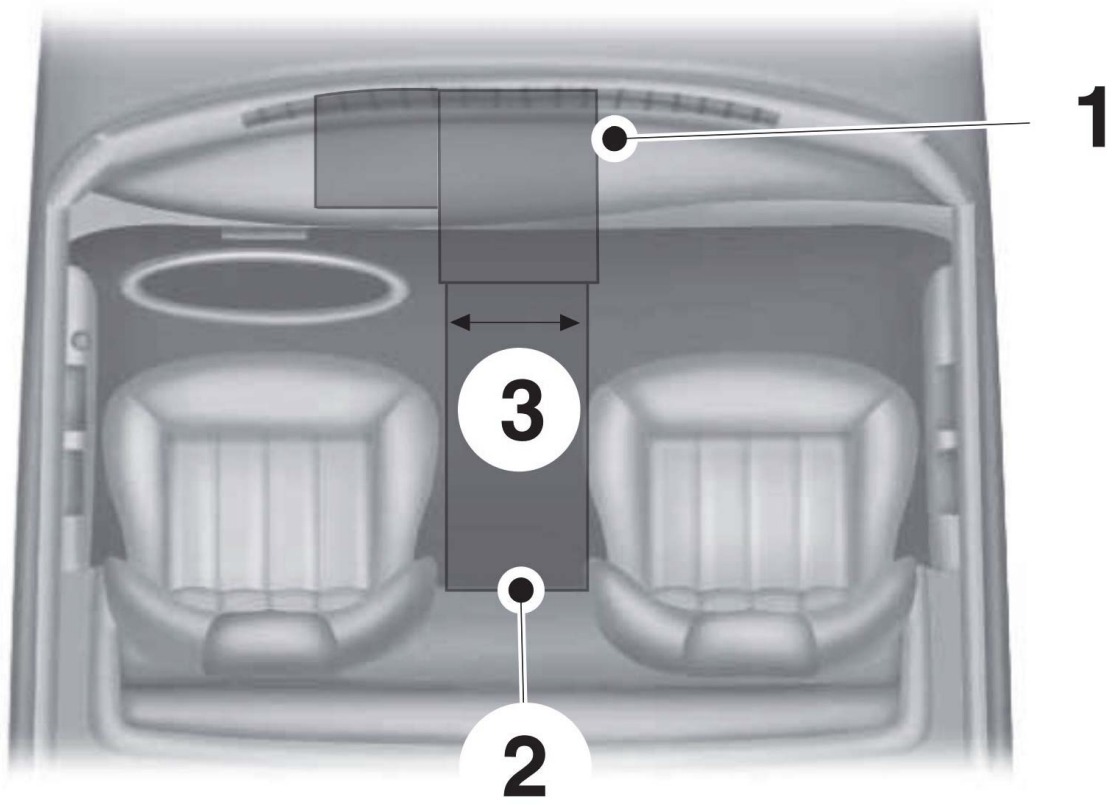

N0179723

1. Area on top of the instrument panel.

NOTE:
Equipment must not interfere with driver visibility.

2. Area on tunnel between seats.

3. 229 mm (9 in)

 © Copyright Ford 2023 FoMoCo

Section 7: Airbag Deployment Interference Zones

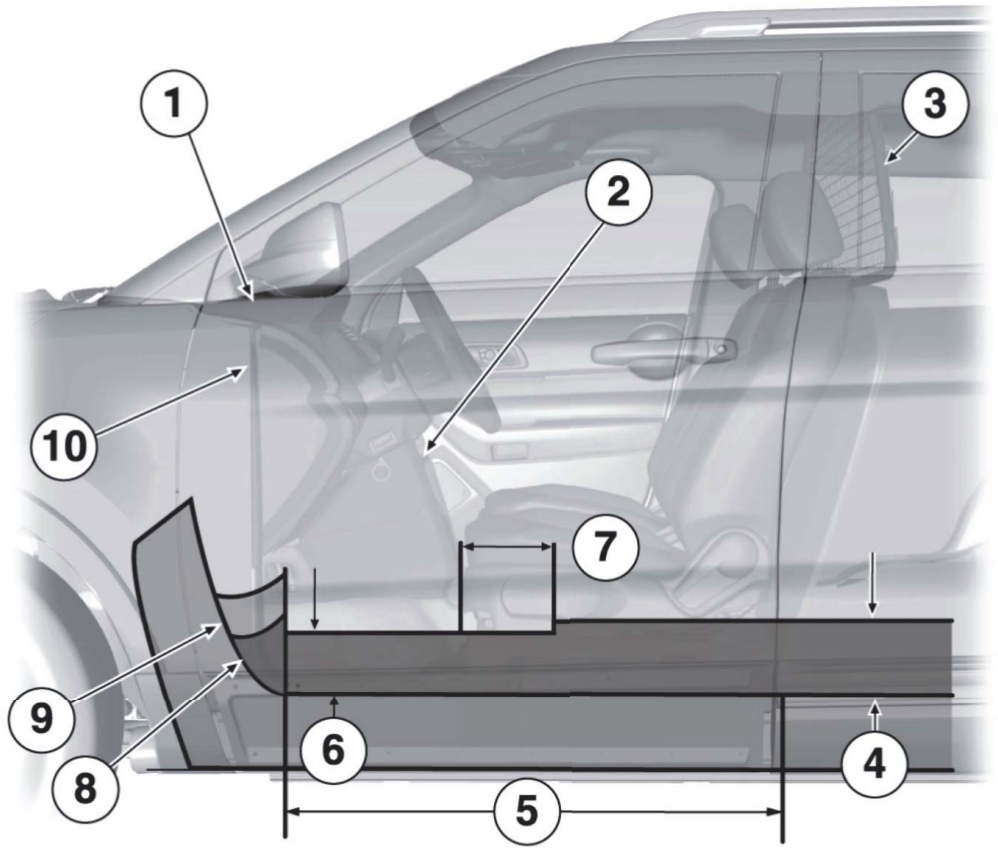

N0179724

1. Area on top of instrument panel.
2. Area in front of center console from tunnel up to instrument panel.
3. Prisoner screen (reference only).
4. 254 mm (10 in)
5. Area on tunnel between seats.
6. Height: 216 mm (8.5 in)
7. 305 mm (12 in).
8. Area on tunnel beneath center console.
9. Tunnel.
10. 38 mm (1.5 in).

 © Copyright Ford 2023 FoMoCo

Section 7: Airbag Deployment Interference Zones

N0179736

The side airbags are located on the outboard side of the seatbacks of the front seats. In certain sideways crashes, the airbag on the side affected by the crash will be inflated. The airbag was designed to inflate between the door panel and occupant to further enhance the protection provided occupants in side impact crashes.

The Safety Canopy will deploy during significant side crashes or when a certain likelihood of a rollover event is detected by the rollover sensor. The Safety Canopy is mounted to the roof side-rail sheet metal, behind the headliner, above each row of seats. The Safety Canopy curtain airbags above the trim panels over the front and rear side windows identified by a label or wording on the headliner or roof pillar trim. In certain sideways crashes or rollover events, the Safety Canopy will be activated, regardless of which seats are occupied. The Safety Canopy is designed to inflate between the side window area and occupants to further enhance protection provided in side impact crashes and rollover events.

 © Copyright Ford 2023 FoMoCo

Section 7: Airbag Deployment Interference Zones

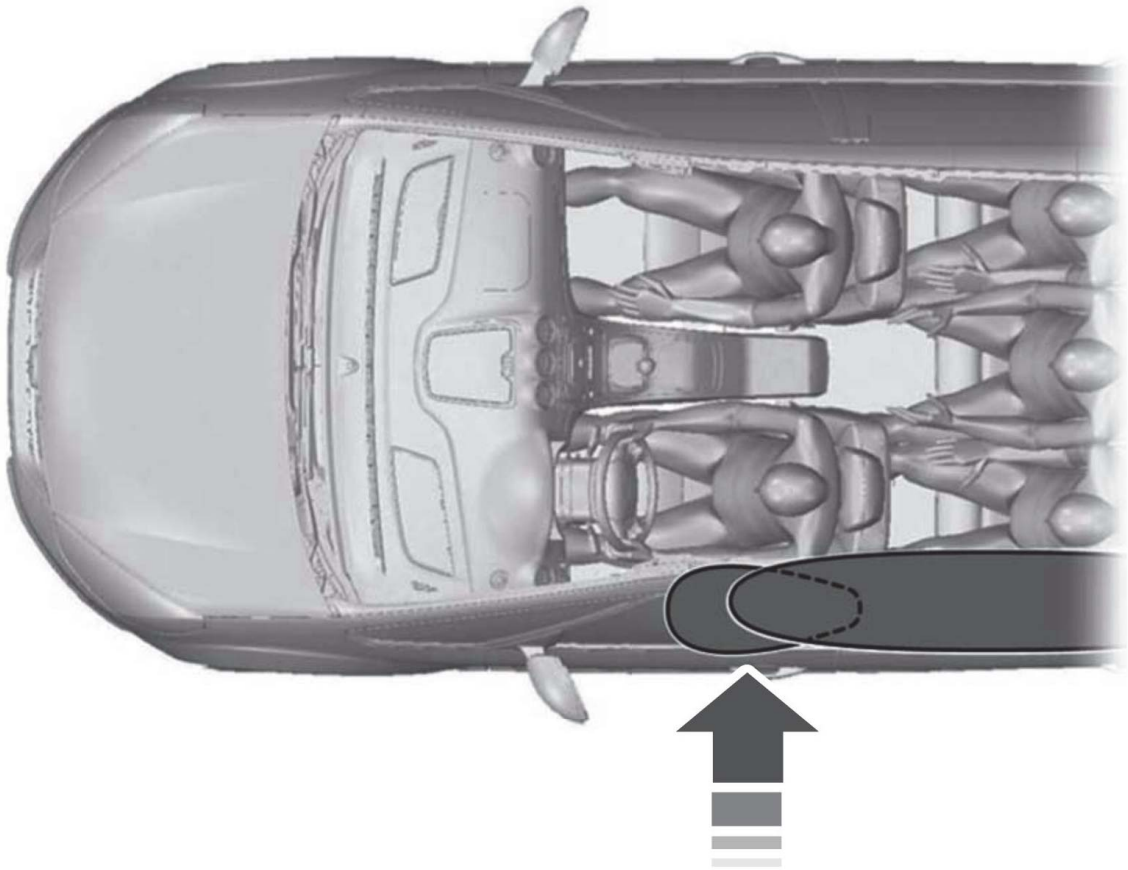

N0179717

 © Copyright Ford 2023 FoMoCo

Section 7: Airbag Deployment Interference Zones

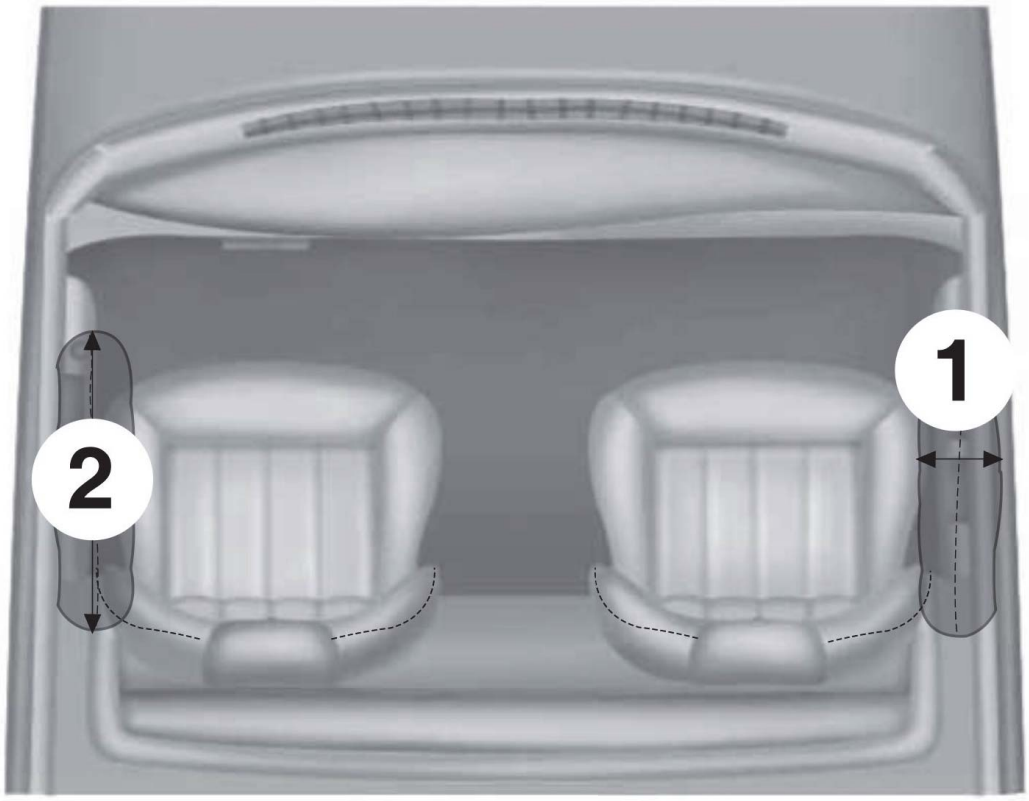

N0179720

1. 200 mm (8 in) From outboard side of seat.
2. 380 mm (15 in) Forward of seatback.

N0179839

1. 75mm (6 in) from pillar trim (A through D)

 © Copyright Ford 2023 FoMoCo

Section 7: Airbag Deployment Interference Zones

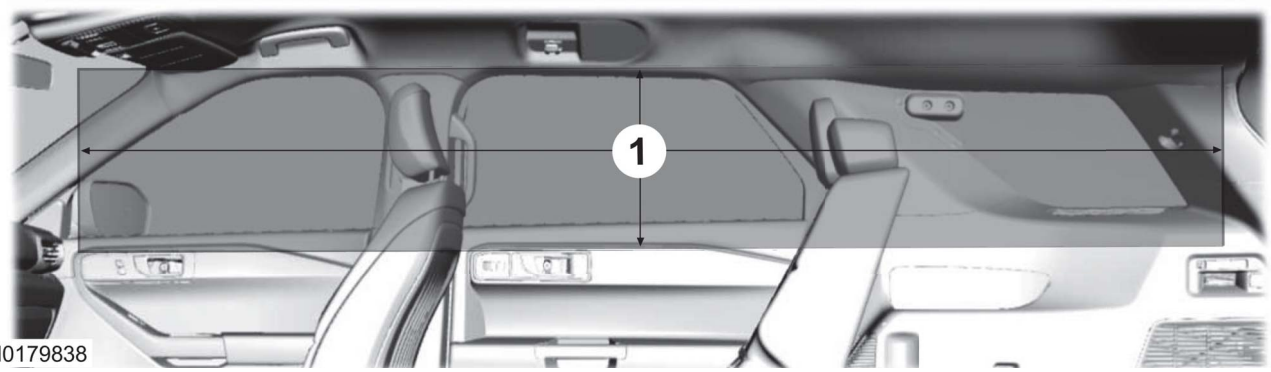

1. Roof rail to 25mm (1 in) below window sill.

NOTICE:
Any surfaces that could come into contact with side air curtain (Safety Canopy® System) during deployment must not damage the curtain. Sharp edges, corners or protrusions could damage the curtain and reduce the overall effectiveness of the side air curtain.

NOTICE:
The side impact sensors are tuned to excite based on their mass (including wiring), as well as the host sheet metal. Any alteration to these components must be avoided. Additions, such as padding, wire connectors, retainers, tape or fasteners of any kind should not be used. All fasteners in this predominantly sheet metal environment should be made of steel or a non-conductive plastic to guarantee retention and longevity. If any part of a steel fastener is exposed to a wet area, it should be plated to resist corrosion.

- Do not mount equipment to the A, B, C and D-pillars.
- Do not mount equipment on the headliner within 200 mm (8 in) of the side edges.
- Do not mount equipment above the beltline within 200 mm (8 in) of the side glass from the A-pillar leading edge to the rear edge of the D-pillar.
- Do not mount equipment on the headliner along the siderails.

 © Copyright Ford 2023 FoMoCo